




# **ExSwitch-P** Ex-d auxilliary switch, retrofit


2 potential free contacts, adjustable on site, adaptable to **ExPlus** linear actuators


| Туре       | Technical data  | Installation area |
|------------|---|-------------------|
| ExSwitch-P | Explosion proof, auxilliary switch with 2 adjustable contacts, potential free | Zone 1, 2, 21, 22 |
| CT         | Housing in "Amercoat" marine painting   |                   |


#### **Product views**

### ExSwitch-P

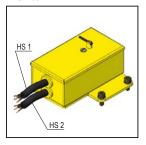

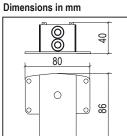

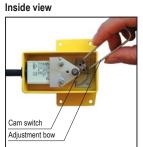

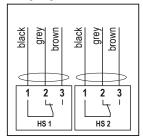

Wiring diagram



#### Description

ExSwitch-P are adaptable auxilliary switches for use in hazardous areas for end and interim position indication.

ExSwitch-P have 2 potential free contacts installed in a housing which can be fitted directly to ExPlus linear actuators. Both contacts are adjustable. Adjustment during operation is

ExSwitch-P are delivered with a cable of approx. 1 m. For electrical connection inside hazardous areas, a special Ex-e terminal box is required (see accessories ExBox).

### Mounting and adjustment

- 1. Put the mechnical linkage into the squared connection of the actuator.
- 2. Mount the ExSwitch-P to the actuator and fix it with the 4 screws.
- 3. Wire the actuator (Ex-e terminal box required!).
- 4. Drive actuator to lower end position.
- 5. Open the ExSwitch-P and adjust each switch with the adjustment bow. You have to open the screw to turn the cam switch, afterwards tighten the screw.
- 6. Make a mechanical check that the switches are working in the required position.
- 7. Lock the enclosure.

**Explosion proof** 

|                       | IBExU 01 ATEX 1007 X       |                            |
|-----------------------|----------------------------|----------------------------|
| Use in zone 1 and 2   | II2G Ex d IIC T6           | for gas, mists and vapours |
| Use in zone 21 and 22 | II2D IP66 T80°C            | for dust                   |
| IP protection switch  | IP66 in acc. with EN 60529 |                            |
| IP protection housing | IP43 in acc. with EN 60529 |                            |
|                       |                            |                            |


PTB 00 ATEX 1093 X


## **Technical data**


| Adaption to actuator    | direct mounting to the actuator                           |  |
|-------------------------|---|--|
| Function                | 2 explosion proof auxilliary switches with potential free |  |
|                         | contacts  |  |
| Max. current AC/DC      | 24 VAC/DC, 3 A - 240 VAC, 0,5 A                           |  |
|                         | min. 5 V, 4 mA  |  |
| Mechanical life         | 2 × 10 <sup>6</sup> switch cycles                         |  |
| Cable connection        | 1 cable for each switch, approx. 1 m cable length,        |  |
|                         | 3 × 0,75 mm², cable diameter ~ Ø 7,2 mm                   |  |
| Ambient temperature     | −50+60 °C   |  |
| Accuracy                | < 5°  |  |
| Switch hysteresis       | approx. 5 %   |  |
| Housing material        | Steel, painted  |  |
| Housing material Switch | Plastic, Thermoplast                                      |  |
| Material Switch         | Changeover contacts silver, gold-plated                   |  |
| Delivery                | 1 housing with 2 integral Ex-d switches inclusive         |  |
|                         | squared connection (mechanical linkage to ExPlus          |  |
|                         | linear actuators), 4 screws, 1 adjustment bow for         |  |
|                         | adjustment of switching position, position indicator      |  |

# Settings depending on position of lifting rod

| Drive shaft rotates clockwise (switch area L):        |   |  |
|---|---|--|
| HS 1 (top)  | - switches from 1-2 to 1-3                            |  |
| HS 2 (bottom)   | - switches from 1-3 to 1-2                            |  |
| Drive shaft rotates counterclockwise (switch area R): |   |  |
| HS 1 (top)  | - switches from 1-3 to 1-2                            |  |
| HS 2 (bottom)   | - switches from 1-2 to 1-3                            |  |
|   | HS 1 (top) HS 2 (bottom) Drive shaft rotat HS 1 (top) |  |

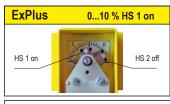

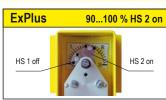

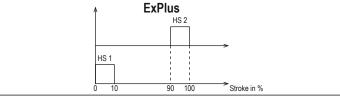

### **Accessories**

ExBox-SW Terminal box Ex-e

Subject to change!

Schischek GmbH Germany, Mühlsteig 45, Gewerbegebiet Süd 5, 90579 Langenzenn, Tel. +49 (0)9101 9081-0, Fax +49 (0)9101 9081-77, E-Mail info-de@schischek.com