




Manual override of ExRun, RedRun and InRun actuators size S

Type	Description	Picture
HV-R	Manual override long for mounting on ...Run valve actuator size S and using external auxilliary switches ExSwitch/RedSwitch/InSwitch	B1.1

Description

HV-R	B1.1	Mounting on valve actuator			Turn switch valve actuator
					

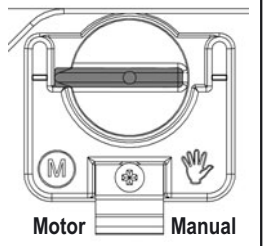

Attention

1. Turn the switch from motor in manual mode!
2. Turn the wheel in manual mode only!
3. In motor mode turn back to motor!

Installation / Description

1. The manual override handwheel has to be mounted on the actuator by 2 screws included in the delivery.
Hereby, attention must be paid that the hexagonal spike of the manual override locks exactly into the hexagonal hole in the actuator.

Function

Above written parts must be done:

Turn the switch for manual override on the actuator to manual (hand) mode.

Turn wheel clockwise rod goes in

Turn wheel counter clockwise rod goes out

The manual adjustment wheel may not be turned beyond the highest or lowest mechanical end stop. This would destroy the actuator.

Attention: If the motor should running the switch must be turned back to motor mode.
Note the motor should not work!

Technical data

Type	HV-R
Compatible to actuator types	ExRun, RedRun and InRun size S
Delivery	1 manual override , 2 mounting screws

Dimensions

