


SPARE PARTS LIST FOR IS RANGE OF SPUR GEAR ACTUATORS IS8 TO IS20

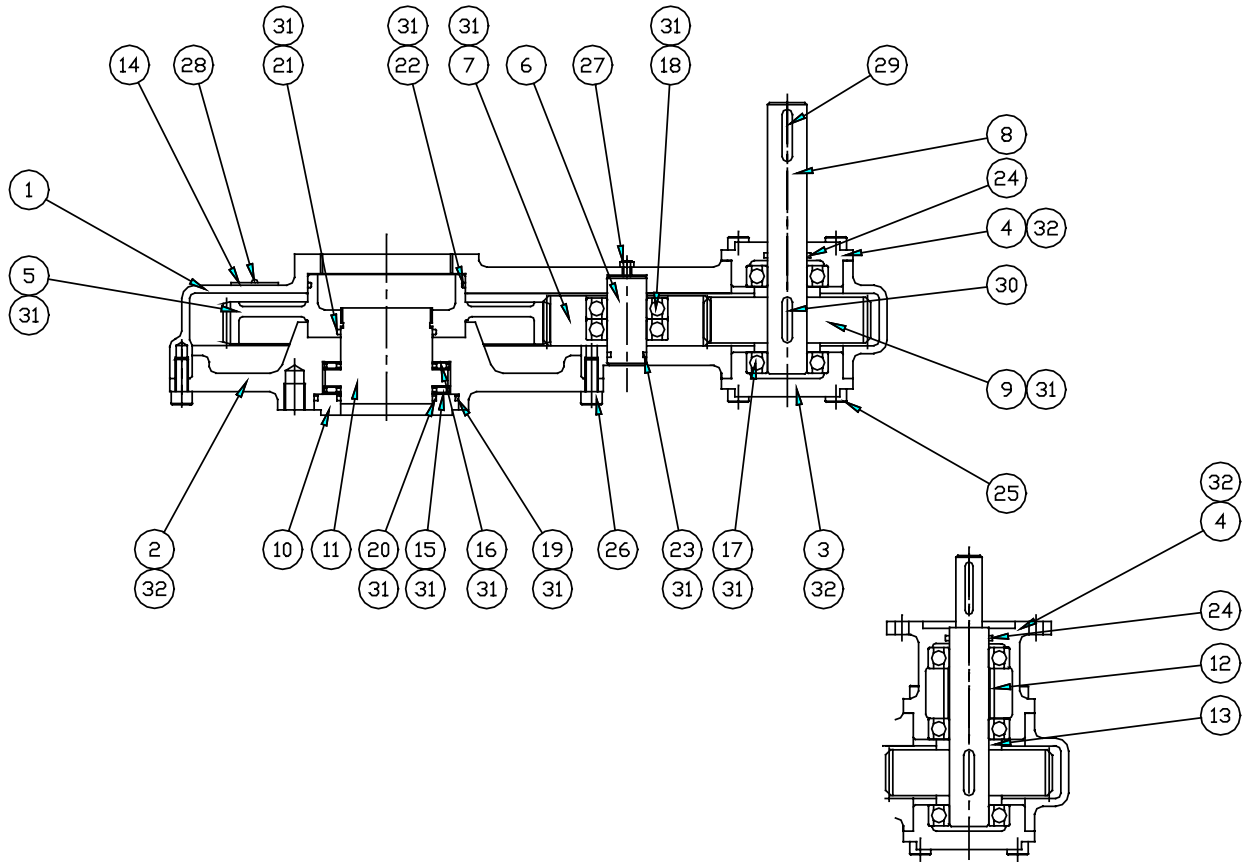

ITEM	DESCRIPTION	QUANTITY
1	GEARCASE	1
2	BASEPLATE	1
3	ENDCAP (BLANK)	1
4	INPUT HOUSING	1
5	OUTPUT GEAR	1
6	IDLER SHAFT	1
7	IDLER GEAR	1
8	INPUT SHAFT	1
9	INPUT GEAR	1
10	SPIGOT RING	1
11	OUTPUT SLEEVE	1
12	SPACER	1
13	NAMEPLATE	1
14	THRUST WASHER	4
15	THRUST BEARING	2
16	BALL BEARING	2 (MANUAL) or 3 (MOTORISED)
17	BALL BEARING	3 (IS8 - 11), 4 (IS12 - 16) or 6 (IS17 - 20)
18	O RING	1
19	O RING	1
20	O RING	1
21	O RING	1
22	O RING	1
23	O RING	1
24	O RING	1
25	SOCKET HEAD CAP SCREW	8
26	SOCKET HEAD CAP SCREW	8
27	SOCKET HEAD CAP SCREW	4
28	RIVET	2
29	KEY	1
30	KEY	1
31	GREASE	
32	SEALANT	
33	PRIMER	