


## SPARE PARTS LIST FOR IB RANGE OF BEVEL GEAR ACTUATORS

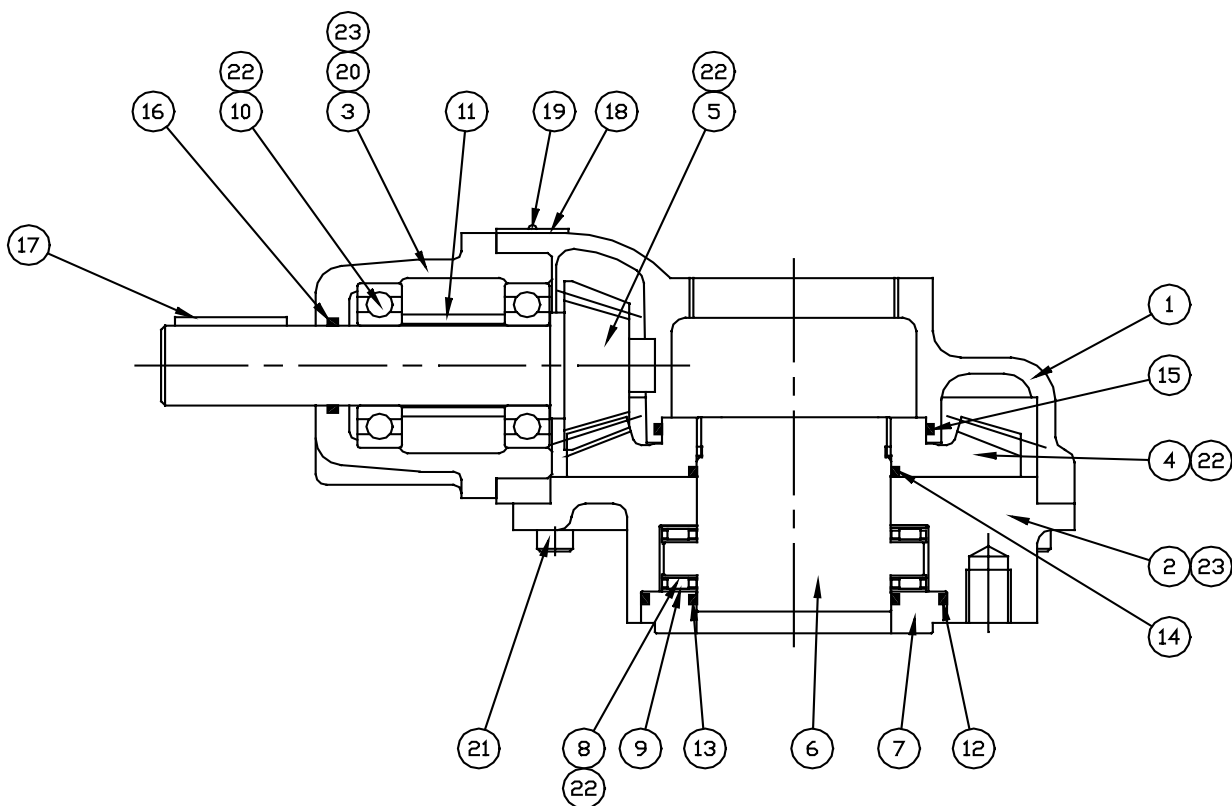

ITEM	DESCRIPTION	QUANTITY
1	GEARCASE	1
2	BASEPLATE	1
3	INPUT HOUSING	1
4	BEVEL GEAR	1
5	INPUT SHAFT & GEAR	1
6	OUTPUT SLEEVE	1
7	SPIGOT RING	1
8	THRUST BEARING	2
9	THRUST WASHER	4
10	BALL BEARING	2
11	BEARING SPACER	1
12	'O' RING	1
13	'O' RING	1
14	'O' RING	1
15	'O' RING	1
16	'O' RING	1
17	KEY	1
18	NAMEPLATE	1
19	NAMEPLATE RIVET	2
20	SOCKET HEAD CAP SCREW	4
21	SOCKET HEAD CAP SCREW	8
22	GREASE	
23	SILICONE SEALANT	