



YT-3700



YT-3750



YT-3702

Contents

1	Introduction	6
1.1	General Information for the users	6
1.2	Manufacturer Warranty	6
1.3	Explosion Proof Warning (Only for Intrinsic safety type positioners)	7
2	Product Description	9
2.1	General	9
2.2	Main Features and Functions	9
2.3	Label Description	10
2.4	Product Code	14
2.4.1	YT-3700 / 3750 series follows suffix symbols as follows	14
2.4.2	YT-3702 series follows suffix symbols as follows	15
2.5	Product Specification	16
2.5.1	YT-3700 / 3750 Specification	16
2.5.2	YT-3702 Specification	17
2.6	Certifications	19
2.7	Parts and Assembly	21
2.7.1	YT-3700 / 3750	21
2.7.2	YT-3702	23
2.8	Product Dimension	24
2.8.1	YT-3700	24
2.8.2	YT-3750	24
2.8.3	YT-3702	25
3	Installation	26
3.1	Safety	26
3.2	Tools for installation	26
3.3	Linear positioner Installation	27
3.3.1	Safety	27
3.3.2	Standard lever type positioner Installation Steps	28
3.4	Rotary positioner Installation	33
3.4.1	YT-3700R / 3750R Components	33
3.4.2	YT-3702R remote sensor components	34
3.4.3	Rotary Bracket Information (Only YT-3700R / 3750R)	35
3.4.4	Rotary positioner Installation Steps	36
4	Connection - Air	38
4.1	Safety	38
4.2	Supply Pressure Condition	38
4.3	Piping Condition	38
4.4	Connection – Piping with actuator	39
4.4.1	Single acting actuator	39

4.4.2	Double acting actuator.....	40
5	Connection – Power	41
5.1	Safety.....	41
5.2	Connection.....	42
5.2.1	Standard Terminals	42
5.2.2	Terminals with micro-limit switch option (Only YT-3700 / 3750)	44
5.2.3	Terminals with inductive proximity Limit Switch option (Only YT-3700 / 3750).....	45
5.3	Ground.....	45
6	Adjustments	46
6.1	Limit Switch Adjustment (Only YT-3700 / 3750).....	46
6.2	A/M switch adjustment.....	47
6.3	Orifice Installment.....	48
7	Optional Sub-PCB Installment	49
7.1	Installation steps	49
8	Maintenance	51
8.1	Supply air.....	51
8.2	Seals.....	51
9	Auto Calibration and Operation	52
9.1	Warning.....	52
9.2	LCD display and buttons.....	52
9.2.1	LCD display and symbols	52
9.2.2	Button and function.....	53
9.3	Menu levels.....	54
9.4	RUN Mode Monitor	55
9.5	Configuration and Operation.....	56
9.6	Calibration (CALib)	60
9.6.1	Acting Type (SINGLE / dDOUBLE).....	61
9.6.2	Auto Calibration 1 (AUTO 1).....	61
9.6.3	Auto Calibration 2 (AUTO 2).....	62
9.6.4	Auto Calibration 3 (AUTO 3).....	63
9.6.5	Travel Zero (TVL ZERO) and Travel end (TVL ENd)	64
9.7	Manual Operation (MAN OPER).....	65
9.7.1	Manual Operation by Set position (MAN SP)	65
9.7.2	Manual Operation by Manipulator Value (MAN MV)	66
9.8	Control Parameters (CTL PARM)	67
9.8.1	Dead Band (dEAdbANd).....	67
9.8.2	Forward P parameter (KP UP) and reverse P parameter (KP dN).....	68
9.8.3	Forward Integral time parameter (TI UP) and reverse Integral time parameter (TI dN).....	68
9.8.4	Forward D parameter (Kd UP) and reverse D parameter (Kd dN)	69
9.8.5	GAP parameter (GAP).....	69

9.8.6	GAP P parameter (GP).....	70
9.8.7	GAP I parameter (GI).....	70
9.8.8	GAP D parameter (Gd).....	71
9.8.9	Auto Dead band Mode (AUTO db).....	72
9.8.10	Performance Mode (PER STbL / NORM / FAST).....	72
9.9	Input Configuration (IN CFG).....	73
9.9.1	Signal Direction (SIG NORM / REVS).....	73
9.9.2	Split Range Mode (SPLIT 4.20 / 4.12 / 12.20 / CSt).....	74
9.9.3	Custom Split Range Zero (CST ZERO).....	74
9.9.4	Custom Split Range End (CST ENd).....	75
9.9.5	Valve Flow Characterization Curves (CHAR LIN / EQ / USER 5P / USER 21P).....	75
9.9.6	User Set Characterization 5 Points (USER 5P).....	76
9.9.7	User Set Characterization 21 Points (USER 21P).....	77
9.9.8	Tight Shut Open (TSHUT OP).....	78
9.9.9	Tight Shut Close (TSHUT CL).....	79
9.9.10	Target Position Ramp Up Rate (RAMP UP) and Target Position Ramp Down Rate (RAMP dN) 80	
9.9.11	Digital Input Function (dIF OFF / FCL / FOP / PSTA / PSTO).....	81
9.9.12	Digital Input Logic (dI LOGIC HI / Lo).....	82
9.10	Output Configuration (OUT CFG).....	83
9.10.1	4-20 mA Analog Output Direction (PTM NORM / REVS).....	83
9.10.2	4-20 mA Analog Output Zero / End (PTM ZERO / ENd).....	84
9.10.3	HART Feedback Direction (HT NORM / REVS).....	85
9.10.4	Back Calculation (bACKCAL oFF / on).....	86
9.10.5	Digital Output Function (dOF OFF / ...).....	87
9.10.6	Digital Output Logic (dO LOGIC HI / Lo).....	88
9.10.7	Analog Output Function (AOF OFF / ...).....	89
9.10.8	Analog Output Logic (AO LOGIC Lo / HI).....	90
9.11	Device Configuration (dEV CFG).....	91
9.11.1	Action Setting (ACT REVS / dIR).....	91
9.11.2	Linear Interpolation (ITP oFF / on).....	92
9.11.3	Lock of Parameters (Write Protect, W UNLOCK / LOCK).....	92
9.11.4	Actual Position View Mode (View Mode, VI NORM / REVS).....	93
9.11.5	Polling address setting (POL AddR).....	93
9.11.6	Factory Reset (dEFAULT oFF / on).....	94
9.11.7	Positioner Self-Test (SELFTEST).....	95
9.12	Diagnosis Mode (dIAGNd).....	96
9.12.1	Default Alarm Settings.....	96
9.12.2	Process Status (PS).....	98
9.12.3	Device Status (dS).....	99

9.12.4	View Monitoring Counts (VI CNTS)	101
9.12.5	Diagnostic Limit Configuration (LIMIT CFG).....	102
9.12.6	Reset Alarm Status (RST ALRM oFF / on).....	103
9.12.7	View Event Log (EVT LOG).....	104
9.12.8	Partial Stroke Test Record (View PST Result Record, PST RSLT)	105
9.12.9	PST Configuration (PST CFG)	106
9.12.10	Run PST (PST NOW)	107
9.12.11	Periodic PST Test (PST Schedule, PST SCHd oFF / on)	108
9.13	Position information (INFO)	108
9.14	Error codes during automatic calibration	110
9.15	Status and Alarm Code.....	111
10	Main Software Map	114
11	Intrinsically installation drawing.....	115
11.1	FM certification.....	115
11.2	CSA certification	116

1 Introduction

1.1 General Information for the users

Thank you for purchasing Rotork YTC Limited products. Each product has been fully inspected after its production to offer you the highest quality and reliable performance. Please read the product manual carefully prior to installing and commissioning the product.

- Installation, commissioning, and maintenance of the product may only be performed by trained specialist personnel who have been authorized by the plant operator accordingly.
- The manual should be provided to the end-user.
- **Factory Mutual approved Intrinsically Safe and Non-Incendive units must be Installed Per drwg SKC-190612.pdf**
- **CSA approved Intrinsically Safe and Non-Incendive units must be Installed Per drwg SKC-190613.pdf**
- The manual can be altered or revised without any prior notice. Any changes in product's specification, design, and/or any components may not be printed immediately but until the following revision of the manual.
- When the manual refers to "**Valve Zero / Zero**" means the final valve position upon pneumatic pressure has been fully exhausted from positioner's OUT1 port. For example, the valve zero position may differ between linear direct and reverse actions. (DA/RA)
- The manual should not be duplicated or reproduced for any purpose without prior approval from Rotork YTC Limited, Gimpo-si, South Korea.
- In case of any other problems that are not stated in this manual, please make immediate contact to Rotork YTC Limited.
- Positioner is an accessory of the control valve, so please make sure to read the applicable instruction manual of the control valve prior to installation and operation.

1.2 Manufacturer Warranty

- For the safety, it is important to follow the instructions in the manual. Manufacturer will not be responsible for any damages caused by user's negligence.
- Any modifications or repairs to the product may only be performed if expressed in this manual. Injuries and physical damages caused by customer's modifying or repairing the product without a prior consultation with Rotork YTC Limited will not be compensated. If any alterations or modifications are necessary, please contact Rotork YTC Limited directly.
- The warranty period for the product is (12) months from the date of shipment unless otherwise stated. Customers can extend the warranty period by an additional (12) months by registering the product's serial number or lot number, customer information, and installation address on the warranty extension application site Product Registration (<https://www.rotork.com/en/service/product-registration>).
- Manufacturer warranty will not cover products that have been subjected to abuse, accidents,

alterations, modifications, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; damages that occurs in shipment, due to act of God, failure due to power surge, or cosmetic damage. Improper or incorrectly performed maintenance will void this limited warranty.

- For detailed warranty information, please contact the corresponding local Rotork YTC Limited office or main office in South Korea.

1.3 Explosion Proof Warning (Only for Intrinsic safety type positioners)

Please ensure the unit is being used and installed in conformity with local, regional, and national explosion proof within the proper safety barrier environment.



- Refer to “2.7 Certifications”
- Explosion proof type of cables and gaskets should be used, when explosion gases are present at the installation site.
- Positioner has 2 ports for power connection. Explosion proof type wires and packing should be used. Blind plug is required when any port is not being used.
- Ring terminal with surface area of more than 1.25 mm² with M4 spring washer should be used to connect the power.
- For external ground terminal, ring terminal with surface area of more than 5.5 mm² should be used.
- Wiring in these applications shall utilize appropriate methods for Class I, Division 2 / Zone 2
- Substitution of components may impair intrinsic safety.
- Substitution of components may impair suitability for Class I, Division 2 (FM/CSA: Class I, Division 1, Division 2)
- WARNING – EXPLOSION HAZARD – Substitution of components may impair suitability for Class I, Division 2.
- “AVERTISSEMENT – RISQUE D'EXPLOSION – Remplacement des composants peut nuire à la conformité de Classe I, Division 2”
- EXPLOSION HAZARD. Do not connect or disconnect wiring unless all sources of power have been removed or the area is known to be non-hazardous.
(French) RISQUE D'EXPLOSION. Ne pas raccorder ou débrancher le câblage à moins Toutes les sources d'énergie ont été enlevées ou la zone est connue pour être non dangereux.
- The enclosure of model YT-3700 / 3702 contains aluminum, which is considered to constitute a potential risk of ignition when subjected to impact or friction. Care must be used during installation in locating this equipment to prevent impact or friction
- Some of the enclosure parts are made of non-metallic materials. To prevent the risk of Electrostatic sparking, clean the enclosure only with a damp cloth.
- The product must be installed in such a manner as to minimize the risk of impact or friction with other metal surfaces.

- For Intrinsically Safe installations, the product must be connected to suitably rated intrinsically safe equipment, and must be installed in accordance with applicable intrinsically safe installation standards.
- Tapped Exhaust option(AG of Product code) is used when it is required to vent away Group D, Div/Group IIA, Zone gases to a safe area.
- FM/CSA : Using gases other than air must be compatible with the YT-3700 series wetted parts.
- FM/CSA : This equipment shall not be used in an atmosphere that may contain carbon disulfide (CS₂).
- CSA : the range of environmental conditions for which the positioner is designed including the following
 - 1) Pollution Degree: "2"
 - 2) Overvoltage Category: II
 - 3) The maximum use altitude: 2000 m above sea level
- CSA : the safety of any system incorporating the equipment is the responsibility of the assembler of the system.
- Special conditions for safe use of sign "X" of ATEX / IECEx :

The ambient temperature range deviates from the standard temperature range and amounts to:

Temperature class T5 / T100 °C:	-40°C to +60 °C
Temperature class T6 / T85 °C:	-40°C to +40 °C

Equipment must be protected from high risk of mechanical impact hazard and high electrostatic charge hazards.

2 Product Description

2.1 General

YT-3700 / 3750 / 3702 series Smart Valve Positioner accurately controls valve stroke in response to an input signal of 4-20 mA from the controller. Built-in micro-processor optimizes the positioner's performance and provides unique functions such as **Auto-Calibration, PID Control, and HART Protocol Communications.**

2.2 Main Features and Functions

- LCD display enables users to monitor the positioner status.
- User will easily understand the method of using 4 buttons because it work same in all versions of firmware interfaces.
- When unexpected situation like momentary blackout happens, our positioner boot-time only take 0.5 second and this can minimize the travel of valve which consequentially increase the safety of system.
- Positioner operates normally even there are sudden changes in supply pressure and / or high vibration environment.
- YT-3702 remote positioner is stronger on high temperature and vibration environment because it is separated into remote sensor and positioner.
- The method of Auto Calibration is very simple.
- As an advantage of having very low air consumption, It could greatly reduce operating costs in large-scale plants.
- It is compatible with most of controllers.
- Orifices can be installed even in the field to minimize the hunting occurrence and optimize operating conditions.
- Various information about positioner can be processed by HART communication.
- "EDD and FDI files required for HART communication can be downloaded from our website (www.ytc.co.kr) or FieldComm Group (www.fieldcommgroup.org). When using the FieldComm Group website, please search for the Product Name on YT-3XXX."
- Valve system becomes more stable by using 4-20 mA analog output function (option).
- Different valve characteristics can be adjusted – Linear, Quick Open, Equal Percentage, and User Set which user can make 5 or 21 points characterizations.
- Tight Shut – Close and Shut - Open can be set.
- PID parameters can be adjusted in the field without any additional communicator.
- A/M switch can be used to direct supply air to the actuator or to manually operate the positioner or valve without any signal.
- Split range 4 to 12 mA or 12 to 20 mA can be set.
- Operating temperature for remote sensor of YT-3702 is -40 to 120 °C.
- Operating temperature for positioners is -30 to 85 °C or -40 to 85 °C (Please check certified explosion proof temperature)

- Hand calibration function can set Zero point or End point manually.
- It has IP66 and TYPE 4X(FM) protection grade. (excluding the pressure gauges)
- Polyester powder coating resists the corrosion process. (except YT-3750).
- Maintenance of the positioner is easy because of modularized inner structure.
- SIL2 certified.(For more information, see SIL Safety Instruction on homepage)
- Suitable for use with methane or natural gas supply pressure medium for FM/CSA (only A & AG of Explosion proof of Product code)
- The AG option in the product code has the tapped exhaust ports to carry the gas vented from the positioner to a safe location when the positioner is installed indoors to use methane or natural gas as a process medium.

2.3 Label Description

- MODEL : Indicates the model number and additional options.
- EXPLOSION PROOF : Indicates certified explosion proof grade.
- INGRESS PROTECTION : Indicates enclosure protection grade.
- INPUT SIGNAL : Indicates input signal range.
- OPERATING TEMP. : Indicates the allowable operating temperature.
- SUPPLY PRESSURE : Indicates the supply pressure range.
- SERIAL NUMBER : Indicates unique serial number.
- MONTH.YEAR : Indicates manufactured month and year.

- INTRINSIC SAFETY / NONINCENDIVE : Indicates intrinsic safety explosion proof grade.
- AMBIENT TEMP. : Indicates the allowable ambient temperature for explosion proof.
- Ui, li, Pi, Ci, Li : Indicates the allowable electrical data in the certificate.
ATEX: Ui = 28 V, li = 93 mA, Pi = 651 mW, Ci = 0.6 nF, Li = 10 μH
FM: Ui = xx V, li = xx mA, Pi = xxx mW, Ci = x.xx nF, Li = xx μH
You can also see the details in the certificate.

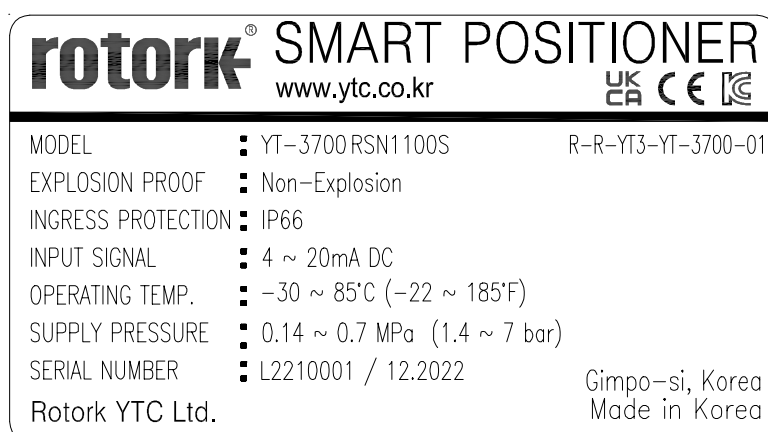


Fig. L-1: YT-3700 / 3702 Non-explosion proof

rotork [®] SMART POSITIONER		UK CA 2503	CE 2004	Ex II 2 G & D	Ex NEPSI	KC	KC
MODEL	: YT-3700RSi1100S	UKEX	: CML 21UKE21366X				
INTRINSIC SAFETY/ NONINCENDIVE	: Ex ia IIC T5/T6 Gb, Ex ia IIIC T100°C/T85°C Db	ATEX	: EPS 19 ATEX 1 145 X				
INGRESS PROTECTION	: IP66	IECEx	: IECEx EPS 19.0069X				
INPUT SIGNAL	: 4-20mA DC	NEPSI	: GYJxx.xxxxX				
AMBIENT TEMP.	: T5 : -30 to 60°C(-22 to 140°F) T6 : -30 to 40°C(-22 to 104°F)	KCs	: 19-KA2BO-0874X 19-KA2BO-0877X 19-KA2BO-0867X 19-KA2BO-0878X 19-KA2BO-0861X 19-KA2BO-0879X				
SUPPLY PRESSURE	: 0.14 to 0.7 MPa (1.4 to 7 bar)	PESO	: P544044/1				
Ui, li, Pi, Ci, Li,	: See certificate or product manual	EMC	: R-R-YT3-YT-3700-01				
SERIAL NUMBER	: L2410001 / 12.2024						
www.ytc.co.kr							
Rotork YTC Ltd.	⚠ TO PREVENT IGNITION OF FLAMMABLE OR COMBUSTIBLE WARNING ATMOSPHERES, DISCONNECT POWER BEFORE SERVICING.						

Fig. L-2: YT-3700 Intrinsic safety type (UKEX, ATEX, IECEx, KCs, NEPSI, PESO)




  Rotork YTC Ltd. Gimpo-si, Korea www.ytc.co.kr Made in Korea	MODEL	: YT-3700RSA5520L				
	INTRINSIC SAFETY/ NONINCENDIVE	: Class I, Division 1&2, Grps ABCD T5/T6 Class II, Division 1&2, Grps EFG T100°C/T85°C; Cl III Cl I, Zn 0, AEx ia IIC T5/T6; Zn 21 AEx tb IIIC T100°C/T85°C(FM) Ex ia IIC T5/T6 Gb; Ex tb IIIC T100°C/T85°C Db(CSA)				
	INGRESS PROTECTION	: Type 4X(FM), IP66				
	INPUT SIGNAL	: 4 ~ 20mA === DC				
	ELECTRICAL RATINGS	: Rated 30 Vdc max, 100mA max, Class 2/SELV				
	AMBIENT TEMP.	: T5 : -40 ~ 60°C / T6 : -40 ~ 40°C				
	ORD LOC OPERATING TEMP.	: -40 ~ 85°C				
	SUPPLY PRESSURE	: 0.14 ~ 0.7 MPa (1.4 ~ 7 bar)				
	ENTITY/ NIFW PARAMETERS	: FM : IS with Entity & NI per System Drawing SKC-190612 CSA : IS with Entity per System Drawing SKC-190613				
	SERIAL NUMBER	: C2110001 / 03.2021				
 * POTENTIAL ELECTROSTATIC CHARGING HAZARD : ⚠ SEE INSTRUCTIONS.		APPROVED CSA20CA80016582X Exia / 227951				
WARNING * PISQUE POTENTIEL DE CHARGE ELECTROSTATIQUE. : ⚠VOIR LES INSTRUCTIONS.						

Fig. L-3: YT-3700 Intrinsic safety type (FM, CSA)

rotork [®] 智能阀门定位器		CCC	NEPSI	KC	KC
www.ytc.co.kr		UK CA 2503	CE 2004	Ex II 2 G & D	
型号	: YT-3700RSZ0100S	NEPSI	: GYJxx.xxxxX		
本安/非易燃	: Ex ia IIC T5/T6 Gb, Ex ia IIIC T85°C/T100°C Db	KCs	: 19-KA2BO-0874X 19-KA2BO-0877X 19-KA2BO-0867X 19-KA2BO-0878X 19-KA2BO-0861X 19-KA2BO-0879X		
防护等级	: IP66	EMC	: R-R-YT3-YT-3700-01		
输入信号	: 4-20mA DC	UKEX	: CML 21UKE21366X		
防爆环境温度	: T5 : -40 to 60°C(-40 to 140°F) T6 : -40 to 40°C(-40 to 104°F)	ATEX	: EPS 19 ATEX 1 145 X		
供给压力	: 0.14 to 0.7 MPa (1.4 to 7 bar)	IECEx	: IECEx EPS 19.0069X		
Ui, li, Pi, Ci, Li,	: 请参阅证书或产品手册				
序列号	: L2410001 / 12.2024				
Rotork YTC Ltd.	⚠ 为防止点燃易燃或可燃气体, 请在维修之前断开电源。				

Fig. L-4: YT-3700 Intrinsic safety type (CCC, NEPSI)

rotork [®] SMART POSITIONER		www.ytc.co.kr	UK CA	CE
MODEL	: YT-3750 LSN1100S			
EXPLOSION PROOF	: Non-Explosion			
INGRESS PROTECTION	: IP66			
INPUT SIGNAL	: 4 ~ 20mA DC			
OPERATING TEMP.	: -30 ~ 85°C (-22 ~ 185°F)			
SUPPLY PRESSURE	: 0.14 ~ 0.7 MPa (1.4 ~ 7 bar)			
SERIAL NUMBER	: L2210001 / 12.2022			
Rotork YTC Ltd.		Gimpo-si, Korea Made in Korea		

Fig. L-5: YT-3750 Non-explosion proof

rotork [®] SMART POSITIONER		www.ytc.co.kr	UK CA 2503	CE 2004	Ex II 2 G&D	IP66	CE
MODEL	: YT-3750 RDi5220L	UKEX : CML 21UKEX21366X					
INTRINSIC SAFETY/ NONINCENDIVE	: Ex ia IIC T5/T6 Gb, Ex ia IIIC T100°C/T85°C Db	EPS 19 ATEX 1 145 X IECEx EPS 19.0069X NEPSI : GYJxx.xxxxX					
INGRESS PROTECTION	: IP66	KCs : 19-KA2BO-0862X 19-KA2BO-0880X 19-KA2BO-0863X 19-KA2BO-0882X 19-KA2BO-0860X 19-KA2BO-0881X PESO : P544035/1					
INPUT SIGNAL	: 4-20mA DC						
AMBIENT TEMP.	: T5 : -40 to 60°C(-40 to 140°F) T6 : -40 to 40°C(-40 to 104°F)						
SUPPLY PRESSURE	: 0.14 to 0.7 MPa (1.4 to 7 bar)						
Ui, li, Pi, Ci, Li,	: See certificate or product manual						
SERIAL NUMBER	: L2410001 / 12.2024						
Rotork YTC Ltd.	WARNING TO PREVENT IGNITION OF FLAMMABLE OR COMBUSTIBLE ATMOSPHERES, DISCONNECT POWER BEFORE SERVICING.		Gimpo-si, Korea Made in Korea				

Fig. L-6: YT-3750 Intrinsic safety type (UKEX, ATEX, IECEx, KCs, NEPSI, PESO)

rotork [®]	MODEL	: YT-3750RSA5520L		
	INTRINSIC SAFETY/ NONINCENDIVE	: Class I, Division 1&2, Grps ABCD T5/T6 Class II, III, Division 1&2, Grps EFG T100°C/T85°C; CI III CI I, Zn 0, AEx ia IIC T5/T6; Zn 21 AEx tb IIIC T100°C/T85°C(FM) Ex ia IIC T5/T6 Gb; Ex tb IIIC T100°C/T85°C Db(CSA)		
	INGRESS PROTECTION	: Type 4X(FM), IP66		
	INPUT SIGNAL	: 4 ~ 20mA DC		
	ELECTRICAL RATINGS	: Rated 30 Vdc max, 100mA max, Class 2/SELV		
	AMBIENT TEMP.	: T5 : -40 ~ 60°C / T6 : -40 ~ 40°C		
	ORD LOC OPERATING TEMP.	: -40 ~ 85°C		
	SUPPLY PRESSURE	: 0.14 ~ 0.7 MPa (1.4 ~ 7 bar)		
	ENTITY/ NIFW PARAMETERS	: FM : IS with Entity & NI per System Drawing SKC-190612 CSA : IS with Entity per System Drawing SKC-190613		
	SERIAL NUMBER	: C2110001 / 03.2021		
Rotork YTC Ltd. Gimpo-si, Korea www.ytc.co.kr Made in Korea	SMART POSITIONER		FM APPROVED CSA20CAR0016582X Exia / 227951	
WARNING		* POTENTIAL ELECTROSTATIC CHARGING HAZARD : SEE INSTRUCTIONS. * PISQUE POTENTIEL DE CHARGE ELECTROSTATIQUE. : VOIR LES INSTRUCTIONS.		

Fig. L-7: YT-3750 Intrinsic safety type (FM, CSA)

rotork®		智能阀门定位器		CCC	NEPSI	CE ^s
www.ytc.co.kr		UK 2503	CE 2004	Ex II 2 G&D		
型号	: YT-3750 RSZ1100S	NEPSI	: GYJxx.xxxxX			
本安/非易燃	: Ex ia IIC T5/T6 Gb, Ex ia IIIC T85°C/T100°C Db	KCs	: 19-KA2BO-0862X 19-KA2BO-0880X 19-KA2BO-0863X 19-KA2BO-0882X 19-KA2BO-0860X 19-KA2BO-0881X			
防护等级	: IP66	UKEX	: CML 21UKEX21366X			
输入信号	: 4-20mA DC	ATEX	: EPS 19 ATEX 1 145 X			
防爆环境温度	: T5 : -40 to 60°C(-40 to 140°F) T6 : -40 to 40°C(-40 to 104°F)	IECEX	: IECEX EPS 19.0069X			
供给压力	: 0.14 ~ 0.7 MPa (1.4 ~ 7 bar)					
Ui, li, Pi, Ci, Li,	: 请参阅证书或产品手册					
序列号	: L2410001 / 12.2024					
Rotork YTC Ltd.	⚠警告 为防止点燃易燃或可燃气体, 请在维修之前断开电源。		金浦市, 韩国 韩国制造			

Fig. L-8: YT-3750 Intrinsic safety type (CCC, NEPSI)

2.4 Product Code

2.4.1 YT-3700 / 3750 series follows suffix symbols as follows.

YT-3700 / 3750 1 2 3 4 5 6 7 8

1	Motion Type	L : Linear (Positioner is attached the right yoke of actuator.) R : Rotary				
2	Acting type	S : Single D : Double				
3	Explosion Protection	N : Non-Explosion proof i : ATEX, IECEx, KCs, NEPSI, UKEX, PESO : Ex ia IIC T5/T6 Gb, Ex ia IIIC T100°C/T85°C Db, IP66 A : FM, CSA : Class I, Division 1&2 Groups ABCD T5/T6 Class II, Division 1&2 Groups EFG T100°C/T85°C; Class III Class I, Zone 0, AEx ia IIC T5/T6; Zone 21 AEx tb IIIC T100°C /T85°C(FM) Ex ia IIC T5/T6 Gb; Ex tb IIIC T100°C/T85°C Db IP6X(CSA) AG : FM, CSA + Tapped Exhaust Z : Intrinsic safety for CCC, NEPSI				
4	Lever Type	<table border="1" style="width: 100%;"> <tr> <td style="width: 10%;">Linear</td> <td>0 : 10 to 40 mm (Standard type) 1 : 20 to 100 mm (Standard type) 2 : 90 to 150 mm (Standard type)</td> </tr> <tr> <td>Rotary</td> <td>5 : Namur</td> </tr> </table>	Linear	0 : 10 to 40 mm (Standard type) 1 : 20 to 100 mm (Standard type) 2 : 90 to 150 mm (Standard type)	Rotary	5 : Namur
Linear	0 : 10 to 40 mm (Standard type) 1 : 20 to 100 mm (Standard type) 2 : 90 to 150 mm (Standard type)					
Rotary	5 : Namur					
5	Conduit - Air Connection Type	1 : G 1/2 – Rc 1/4 2 : G 1/2 – 1/4 NPT (YT-3750 is available for No. 2 ONLY) 3 : G 1/2 – G 1/4 4 : M20x1.5P – 1/4 NPT 5 : 1/2 NPT – 1/4 NPT				
6	Communication	2 : HART Communication				
7	Option	0 : None 1 : 4-20 mA Analog Output 4 : 4-20 mA Analog Output + Limit Switch (Mechanical Type, 2ea) (not available with NCS) ¹⁾ 5 : 4-20 mA Analog Output + Limit Switch (Inductive Proximity Type, 2ea) (not available with NCS) ²⁾ ※ DI/DO cannot be included at Limit Switch options				
8	Operating Temp. (Non-explosion proof) ³⁾	S : -30 °C to 85 °C (-22 °F to 185 °F) L : -40 °C to 85 °C (-40 °F to 185 °F) A : -55 to 85 °C (-67 to 185 °F, only Non-Explosion proof)				

¹⁾ This option is only available for “S”, “L” in 8 operating temp.

- 2) This option is only available for “S” in **8** operating temp.
- 1) 2) Limit Switch options are not available for NCS and different from software configurable Digital Output that is triggered in synchronization with specific event or alarm.
- 3) This option is just the normal operating temperature of the product and is not related to explosion proof temperature. See “2.7 Certificates” for explosion proof temperature.

2.4.2 YT-3702 series follows suffix symbols as follows.

YT-3702 **1** **2** **3** **4** **5** **6** **7** **8** **9**

1 Motion Type	L : Linear R : Rotary
2 Acting type	S : Single D : Double
3 Explosion Protection	N : Non-Explosion proof
4 Lever Type	Linear 1 : 10 to 40 mm 2 : 20 to 70 mm 3 : 50 to 100 mm 4 : 100 to 150 mm
	Rotary 5 : Namur
5 Conduit – Air Connection Type	1 : G 1/2 – Rc 1/4 2 : G 1/2 – 1/4 NPT 3 : G 1/2 – G 1/4 4 : M20x1.5P(Adapter type) – 1/4 NPT 5 : 1/2 NPT(Adapter type) – 1/4 NPT
6 Communication	2 : HART Communication
7 Option	0 : None 1 : 4-20 mA Analog Output
8 Operating Temp. (Non-explosion proof)	S : -30 to 85 °C (-22 to 185 °F) L : -40 to 85 °C (-40 to 185 °F) A : -55 to 85 °C (-67 to 185 °F)
9 Cable Length ¹⁾	1 : 5m 2 : 10m 3 : 15m 4 : 20m1

¹⁾ Maximum cable length is 20m.

2.5 Product Specification

2.5.1 YT-3700 / 3750 Specification

Model		YT-3700		YT-3750	
Housing Material		Aluminum		Stainless Steel 316	
Motion Type		Linear	Rotary	Linear	Rotary
Acting Type		Single / Double			
Input Signal		4-20 mA DC			
Minimum Current Signal		3.8 mA			
Supply Pressure		0.14 to 0.7 MPa (1.4 to 7 bar)			
Stroke		10 to 150 mm	55 to 110°	10 to 150 mm	55 to 110°
Impedance		Max. 500 Ω @ 20 mA DC			
Conduit Entry		G 1/2 or 1/2 NPT or M20x1.5P		G 1/2	
Air Connection		Rc 1/4 or 1/4 NPT or G 1/4		1/4 NPT	
Gauge Connection		1/8 NPT			
Tapped Exhaust (Only AG option of Product code)		1/4 NPT			
Ingress Protection		IP66, Type 4X(FM) (excluding the pressure gauges)			
Explosion Protection		1. Non-Explosion proof 2. ATEX, IECEx, KCs, NEPSI, CCC, UKEX, PESO : Ex ia IIC T5/T6 Gb, Ex ia IIIC T100°C /T85°C Db, IP66 3. FM & CSA: Class I, Division 1&2 Groups ABCD T5/T6 Class II, Division 1&2 Groups EFG T100°C/T85°C; Class III Class I, Zone 0, AEx ia IIC T5/T6; Zone 21 AEx tb IIIC T100°C /T85°C(FM) Ex ia IIC T5/T6 Gb; Ex tb IIIC T100°C/T85°C Db IP6X(CSA)			
Operating Temperature	Standard Type	-30 to 85 °C (-22 to 185 °F) Inductive proximity limit switch internal type : -25 to 85 °C (-13 to 185 °F)			
	Low Temp. Type	-40 to 85 °C (-40 to 185 °F)			
	Arctic Temp. Type	-55 to 85 °C (-67 to 185 °F, only Non-Explosion proof)			
Ambient Temperature Of Explosion Proof	T5	-40 to 60 °C (-40 to 140 °F)			
	T6	-40 to 40 °C (-40 to 104 °F)			
Linearity		± 0.5 % F.S.			
Hysteresis		± 0.5 % F.S.			
Sensitivity		± 0.2 % F.S.			
Repeatability		± 0.3 % F.S.			
Flow Capacity		70 LPM (Sup. = 0.14 MPa)			
Air Consumption		Below 2 LPM (Sup. = 0.14 MPa @ idle)			
Output Characteristic		Linear, Quick Open, EQ%, User Set			
Vibration		No Resonance up to 100 Hz @ 6 G			
Humidity		5 to 95 % RH @ 40 °C			

Communication		HART Communication (HART 7)	
Analog Output (Option)		4-20 mA (DC 9 to 28 V)	
Digital Input ※ N/A at Limit switch options.		Supply voltage : 0 - 28 V DC (Max. 50 mA) 0 - 5 V DC → Logical switching state "0" 10 - 28 V DC → Logical switching state "1"	
Digital Output ※ N/A at Limit switch options.		Supply voltage : 5 - 28 V DC (Max. 300 mA) Current < 1 mA → Switching state logical "0" Current > 2.2 mA → Switching state logical "1"	
L/S Rating (Option)	Mechanical	AC 125 V 3 A / DC 30 V 2 A (2ea)	
	Inductive Proximity	DC 8.2 V 8.2 mA (2ea)	
Weight		2 kg (4.4 lb)	5.1 kg (11.2 lb)
Painting		Polyester Powder Coating	-



Tested under ambient temperature of 20 °C, absolute pressure of 760 mmHg, and humidity of 65 %.

Please contact Rotork YTC Limited for detailed testing specification.

2.5.2 YT-3702 Specification

Model		YT-3702	
Housing Material		Aluminum	
Motion Type		Linear	Rotary
Acting Type		Single / Double	
Input Signal		4-20 mA DC	
Minimum Current Signal		3.8 mA	
Supply Pressure		0.14 to 0.7 MPa (1.4 to 7 bar)	
Stroke		10 to 150 mm	55 to 110°
Impedance		Max. 500 Ω @ 20 mA DC	
Conduit Entry		G 1/2 or 1/2 NPT or M20x1.5P	
Air Connection		Rc 1/4 or 1/4 NPT or G 1/4	
Gauge Connection		1/8 NPT	
Ingress Protection	Positioner module	IP66 (excluding the pressure gauges)	
	Feedback sensor	IP66	
Explosion Protection		Non-Explosion proof	
Operating Temperature	Sensor		-55 to 120 °C (-67 to 248 °F)
	Body	Standard	-30 to 85 °C (-22 to 185 °F)
		Low temp.	-40 to 85 °C (-40 to 185 °F)
		Arctic temp.	-55 to 85 °C (-67 to 185 °F)
Linearity		± 0.5 % F.S.	

Hysteresis		± 0.5 % F.S.
Sensitivity		± 0.2 % F.S
Repeatability		± 0.3 % F.S.
Flow Capacity		70 LPM (Sup. = 0.14 MPa)
Air Consumption		Below 2 LPM (Sup. = 0.14 MPa @ idle)
Output Characteristic		Linear, Quick Open, EQ%, User Set
Vibration		No Resonance up to 100 Hz @ 6 G
Humidity		5 to 95 % RH @ 40 °C
Communication		HART Communication (HART 7)
Analog Output (Option)		4-20 mA (DC 9 to 28 V)
Digital Input		Supply voltage : 0 - 28 V DC (Max. 50 mA) 0 - 5 V DC → Logical switching state "0" 10 - 28 V DC → Logical switching state "1"
Digital Output		Supply voltage : 5 - 28 V DC (Max. 300 mA) Current < 1 mA → Switching state logical "0" Current > 2.2 mA → Switching state logical "1"
Weight	Positioner	2.5 kg (5.5 lb)
	Remote Sensor	0.6 kg (1.2 lb)
	Cable(5M)	0.6 kg (1.3 lb)
Painting		Polyester Powder Coating



Tested under ambient temperature of 20 °C, absolute pressure of 760 mmHg, and humidity of 65 %.

Please contact Rotork YTC Limited for detailed testing specification.

2.6 Certifications

※ All certifications below are posted on Rotork YTC Limited homepage(www.ytc.co.kr).

➤ **KCs (Korea)**

Type : Intrinsic safety

Rating : Ex ia IIC T6/T5, Ex ia IIIC T85°C/T100°C

Certification No. : 19-KA2BO-0874X / 19-KA2BO-0877X (YT-3700 gas / dust)

19-KA2BO-0867X / 19-KA2BO-0878X {YT-3700+LS(Dry contact) gas / dust}

19-KA2BO-0861X / 19-KA2BO-0879X {YT-3700+LS(Non-contact) gas / dust}

19-KA2BO-0862X / 19-KA2BO-0880X (YT-3750 gas / dust)

19-KA2BO-0863X / 19-KA2BO-0882X {YT-3750+LS(Dry contact) gas / dust}

19-KA2BO-0860X / 19-KA2BO-0881X {YT-3750+LS(Non-contact) gas / dust}

Ambient temperature : -40 to +40°C (T6/T85°C) / -40 to +60°C (T5/T100°C)

➤ **ATEX**

Type : Intrinsic safety

Rating : II 2G Ex ia IIC T5/T6 Gb, II 2D Ex ia IIIC T100°C/T85°C Db, IP6X

Certification No. : EPS 19 ATEX 1 145 X

Ambient temperature : -40 to +60°C (T5), -40 to +40°C (T6)

➤ **IECEX**

Type : Intrinsic safety

Rating : Ex II 2G Ex ia IIC T5/T6 Gb, Ex II 2D Ex ia IIIC T100°C/T85°C Db, IP6X

Certification No. : IECEX EPS 19.0069X

Ambient temperature : -40 to +60°C (T5/T100°C), -40 to +40°C (T6/T85°C)

➤ **NEPSI (China)**

Type : Intrinsic safety

Rating : Ex ia IIC T5/T6 Gb, Ex ia IIIC T85°C/T100°C Db

Certification No. : GYJ24.1274X

Ambient temperature : -40 to +60°C (T5/T100°C), -40 to +40°C (T6/T85°C)

➤ **FM**

Rating : Class I, Div 1, Groups ABCD

Class I, Zone 0 AEx ia IIC; Zone 21 AEx tb IIIC T100°C/T85°C

Class II/III, Div 1, Groups EFG

Class I, II, III, Div 2, Groups ABCDEFG

Type 4X, IP66

Certificate No.: FM20US0020X

Ambient temperature : -40 to +60°C(T5), -40 to +40°C(T6)

➤ **CSA**

Type : Intrinsic safety

Rating : Class I, Division 1&2 Groups ABCD T5/T6

Class II, Division 1&2 Groups EFG T100°C/T85°C

Class III

Ex ia IIC T5/T6 Gb

Ex tb IIIC T100°C/T85°C Db IP6X

Certificate No.: CSA20CA80016582X

Ambient temperature : -40 to +60°C(T5), -40 to +40°C(T6)

➤ **CCC (China)**

Type : Intrinsic safety

Rating : Ex ia IIC T5/T6 Gb, Ex ia IIIC T85°C/T100°C Db

Certification No. : 20200322307000615

Ambient temperature : -40 to +60°C (T5/T100°C), -40 to +40°C (T6/T85°C)

➤ **UKEX**

Type : Intrinsic safety

Rating : II 2G Ex ia IIC T5/T6 Gb, II 2D Ex ia IIIC T100°C/T85°C Db, IP6X

Certification No. : CML 21UKEX21366X

Ambient temperature : -40 to +60°C (T5), -40 to +40°C (T6)

➤ **PESO (India)**

Type : Intrinsic safety

Rating : Ex ia IIC T5/T6 Gb

Certification No. : P544044/1 (YT-3700)

P544035/1 (YT-3750)

Ambient temperature : -40 to +60°C (T5/T100°C), -40 to +40°C (T6/T85°C)

➤ **SIL2 (in a redundant structure up to SIL 3, Pending)**

Intended application : Safety function is defined as to move into fail-safe-position, when signal to positioner is interrupted.

Certification No. : 968/V 1155.00/20

➤ **Electromagnetic Compatibility (EMC)**

- EMC directive 2014/30/EC from April 2016

- EC Directive for CE conformity marking

2.7 Parts and Assembly

2.7.1 YT-3700 / 3750

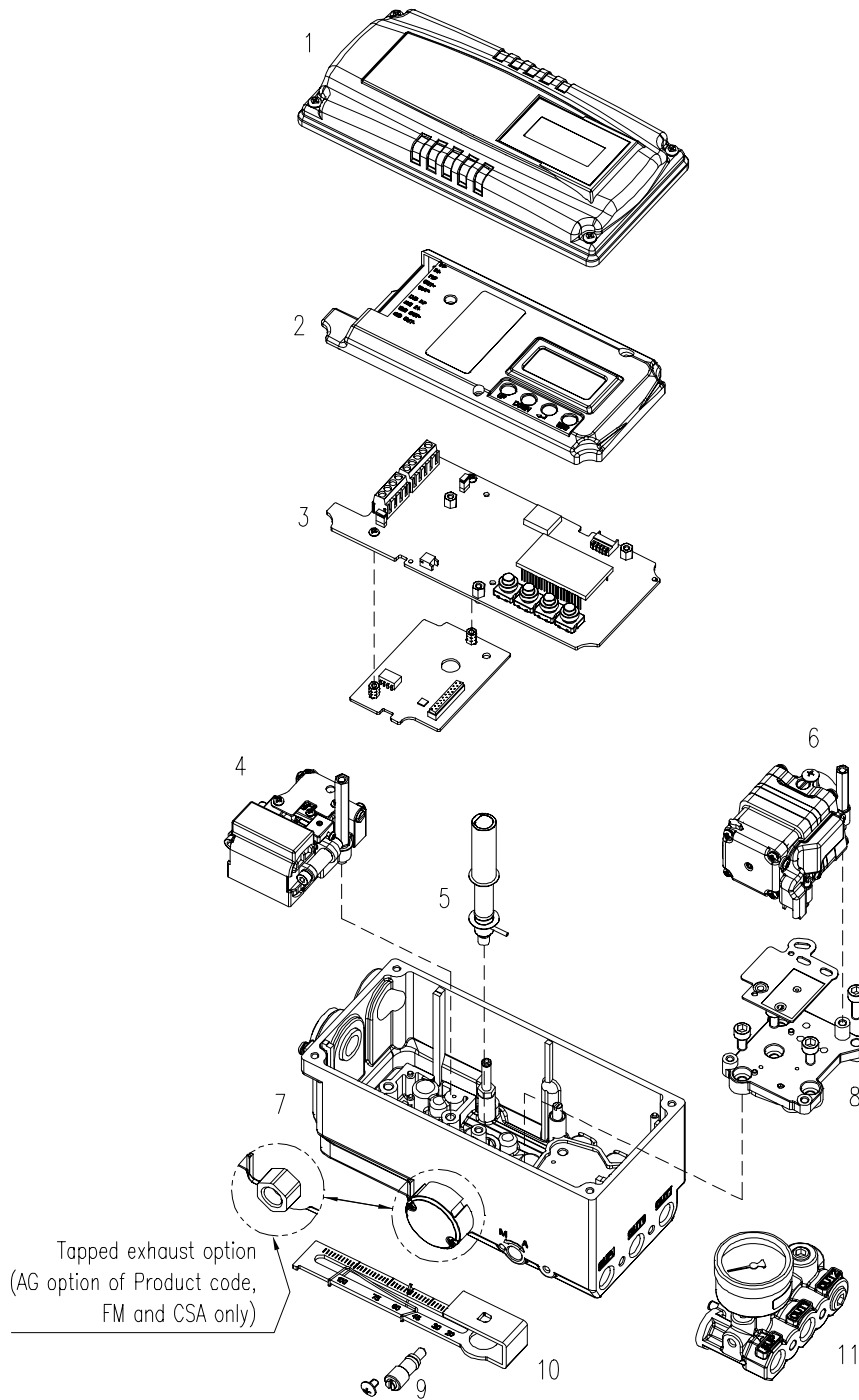


Fig. 2-1: Exploded view of standard type positioner

- | | |
|------------------------|-----------------------|
| 1. Base Cover | 7. Base body |
| 2. PCB Cover | 8. Pilot Block |
| 3. Main PCB | 9. Auto Manual Switch |
| 4. Torque Motor | 10. Feedback Lever |
| 5. Main Shaft(for NCS) | 11. Gauge Block |
| 6. Pilot | |

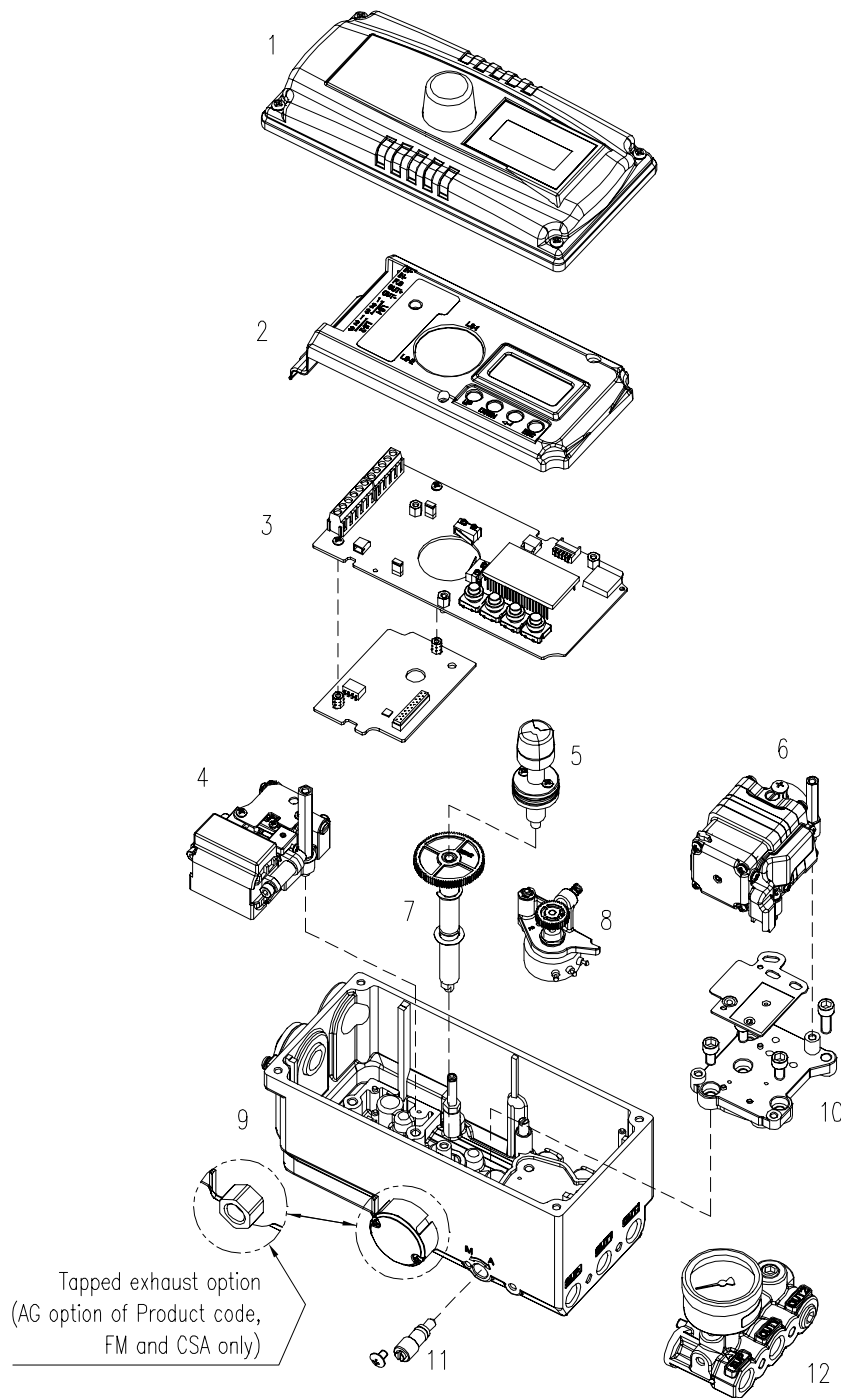


Fig. 2-2: Exploded view of limit switch type positioner

- | | |
|------------------------------------|------------------------|
| 1. Base Cover | 8. Potentiometer |
| 2. PCB Cover | 9. Base body |
| 3. Main PCB(limit switch type) | 10. Pilot Block |
| 4. Torque Motor | 11. Auto Manual Switch |
| 5. Cam assembly | 12. Feedback Lever |
| 6. Pilot | 13. Gauge Block |
| 7. Main Shaft(potentiometer type). | |

2.7.2 YT-3702

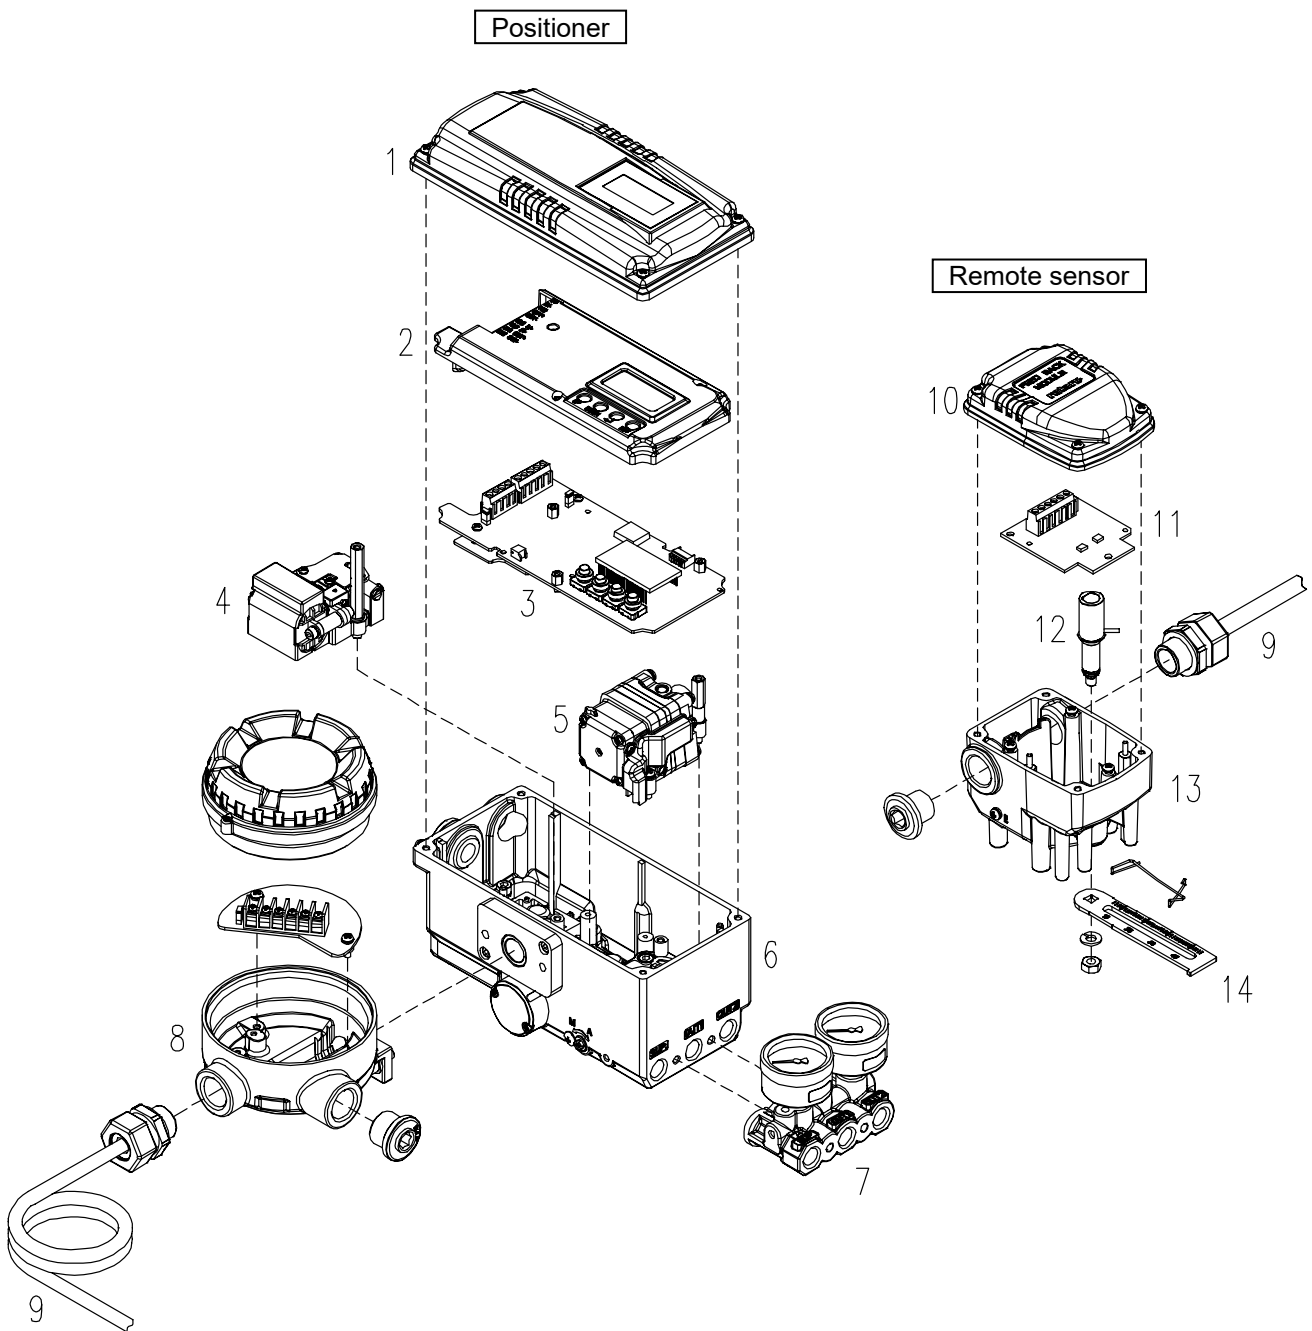


Fig. 2-3: Exploded view

- | | |
|----------------------------------|---------------------------------|
| 1. Base cover of Positioner | 9. Remote cable |
| 2. PCB cover of Positioner | 10. Base cover of remote sensor |
| 3. PCB of Positioner | 11. Terminal of remote sensor |
| 4. Torque motor of Positioner | 12. Main shaft of remote sensor |
| 5. Pilot of Positioner | 13. Base body of remote sensor |
| 6. Base body of Positioner | 14. Lever of remote sensor |
| 7. Gauge block of Positioner | |
| 8. Junction box for remote cable | |

2.8 Product Dimension

2.8.1 YT-3700

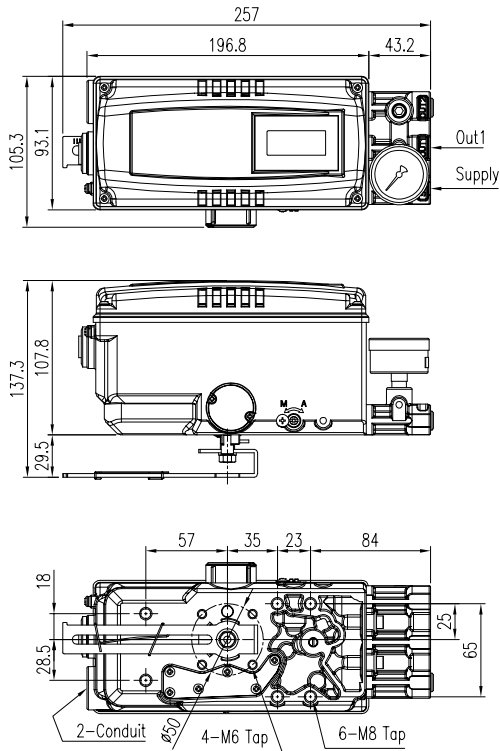


Fig. 2-4: YT-3700L

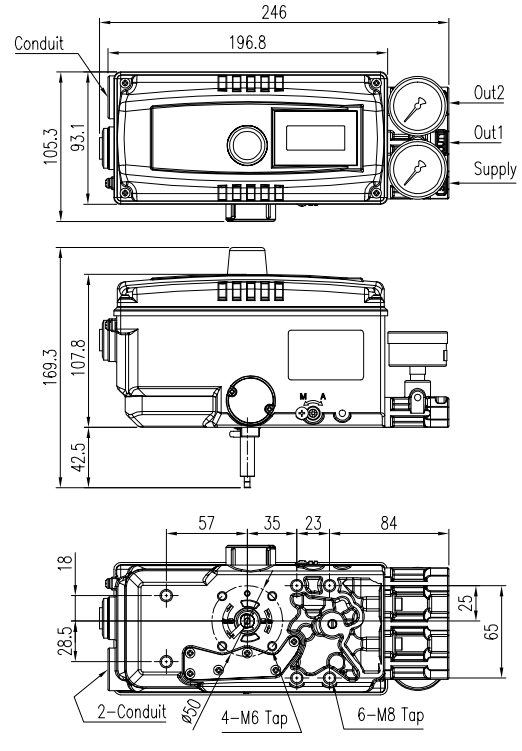


Fig. 2-5: YT-3700R+LS

2.8.2 YT-3750

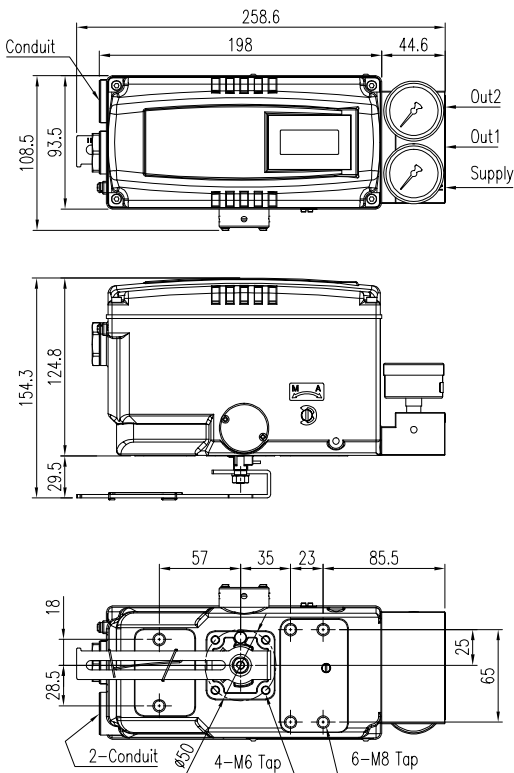


Fig. 2-6: YT-3750L

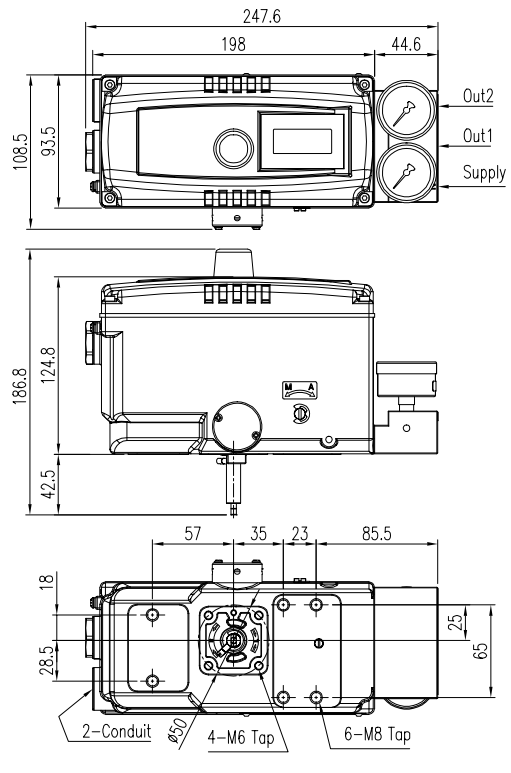


Fig. 2-7: YT-3750R+LS

2.8.3 YT-3702

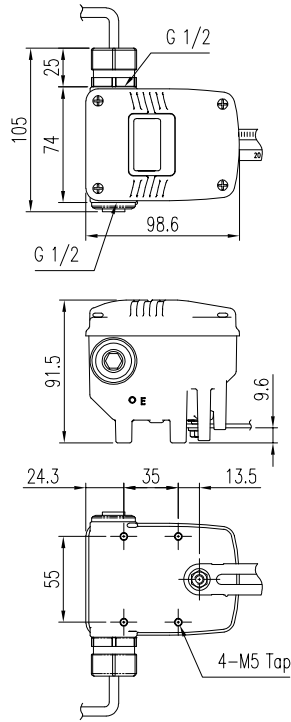


Fig. 2-8: Remote Sensor

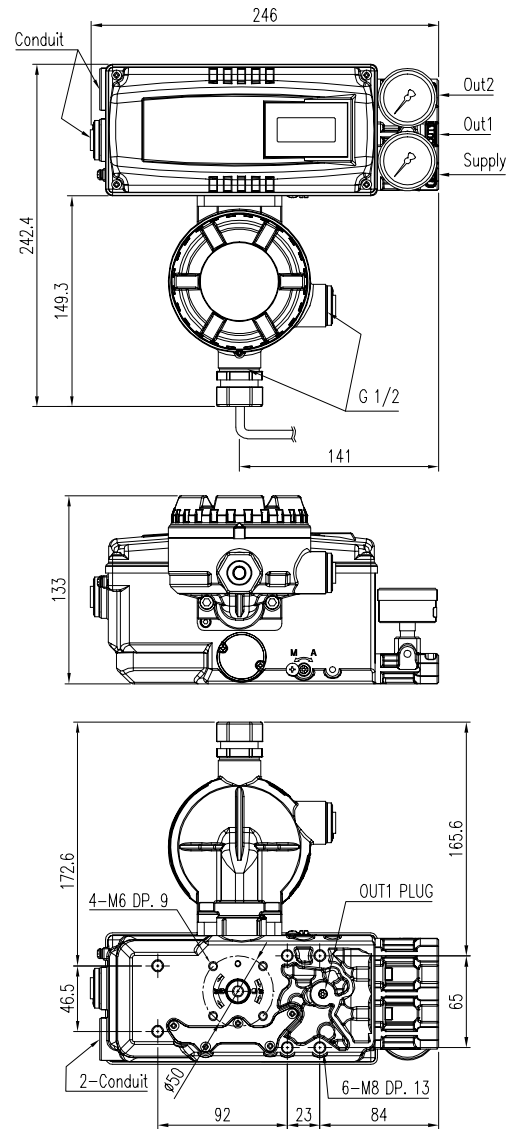


Fig. 2-9: Positioner

3 Installation

3.1 Safety

When installing a positioner, please ensure to read and follow safety instructions.



- Any input or supply pressures to valve, actuator, and / or to other related devices must be turned off.
- Use bypass valve or other supportive equipment to avoid entire system “shut down”.
- Ensure there is no remaining pressure in the actuator.
- The positioner has a vent cover to exhaust internal air and drain internal condensation water. When installing the positioner, make sure the vent cover must be facing downward. Otherwise, the condensation water could cause damages to PCB.

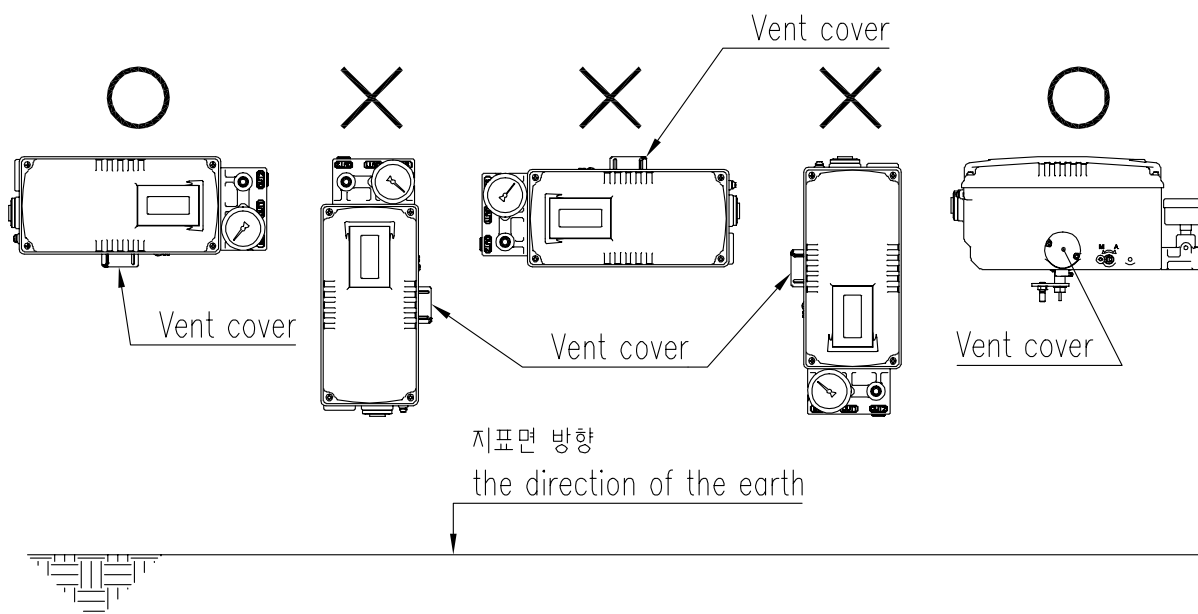


Fig. 3-1: The correct positions of a vent cover

- ※ Installed in accordance with the National Electrical Code(NEC), ANSI/NFPA 70, or CEC Part 1 as applicable.(FM approved product)

3.2 Tools for installation

- Hex key set for hex socket cap bolts
- (+) & (-) Screw drivers
- Spanners for hexagonal-head bolts

3.3 Linear positioner Installation

Linear positioner should be installed on linear motion valves such as globe or gate type which uses spring return type diaphragm or piston actuators.

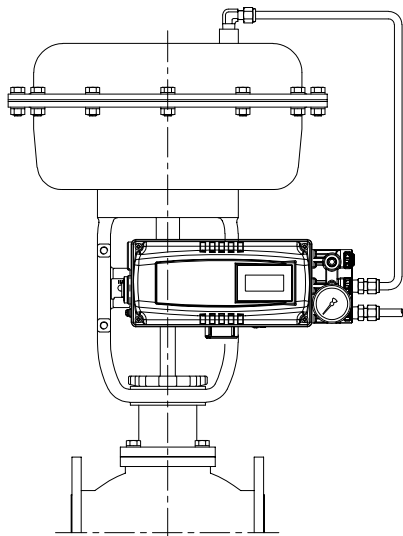


Fig. 3-2: YT-3700L / 3750L Installation example

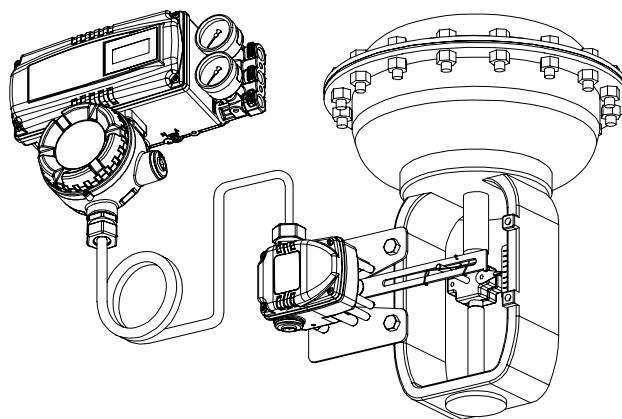


Fig. 3-3: YT-3702L Installation example

Before proceeding with the installation, ensure following components are available.

- Positioner
- Linear remote sensor (Only YT-3702L)
- Remote cable (Only YT-3702L)
- Feedback lever and lever spring
- M6 nut and spring washer (fastening feedback lever to a main shaft)
- Bracket, bolts and washers for positioner or sensor – not supplied with the positioner
- Connection bar – not supplied with the positioner

3.3.1 Safety

Proper bracket must be made in order to adapt the positioner on the actuator yoke.

Please consider following important points when a bracket is being designed.

- Positioner's feedback lever must be vertical to the valve stem at 50 % of the valve stroke.
- The connection bar of the actuator clamp for the feedback lever should be installed in such a way that the valve stroke length coincides with the corresponding figure in "mm" marked on the feedback lever. Improper setting may cause poor linearity



3.3.2 Standard lever type positioner Installation Steps

- 1) Assemble the positioner or remote sensor with the bracket made in previous step by fastening the bolts.

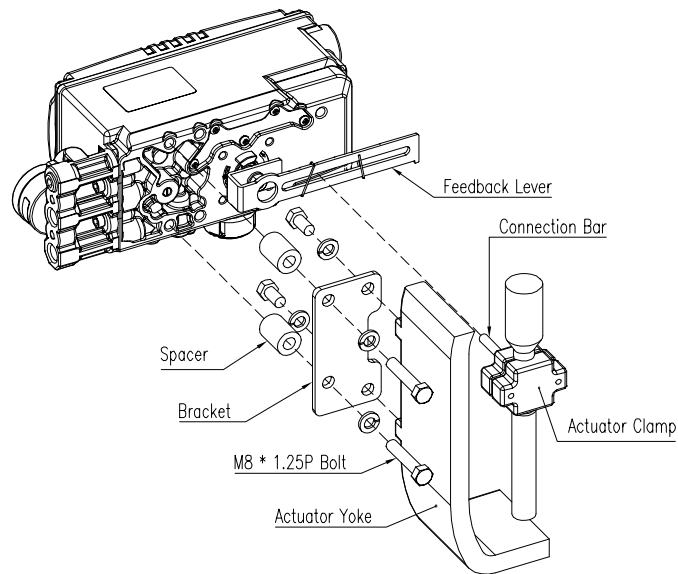


Fig. 3-4: YT-3700 / 3750 Linear positioner, bracket, actuator

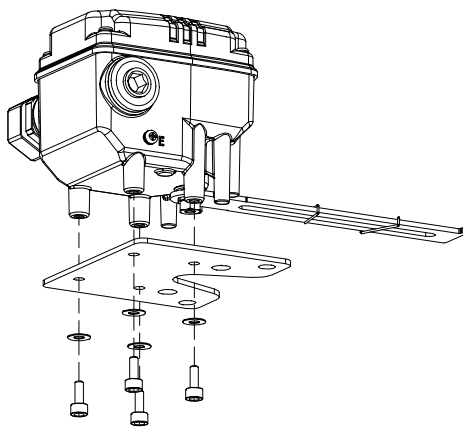


Fig. 3-5: Attaching positioner to bracket
(YT-3702L)

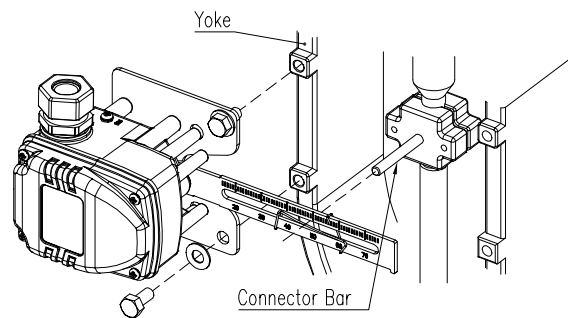


Fig. 3-6: Attaching the bracket to actuator yoke
(YT-3702L)

- 2) Attach the positioner with the bracket to the actuator yoke
– **DO NOT TIGHTEN THE BRACKET COMPLETELY.**
- 3) Connect connection bar to the actuator clamp. The hole gap on the feedback lever is 6.5 mm so the connection bar's outer diameter should be less than 6 mm.

- 4) Connect an air-filter regulator to the actuator temporarily. Supply enough air pressure to the actuator in order to position the valve stroke at 50 % of the total stroke.

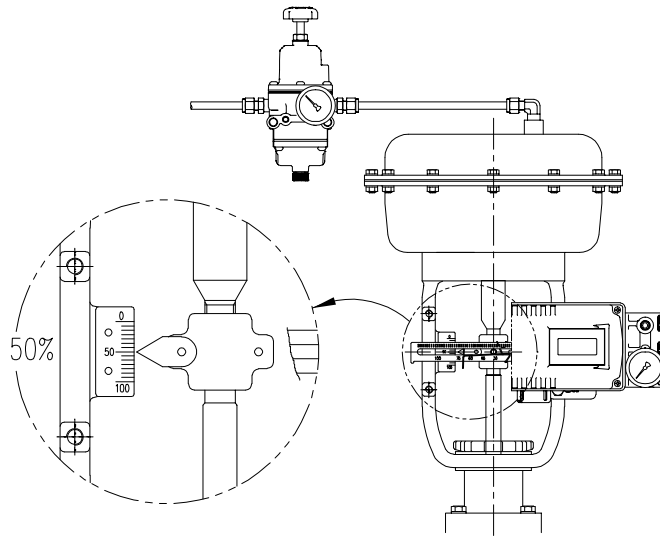


Fig. 3-7: YT-3700L / 3750L

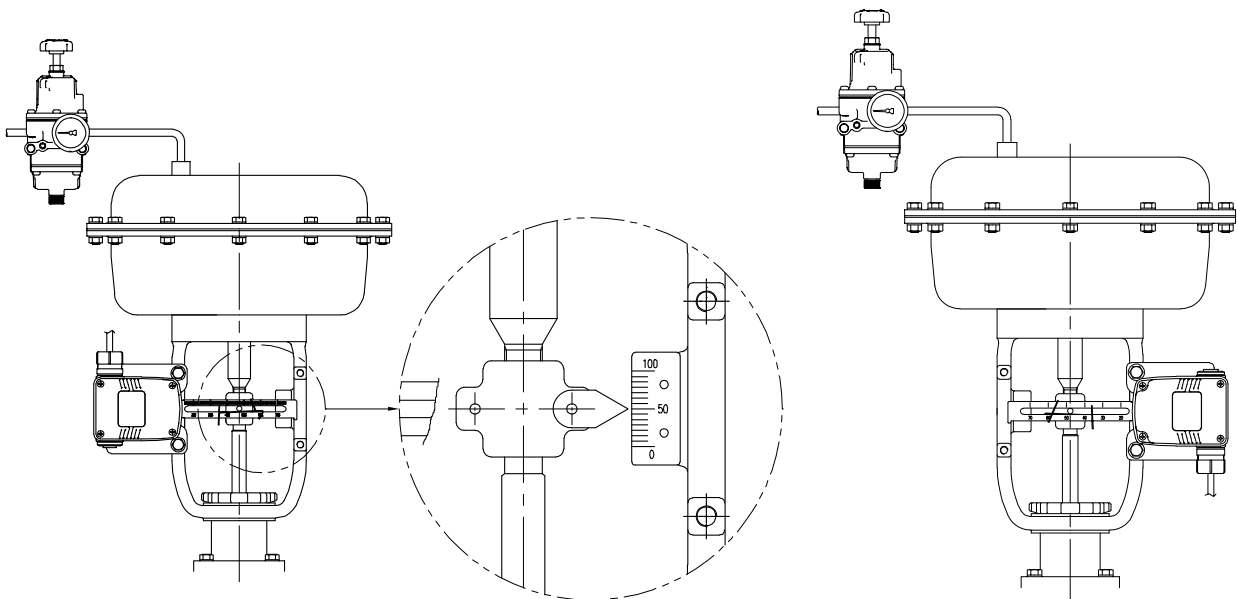


Fig. 3-8: Attaching YT-3702L to left yoke of actuator

Fig. 3-9: Attaching YT-3702L to right yoke of actuator

- 5) Insert the connection bar between the feedback lever and lever spring. The connection bar must be located upward from the lever spring as shown below left figure. If it is located downward from the lever spring as shown below right figure, the connection bar or the lever spring will be worn out quickly because of excessive strong tension.

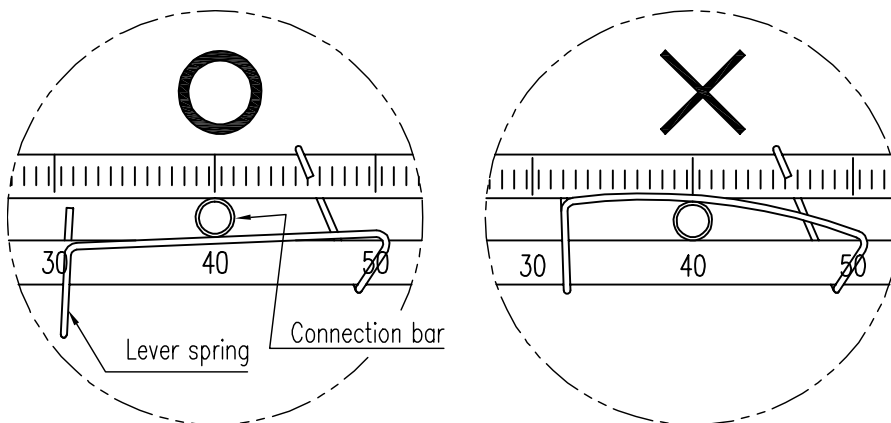


Fig. 3-10: Proper way to insert connection bar between feedback lever and lever spring

- 6) Check if feedback lever is vertical to the valve stem at 50 % of the valve stroke. If it is not vertical, adjust the bracket or the connection bar to make vertical. Improper installation may cause poor linearity.

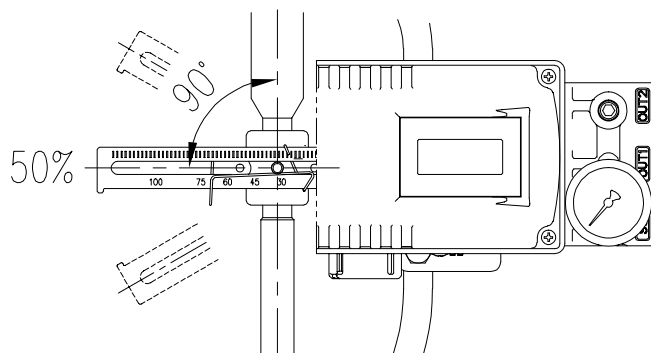


Fig. 3-11: YT-3700L / 3750L Feedback lever and valve stem

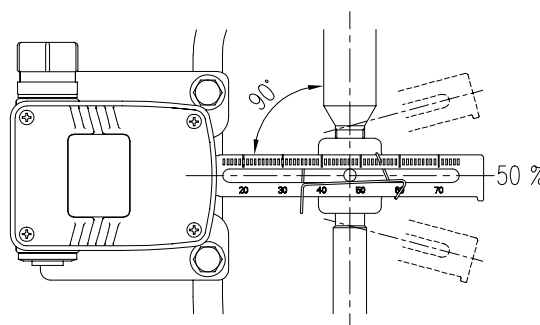


Fig. 3-12: YT-3702L Feedback lever and valve stem

- 7) Check the valve stroke. The stroke numbers are engraved on the feedback lever of the positioner. Position the connection bar at the number on the feedback lever which corresponds with the desired valve stroke. To adjust, move the bracket, the connection bar or both.

※ The effective linear lever angle of YT-3700L / 3750L is 60 degree and it of YT-3702L is 30 degree.

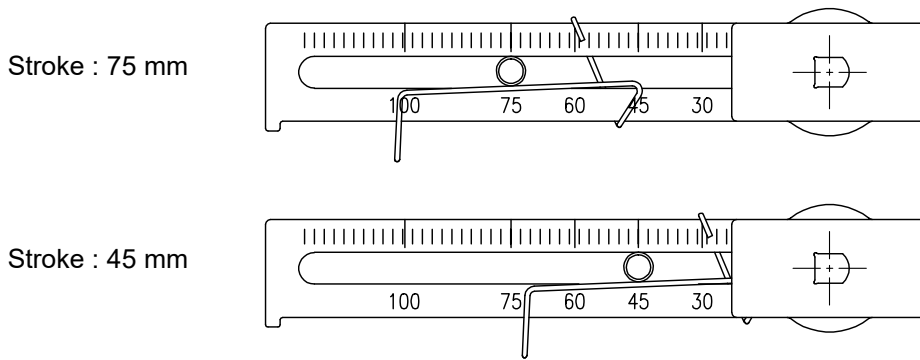


Fig. 3-13: YT-3700L / 3750L Feedback lever and location of the connection bar

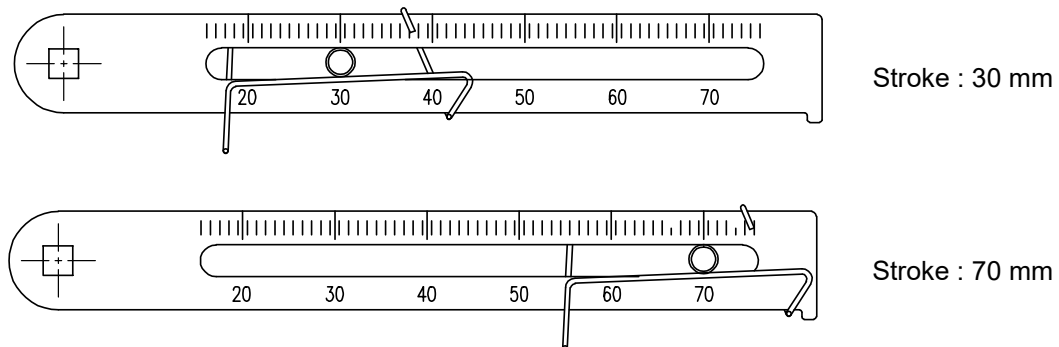


Fig. 3-14: YT-3702L Feedback lever and location of the connection bar



- 8) After installing the positioner, operate the valve from 0 % to 100 % stroke by using direct air to the actuator. On both 0 % and 100 %, the feedback lever should not touch the lever stopper, which is located on the backside of the positioner. If the feedback lever touches the stopper, the positioner should be installed further away from center of the actuator.

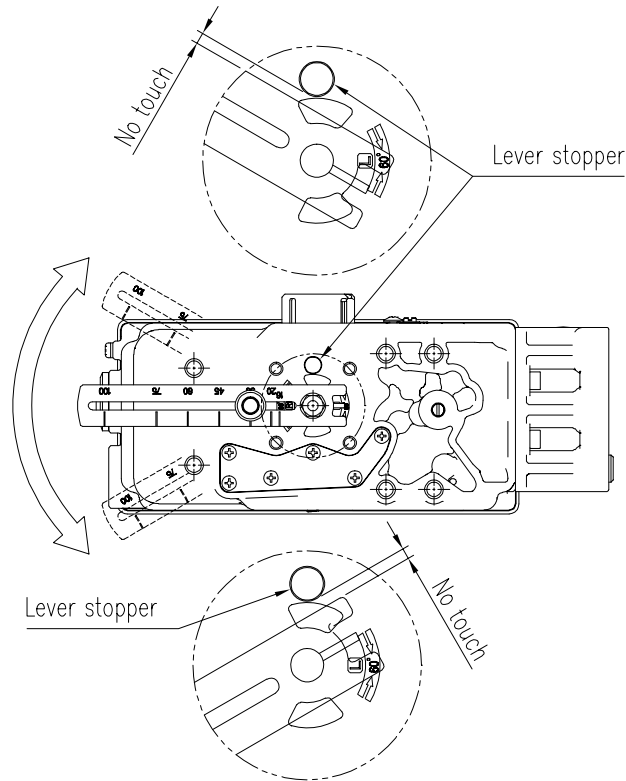


Fig. 3-15: YT-3700L / 3750L Feedback lever should not touch lever stopper on 0 % to 100 % valve stroke.

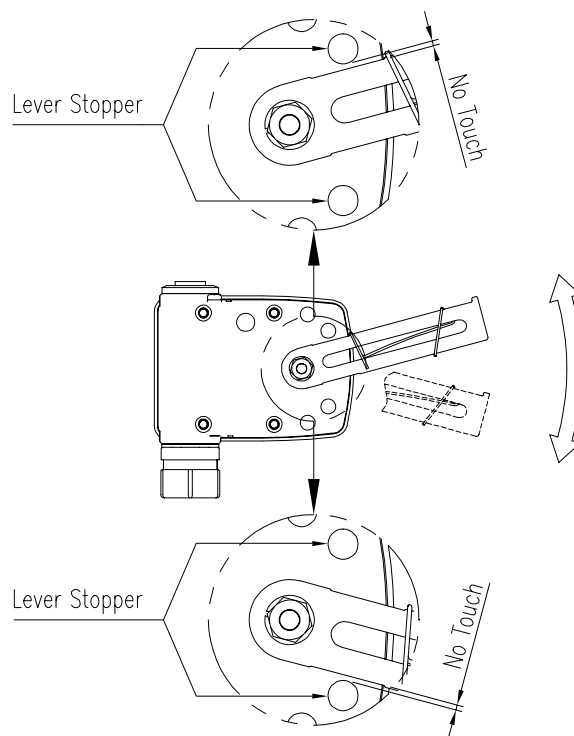


Fig. 3-16: YT-3702L Feedback lever should not touch lever stopper on 0 % to 100 % valve stroke.

- 9) After the installation, tighten all of the bolts on the bracket and the connection bar.

3.4 Rotary positioner Installation

Rotary positioner should be installed on rotary motion valve such as ball or butterfly type which uses rack and pinion, scotch yoke or other type of actuators which its stem rotates 90 degrees. Before proceeding with the installation, ensure following components are available.

3.4.1 YT-3700R / 3750R Components

- Positioner
- Rotary bracket set (2 pieces)
- 4 pcs x wrench headed bolts (M6 x 1P x 10L) : For the positioner and the upper bracket
- 4 pcs x wrench headed bolts (M6 x 1P x 15L) : For the brackets
- 4 pcs x M6 nuts : For the brackets
- 4 pcs x M6 spring washers : For the brackets
- Bolts and washers to attach the lower bracket to actuator – not supplied with the positioner

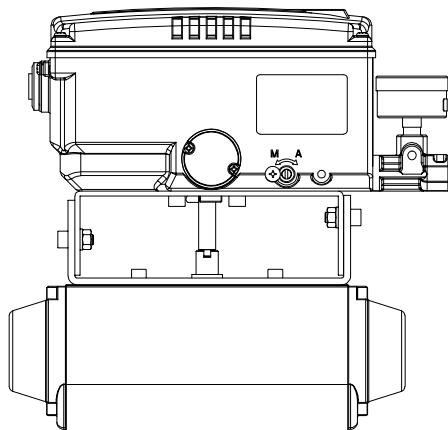


Fig. 3-17: YT-3700R / 3750R Installation example

3.4.2 YT-3702R remote sensor components

- Rotary remote sensor
- Rotary bracket set (2 pieces)
- 4 pcs x wrench headed bolts (M5 x 0.8P x 12L) : For the positioner and the upper bracket
- 4 pcs x wrench headed bolts (M5 x 0.8P x 12L) : For the brackets
- 4 pcs x M5 nuts : For the brackets
- 4 pcs x M5 spring washers : For the brackets
- Bolts and washers to attach the lower bracket to actuator – not supplied with the positioner

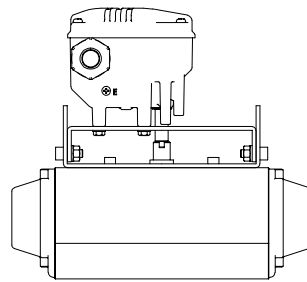


Fig. 3-18: YT-3702R Rotary remote sensor

3.4.3 Rotary Bracket Information (Only YT-3700R / 3750R)



The rotary bracket set (included with the positioner) contains two components. The bracket is designed to fit onto the actuator with 20 mm, 30 mm and 50 mm stem height (H) according to VDI/VDE 3845 standard. Please refer to below table how to adjust the height of the bracket.

Actuator stem height (H)	Markings of bolt holes			
	A-L	B-L	A-R	B-R
20 mm	H : 20	H : 20, 30	H : 20	H : 20, 30
30 mm	H : 30	H : 20, 30	H : 30	H : 20, 30
50 mm	H : 50	H : 50	H : 50	H : 50

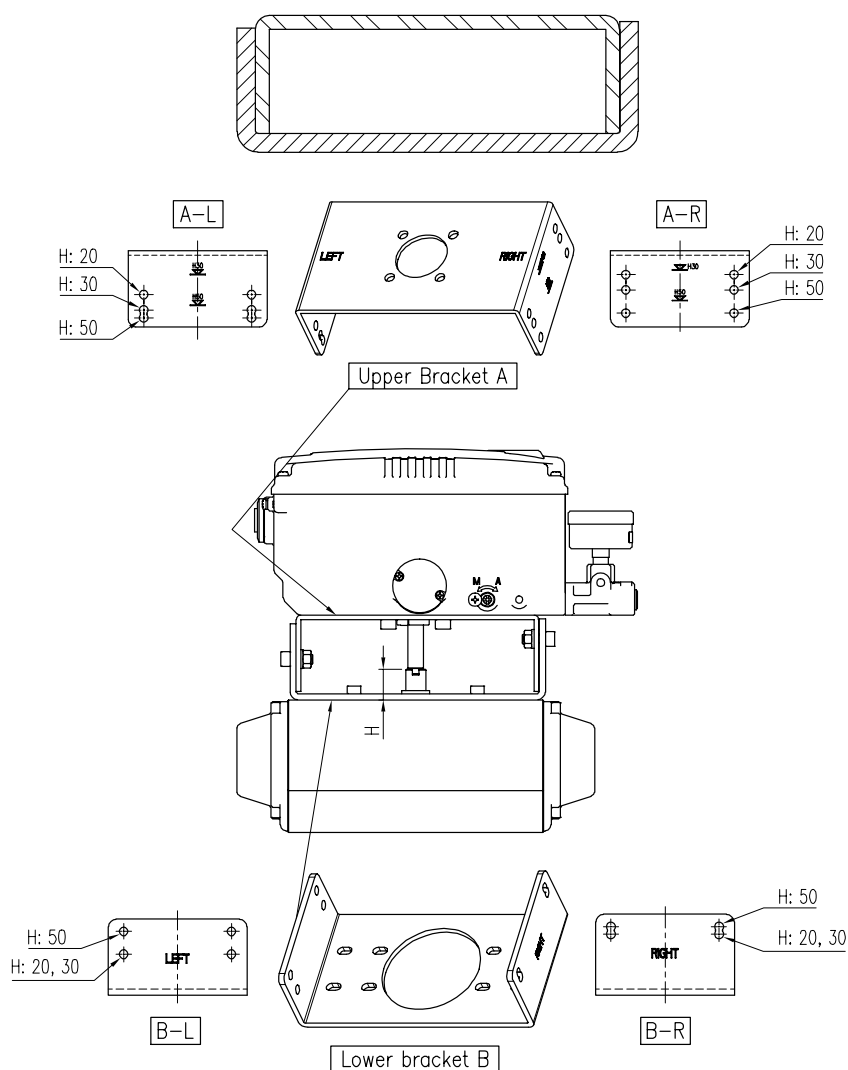


Fig. 3-19: Brackets and positioner

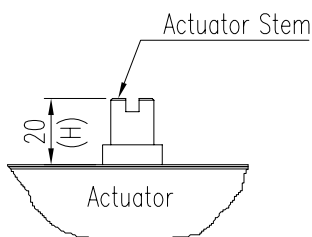


Fig. 3-20: Actuator stem Height

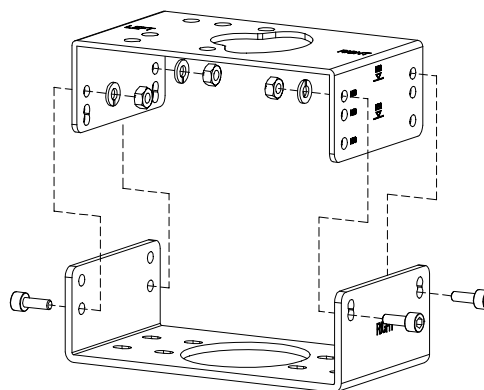


Fig. 3-21: Exploded Brackets

3.4.4 Rotary positioner Installation Steps

- 1) Please check the actuator's stem height and adjust the brackets by referring to the above bracket table.
- 2) Attached the brackets onto the actuator. It is recommended to use spring washer so the bolts will not be loosen from vibration.
- 3) Set rotation position of the actuator stem at 0 %. For single acting actuator, it is easy to check 0 % point by supplying no pressure to the actuator. For double acting actuator, check actuator stem's rotation direction – clockwise or counter-clockwise - by supplying pressure to the actuator.



- 4) Attach the positioner to the bracket. Setting alignment of center of main shaft of the positioner and center of the actuator's stem is very important. Poor alignment of the main shaft and the actuator's stem decreases the positioner's durability due to unnecessary forces on the main shaft.

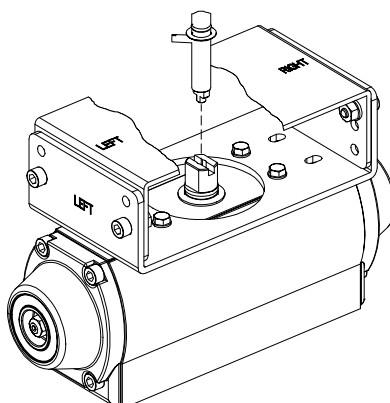


Fig. 3-22: Main shaft center alignment

- 5) After installing the positioner, operate the valve from 0 % to 100 % stroke by using direct air to the actuator. On both 0 % and 100 %, the indicator should not touch the indicator stopper, which is located on the backside of the positioner. If the indicator touches the indicator stopper, recheck the installation position and angle of the positioner.

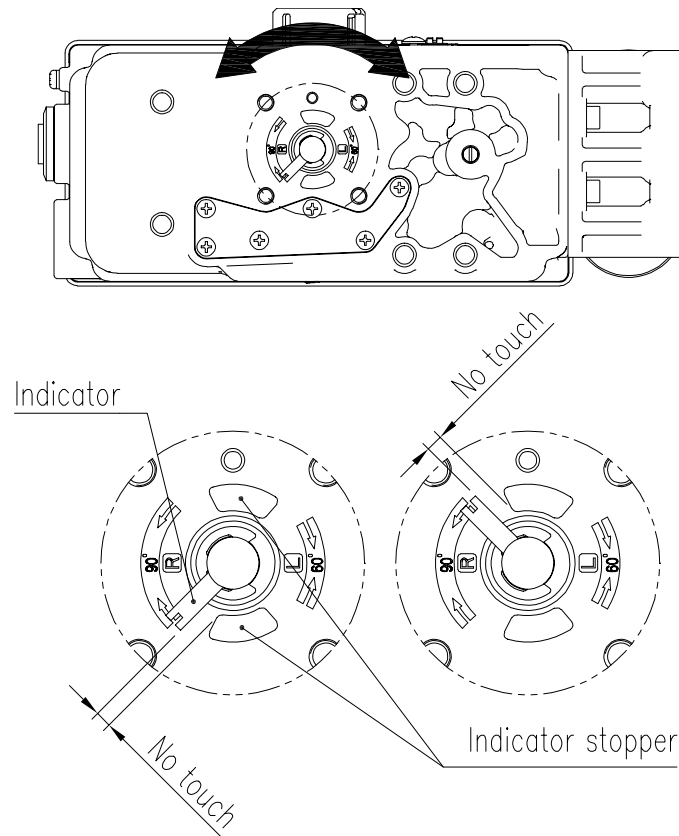


Fig. 3-23: Indicator should not touch indicator stopper on 0 % to 100 % valve stroke.

- 6) Tighten the positioner and the bracket with bolts **after checking the positioner's position.**

4 Connection - Air

4.1 Safety

- Supply pressure should be clean and dry air – avoiding moisture, oil and dust.
- Always recommended to use air filter regulator (i.e. YT-200 series).
- Tapped Exhaust (AG option) is used when it is required to vent away the Group D gases to a safe area. Tapped Exhaust for use in FM & CSA Division approved hazardous locations must be sealed to prevent leaks at the 1/4" NPT connection for use with Division Group D gases such as natural gas or methane as the process medium.

4.2 Supply Pressure Condition



- Dry air with dew point of at least 10 °C lower than ambient temperature.
- Avoid from dusty air. Use 5 micron or smaller filter.
- Avoid oil.
- Comply with ISO 8573-1 or ISA 7.0.01.
- Supply pressure range is 0.14 to 0.7 MPa (1.4 to 7 bar)
- Set air filter regulator's pressure level 10% higher than actuator's spring range pressure.

4.3 Piping Condition



- Ensure inside of pipe is clean of obstructions.
- Do not use pipeline that is squeezed or shows any type of damages.
- Pipeline should have more than 6 mm of inner diameter (10 mm outer diameter) to maintain flow rate.
- The length of pipeline system should not be extremely long. Longer pipeline system may affect flow rate due to the friction inside of the pipeline.

4.4 Connection – Piping with actuator

4.4.1 Single acting actuator

Single acting type positioner is set to use only OUT1 port. OUT1 port of positioner should be connected with supply port of actuator when using spring return actuator of single acting type.

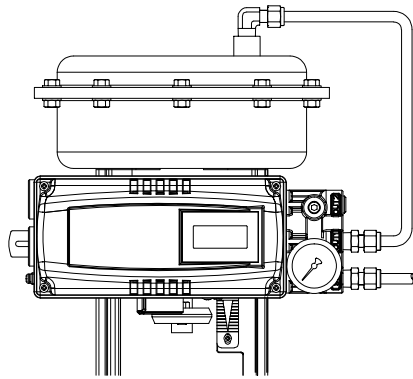


Fig. 4-1: Single acting linear actuator (YT-3700L / 3750L)

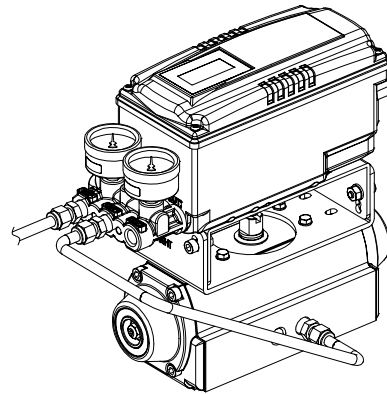


Fig. 4-2: Single acting rotary actuator (YT-3700R / 3750R)

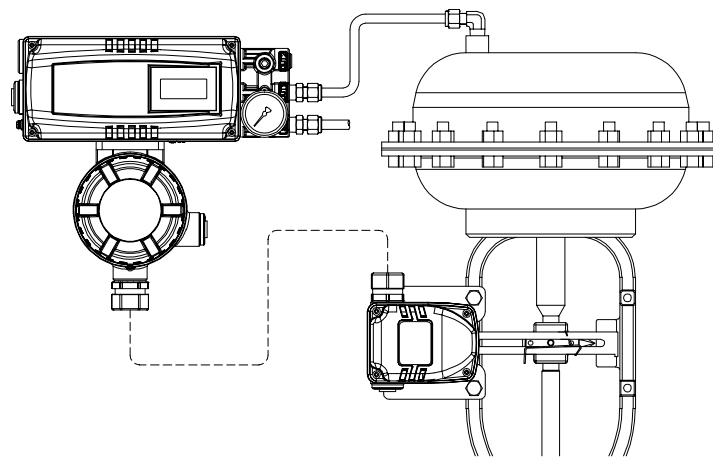


Fig. 4-3: Single acting linear actuator (YT-3702L)

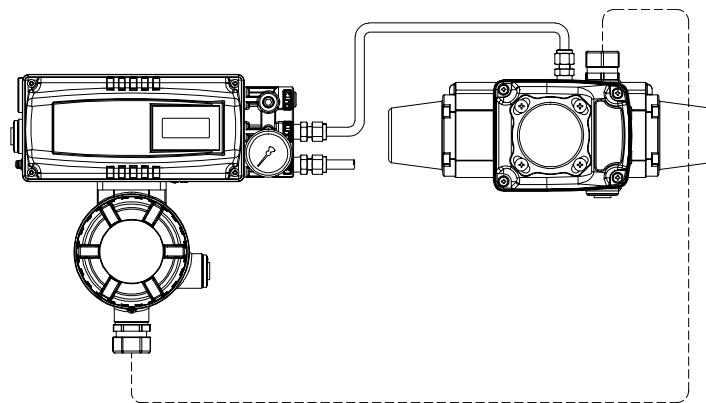


Fig. 4-4: Single acting rotary actuator (YT-3702R)

4.4.2 Double acting actuator

Double acting type positioner is set to use OUT1 and OUT2 port. As input signal increases, the supply pressure will be supplied through OUT1 port.

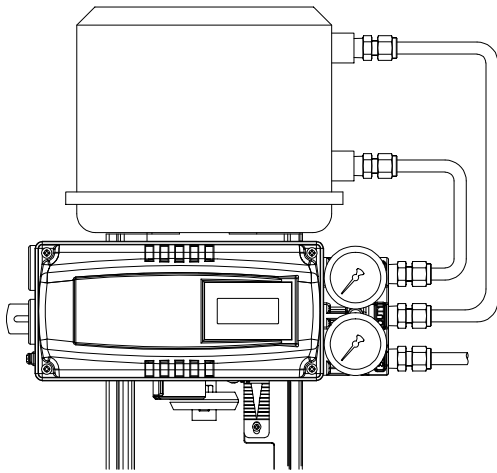


Fig. 4-5: Double acting linear actuator (YT-3700L / 3750L)

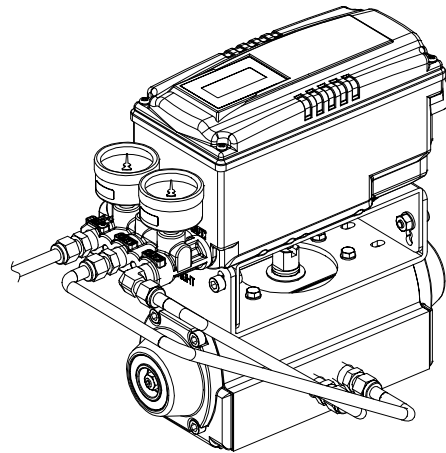


Fig. 4-6: Double acting rotary actuator (YT-3700R / 3750R)

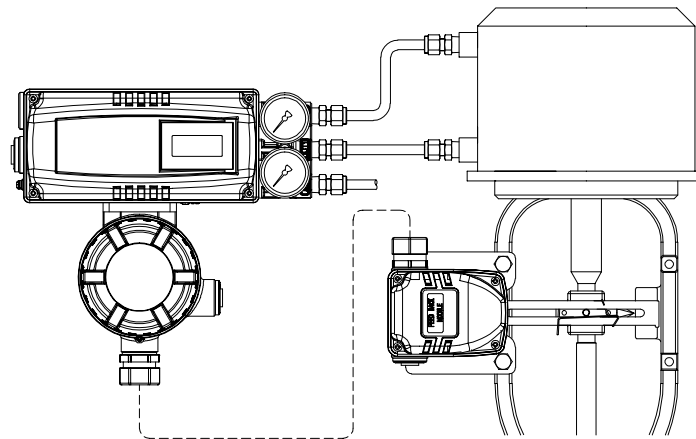


Fig. 4-7: Double acting linear actuator (YT-3702L)

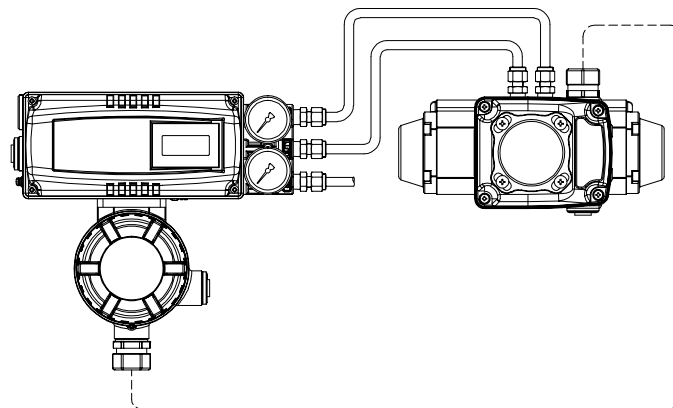


Fig. 4-8: Double acting rotary actuator (YT-3702R)

5 Connection – Power

5.1 Safety



- There are two conduit entries on the product. See “2.4 Product Code” for conduit entry threads.
- Before connecting terminal, ensure that the power is off completely.
- Please use ring terminal to protect against vibration or any other external impact.
- Positioner usually uses 4-20 mA DC. Minimum ampere of input signal is 3.8 mA but maximum ampere of input signal should be 24 mA or under.
- Compliance voltage of current source must be Min. 10 V and Max. 28 V. If the length of the supply cable between the current source and the positioner is long, or if there is a filter or safety barrier, then consider using a current source which could supply higher Compliance voltage.
- Positioner with 4-20 mA Analog Output option must be supplied with **9 to 28 V DC** separately. For mechanical limit switch option, separate **12 to 30 V DC** must be supplied. For inductive proximity limit switch option, separate **8.2 V DC** must be supplied.
- **DO NOT connect Voltage source (9 to 28 V DC) to Input (4-20 mA DC) terminal (IN+, IN-) as it will cause PCB failure.**
- Positioner should be grounded.
- Please use twisted cable with conductor section are 1.25 mm² and that is suitable for 600 V (complying with the conductor table of NEC Article 310). The outer diameter of the cable should be between 6.35 to 10 mm. Use shield wire to protect against electro-magnetic field and noise.
- Please do not install the cable near high noise equipment, such as high-capacity transformer or motor.
- Please ensure that keep away magnetic materials from a product. It may cause malfunction. For a magnetic screwdriver, It must be away more than 30 cm from the positioner.
- CSA : the power to the positioner must be supplied by a source that is a limited energy electric circuit in accordance with CAN/CSA C22.2 No. 61010-1-12, or Class 2 as defined in the Canadian Electrical Code C22.1, Section 16-200

5.2 Connection

5.2.1 Standard Terminals

The input/output terminals of the basic model are connected to an external system as shown below. Refer to the table below for the signal name and function of each terminal.

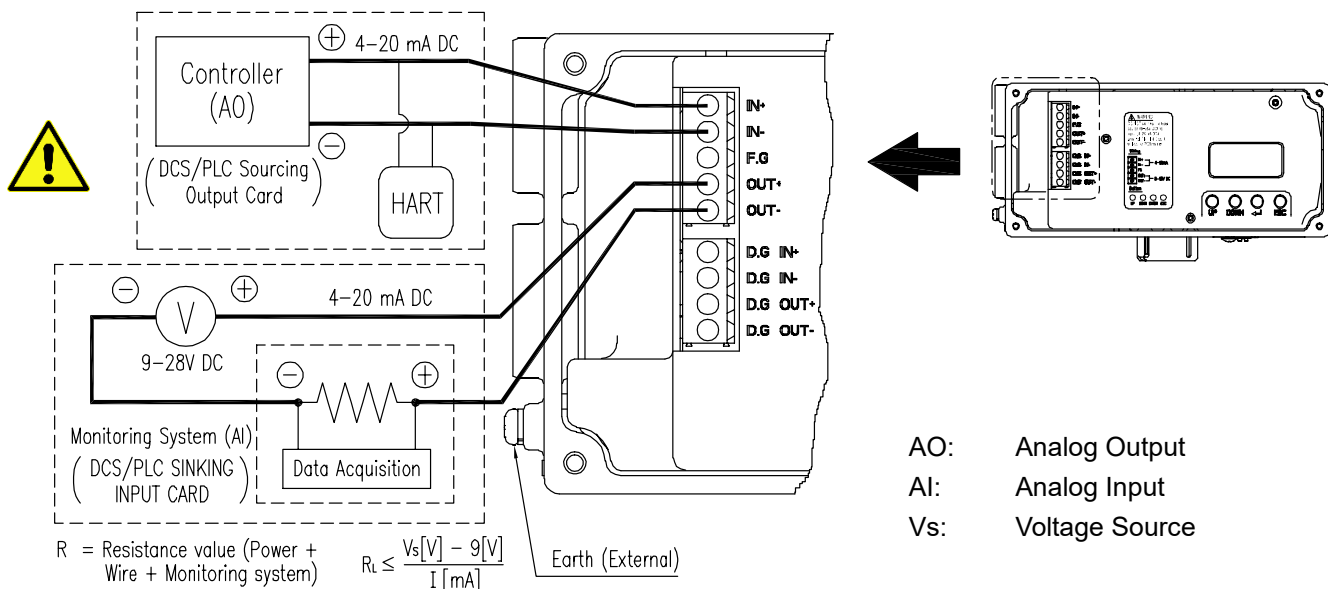


Fig. 5-1: Terminal Overview 1

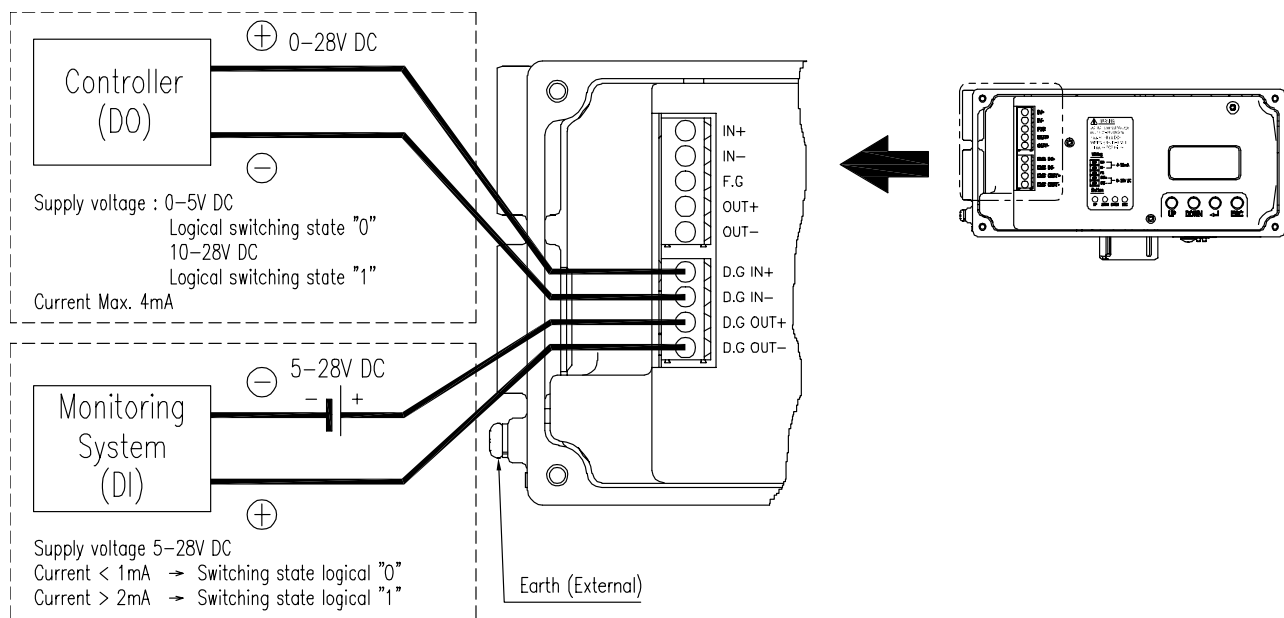


Fig. 5-2: Terminal Overview 2

Terminal name	Signal name	Function
IN+	Current input signal (+)	Apply analog current command 4-20 mA to this terminal to supply power and signal to the positioner.
IN-	Current input signal (-)	
F.G	Safety ground	Safety ground
OUT+	Analog output signal (+)	Analog output signal indicating the position of the current valve (4-20 mA)
OUT-	Analog output signal (-)	
D.G IN+	Digital input signal (+)	A digital input that performs a specific function. The 0 to 5 V input is defined as Low level, and the 10 to 28 V input is defined as High level. (Refer to "9.9.11 Digital Input Function and 9.9.12 Digital Input Logic")
D.G IN-	Digital input signal (-)	
D.G OUT+	Digital output signal (+)	A digital output signal that is activated when a specific event or alarm is triggered. When the output is activated by Low logic at the input voltage range of 5 to 28 VDC, no current flows to the output port, and when it is activated by High logic, the current flows between 2.2 and 14.0 mA. (Refer to "9.10.6 Digital Output Logic")
D.G OUT-	Digital output signal (-)	

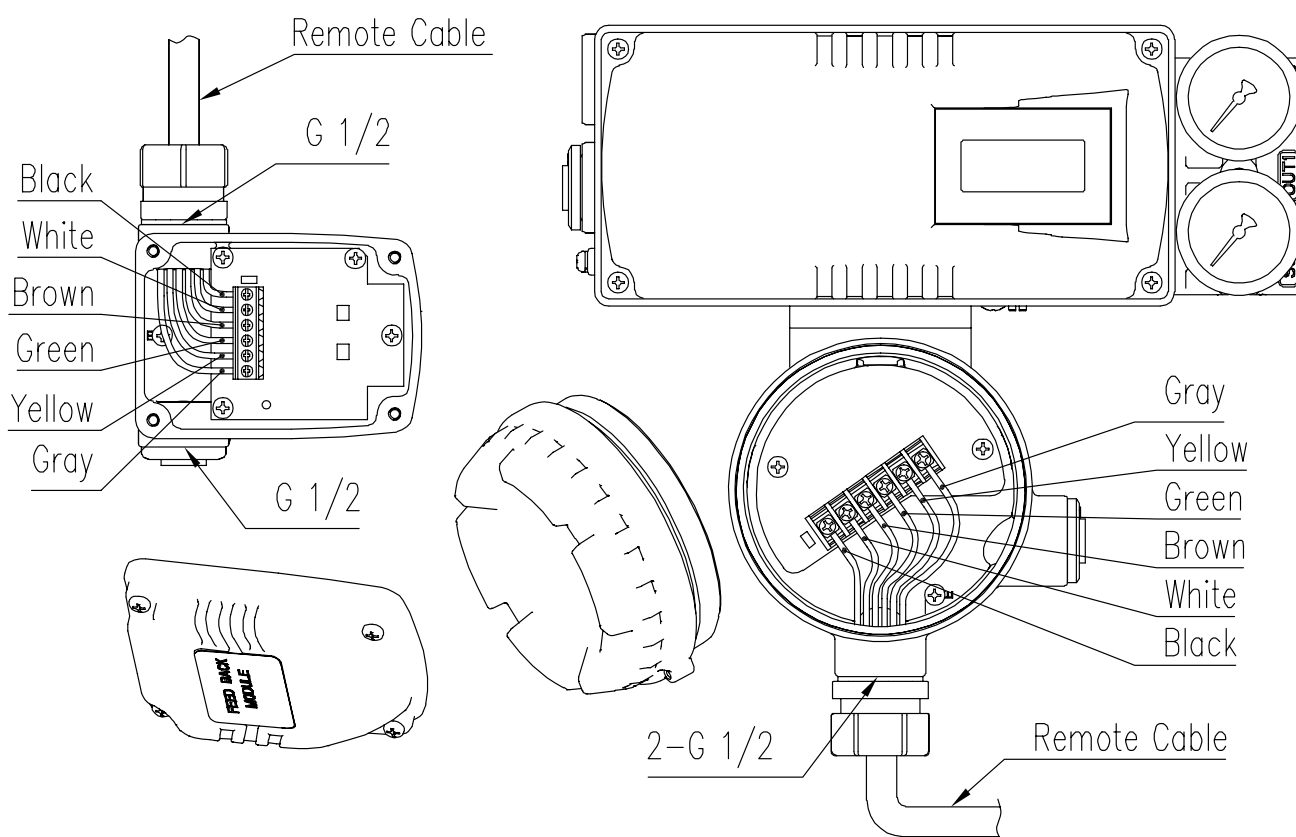


Fig. 5-3: Terminal Overview of remote sensor and junction box of YT-3702

5.2.2 Terminals with micro-limit switch option (Only YT-3700 / 3750)

The input and output terminals of products equipped with micro-limit switches can be connected to an external system as shown below. Refer to the table below for the signal name and function of each terminal.

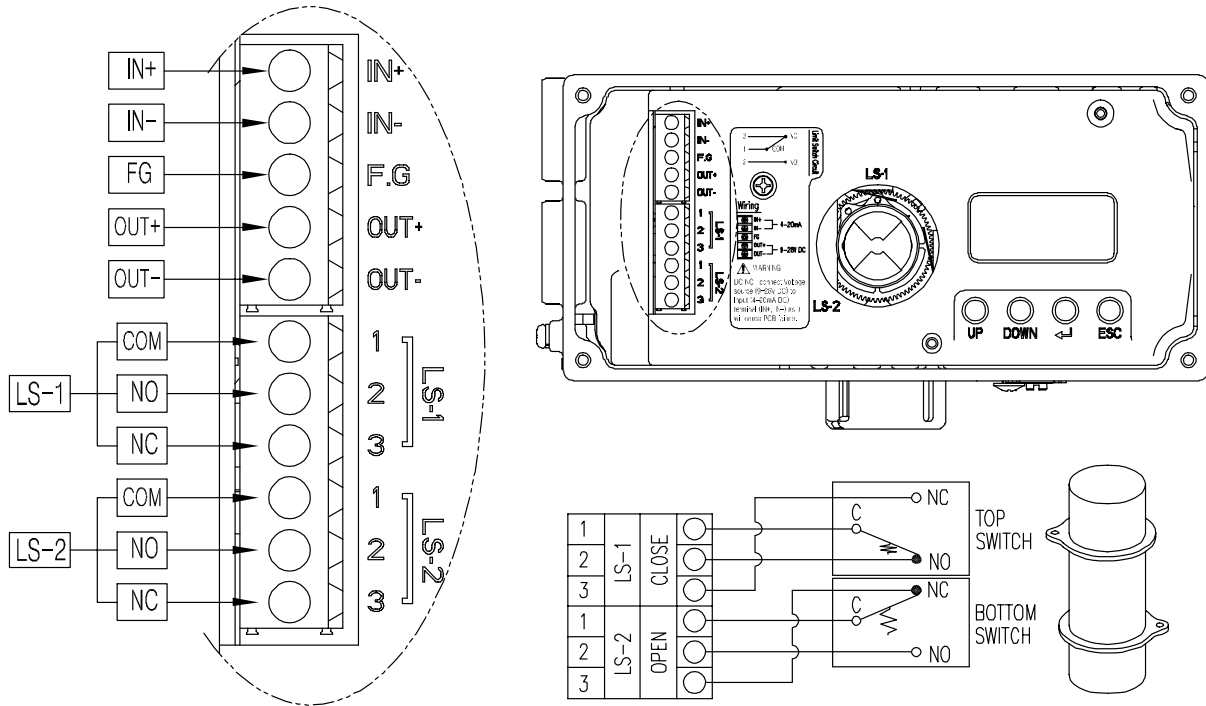


Fig. 5-3: Terminal of two Mechanical Switches

Terminal name	Signal name	Function
1, LS-1	Common terminal for Limit Switch 1	Common contact terminal for Limit Switch 1
2, LS-1	Normal open signal for Limit Switch 1	The contact of the Limit Switch 1 is closed when the valve passes through the preset position.
3, LS-1	Normal close signal for Limit Switch 1	The contact of the Limit Switch 1 opens when the valve passes through the preset position.
1, LS-2	Common terminal for Limit Switch 2	Common contact terminal for Limit Switch 2
2, LS-2	Normal open signal for Limit Switch 2	The contact of the Limit Switch 2 is closed when the valve passes through the preset position.
3, LS-2	Normal close signal for Limit Switch 2	The contact of the Limit Switch 2 opens when the valve passes through the preset position.

5.2.3 Terminals with inductive proximity Limit Switch option (Only YT-3700 / 3750)

The input and output terminals of products equipped with inductive proximity limit switch switches can be connected to an external system as shown below. Refer to the table below for the signal name and function of each terminal.

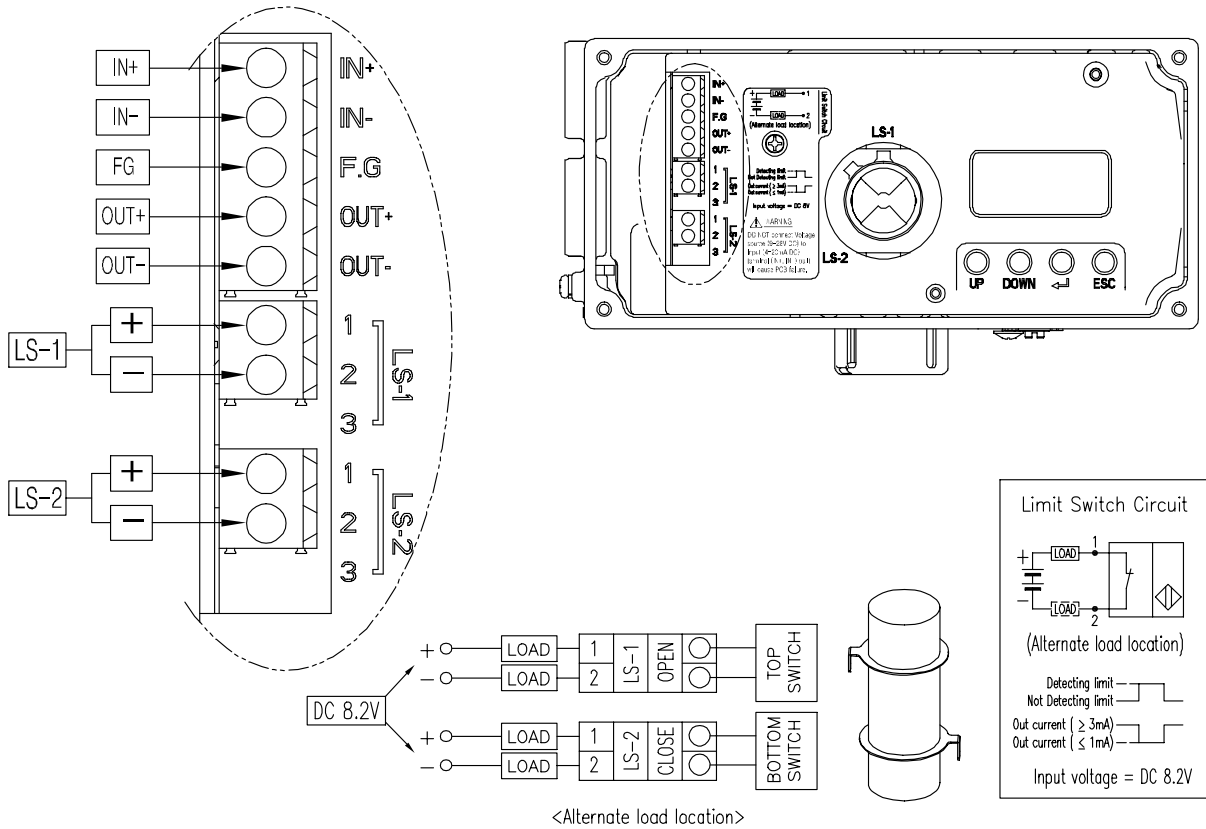


Fig. 5-4: Terminal of two Inductive proximity Sensor Switches

Terminal name	Signal name	Function
1, LS-1	Common terminal for Limit Switch 1	Common contact terminal for Limit Switch 1
2, LS-1	Normal open signal for Limit Switch 1	The contact of the Limit Switch 1 is closed when the valve passes through the preset position.
3, LS-1	No connection	Not used
1, LS-2	Common terminal for Limit Switch 2	Common contact terminal for Limit Switch 2
2, LS-2	Normal close signal for Limit Switch 2	The contact of the Limit Switch 1 opens when the valve passes through the preset position.
3, LS-2	No connection	Not used

5.3 Ground

- 1) Ground must be done before operating the positioner.
- 2) Open base cover and there is an internal ground "F.G" on the left hand.

An external ground bolt is located next to the conduit entry. Please make sure that the resistance is less than 100 ohm.

6 Adjustments

6.1 Limit Switch Adjustment (Only YT-3700 / 3750)

YT-3700 / 3750 can have limit switch option. If user wants to adjust the sensing positions, please loosen bolts and adjust cam.

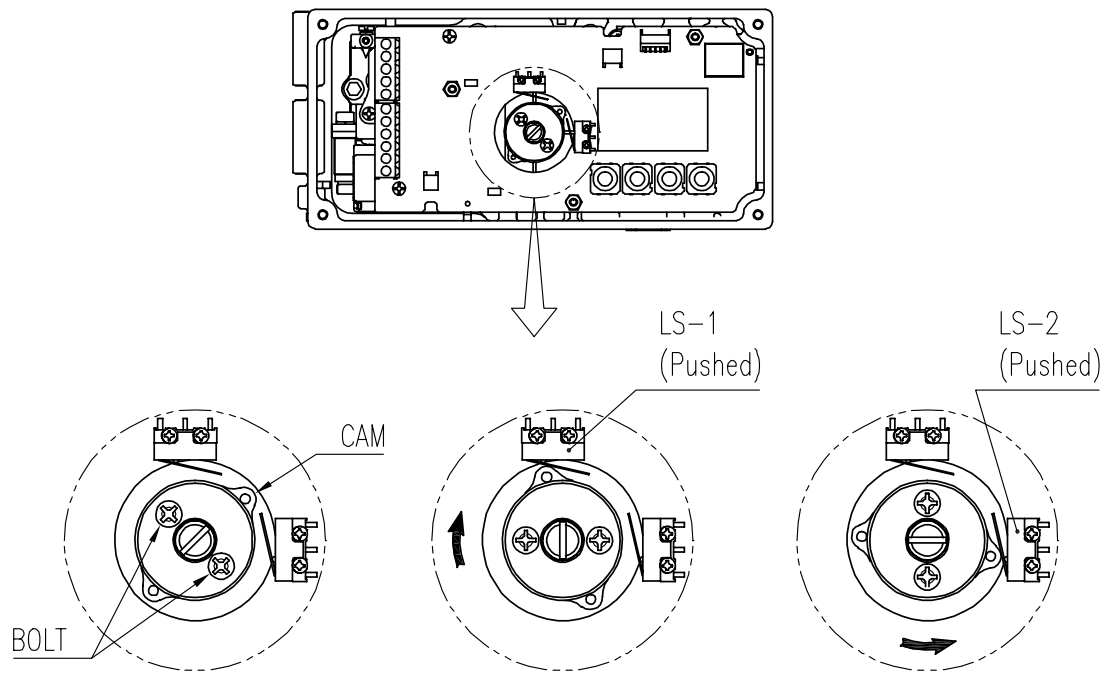


Fig. 6-1: Mechanical Type

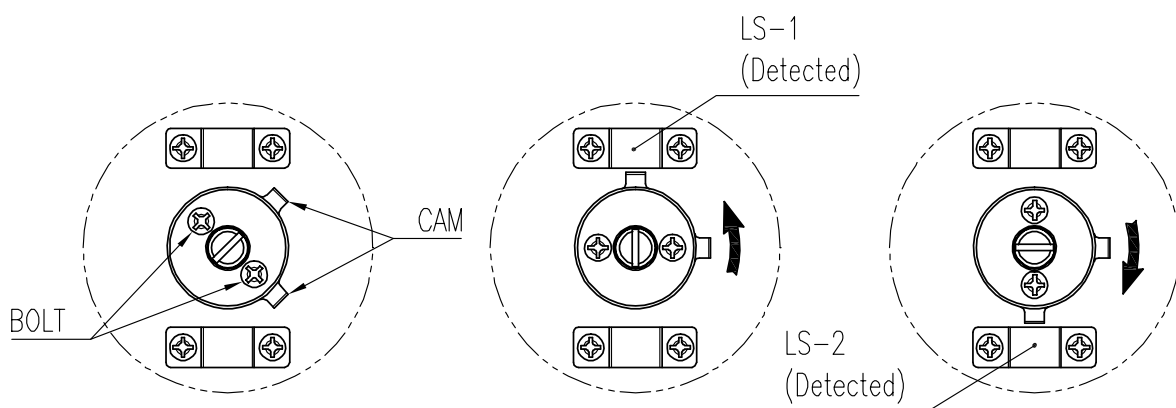


Fig. 6-2: Inductive proximity Type

6.2 A/M switch adjustment

- 1) On the right hand bottom of positioner, there is A/M switch (Auto/Manual). A/M Switch allows the positioner to be functioned as by-pass. If the switch is turned clockwise (toward “A”) and it is fastened tightly, then the supply pressure will be transferred to actuator through outport by positioner control. On the other hand, if the switch is turned counter-clockwise (toward “M”), it is loosened, then the supply pressure will be directly supplied to the actuator regardless of positioner control. It is extremely important to check the allowed pressure level of the actuator when the switch is loosened.
- 2) Check whether the supply pressure is too high.
- 3) After using “Manual” function, A/M switch should be returned to “Auto”.

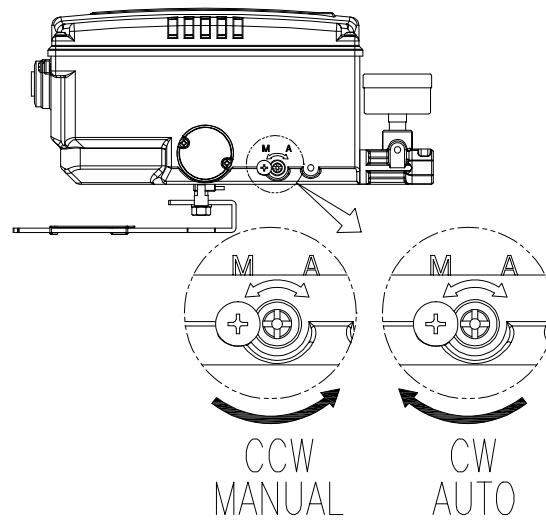


Fig. 6-3: A/M switch adjustment

6.3 Orifice Installment

Hunting can be occurred when the actuator's volume is too small. In the event of hunting, orifice can be installed to prevent it, thereby reducing the flow rate of OUT1 and OUT2 air entering the actuator. The diameter of the orifice hole provided is 1 mm.

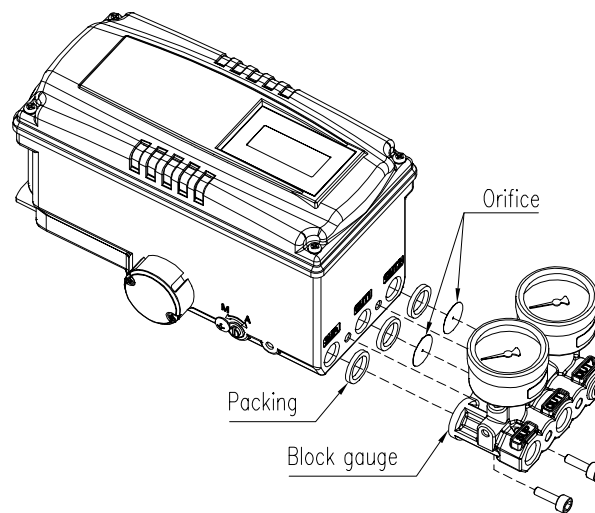


Fig. 6-4: Orifice installment

7 Optional Sub-PCB Installment

The 4-20 mA analog output function can be easily implemented by replacing the HART sub-PCB under the main board with a HART + 4-20 mA analog output sub-PCB.

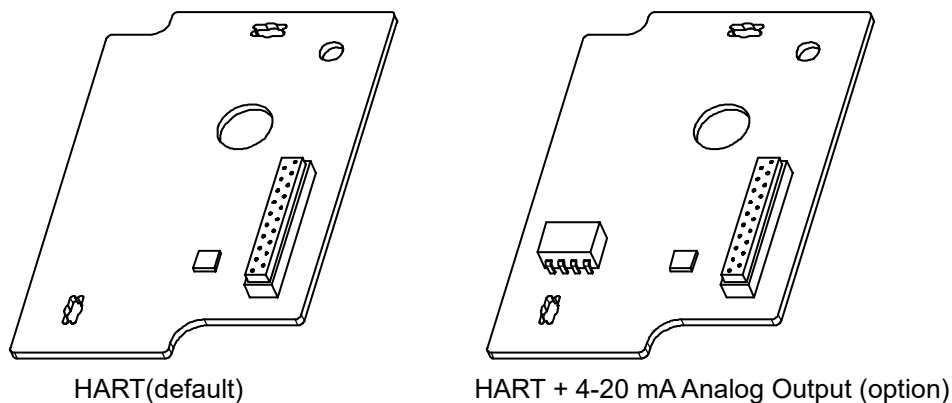


Fig. 7-1: Sub-PCBs

When purchasing the HART + 4-20 mA analog output option sub-PCBs separately, 4 Bolts and 2 supports are supplied together with sub-PCB.

7.1 Installation steps

- 1) Mount 2ea of sub-PCB support on sub-PCB with 2ea of bolt.
- 2) Open base cover, PCB cover. Separate the Main PCB from base body.
- 3) Insert connector of sub-PCB into connector of main PCB correctly.
- 4) Fasten sub-PCB with the rest of bolt 2ea.


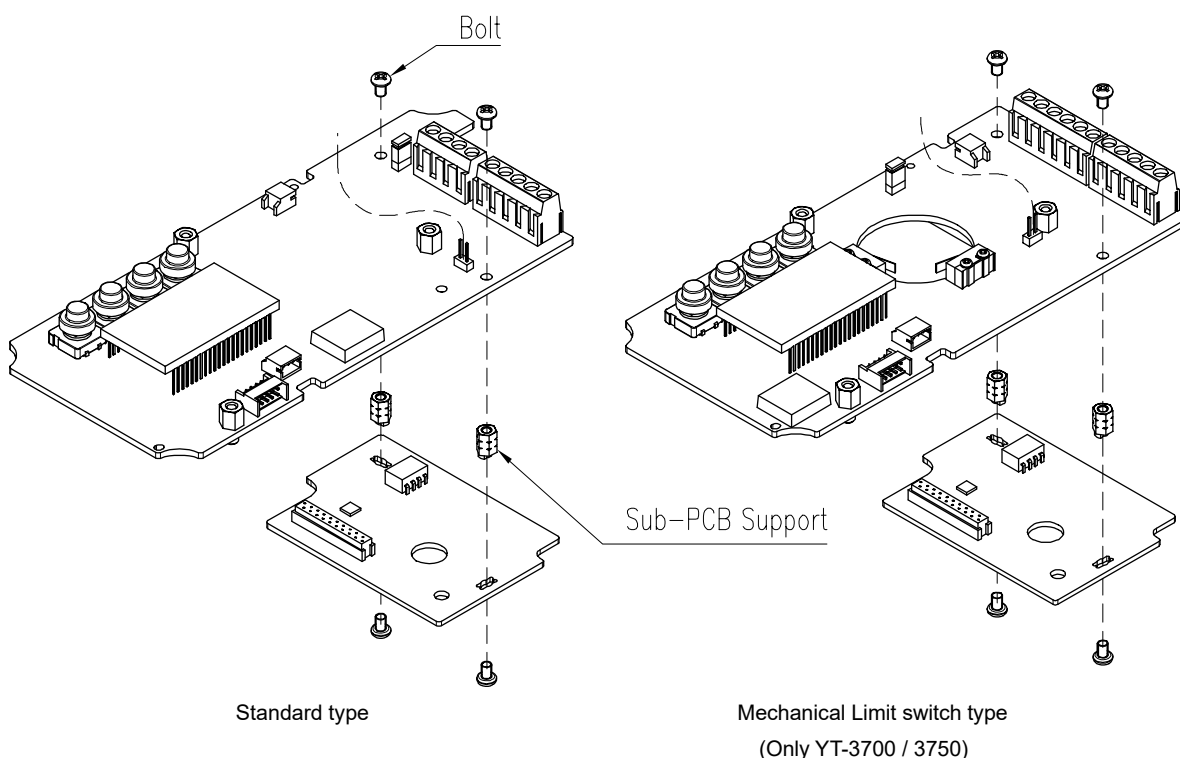


Fig. 7-2: Installation of Option PCB on Main PCBs

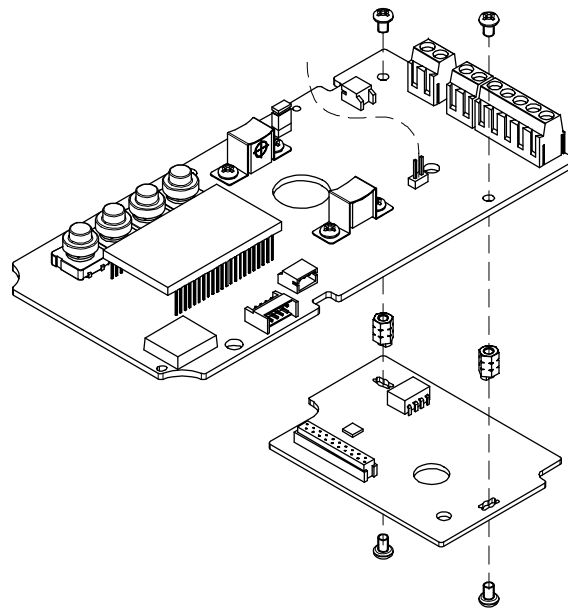

Inductive proximity Limit switch type (Only YT-3700 / 3750)

Fig. 7-3: Installation of Option PCB on Main PCBs

- 5) After 4-20 mA Analog output sub-PCB is installed newly, values of PTM ZERO and PTM ENd must be calibrated for correct output signals. For the calibration of PTM ZERO and PTM ENd, please refer to section 9.10.2 of this manual.

8 Maintenance

8.1 Supply air

If Supply air pressure is not stable or Supply air is not clean, the positioner may not function properly. Air quality and pressure should be checked regularly to see if the air is clean and pressure set is normal.

8.2 Seals

Once a year, it is recommend to check if there are any damaged parts of the positioner. If there are damaged rubber parts such as diaphragms, o-rings and packings, replace with new ones.

9 Auto Calibration and Operation

9.1 Warning



- **Auto Calibration must be performed after the valve and positioner are installed in the facility/process during the commissioning phase or when the positioner is dismantled and then newly mounted on the actuator.**
- **Since the Auto Calibration moves the valve and actuator, the valve must be isolated from the process before Auto Calibration to avoid process interruption.**

9.2 LCD display and buttons

9.2.1 LCD display and symbols

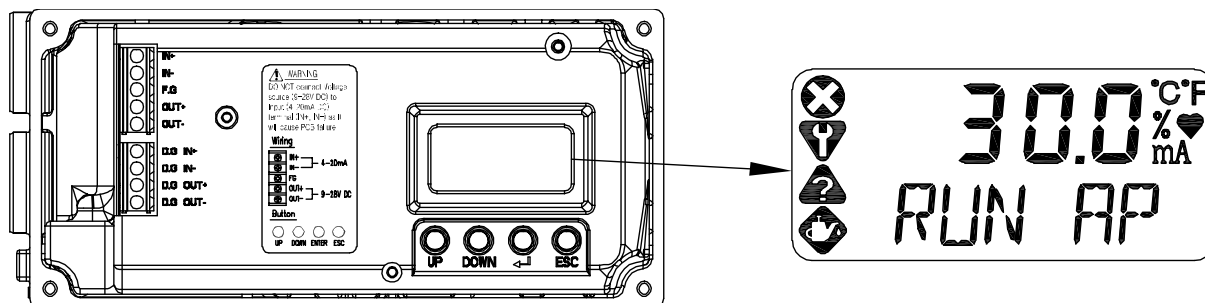


Fig. 9-1

NE107 Symbols	Description	Symbols	Description
	Failure	°C	Degree in Celsius
	Functional Check	°F	Degree in Fahrenheit
	Out of Specifications	%	Percent
	Maintenance Required	♥	Communication status
		mA	Current in mA

The four symbols located on the left are the symbols that display alarm messages classified in four groups in accordance with NAMUR NE107. Assigning each alarm to a specific group of four groups can only be performed through EDD or DTM.

9.2.2 Button and function

Positioner has 4 buttons, and they enable to perform various functions.


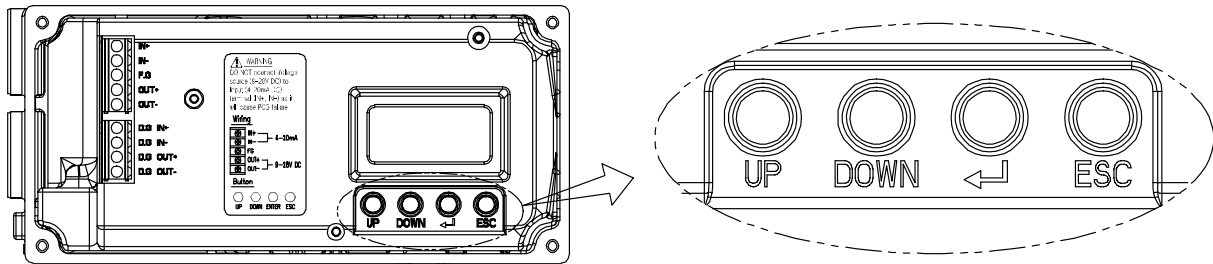


Fig. 9-2

Buttons	Function
UP	Used to navigate to each menu at the same level or to increase the value of the selected parameter.
DOWN	Used to navigate to each menu at the same level in reverse order of UP button or to decrease the value of the selected parameter.
<←> ENTER	Use to select the current menu or function, or to store the value of a modified parameter.
ESC	Used go directly to parent menu from current menu.

9.3 Menu levels

The basic menu structure consists of the RUN Mode Monitor and the Configuration/Operation. The Run Mode Monitor menu allows you to monitor the values of various variables. The Configuration/Operation menu provides calibration and tuning, manual operation, configuration of I/O port function, configuration and self-test of positioner, configuration of diagnostic function, and basic information of the positioner. See below for information on how to move between Run Mode Monitor menu and Configuration/Operation menu, and move within Run Mode Monitor menu.

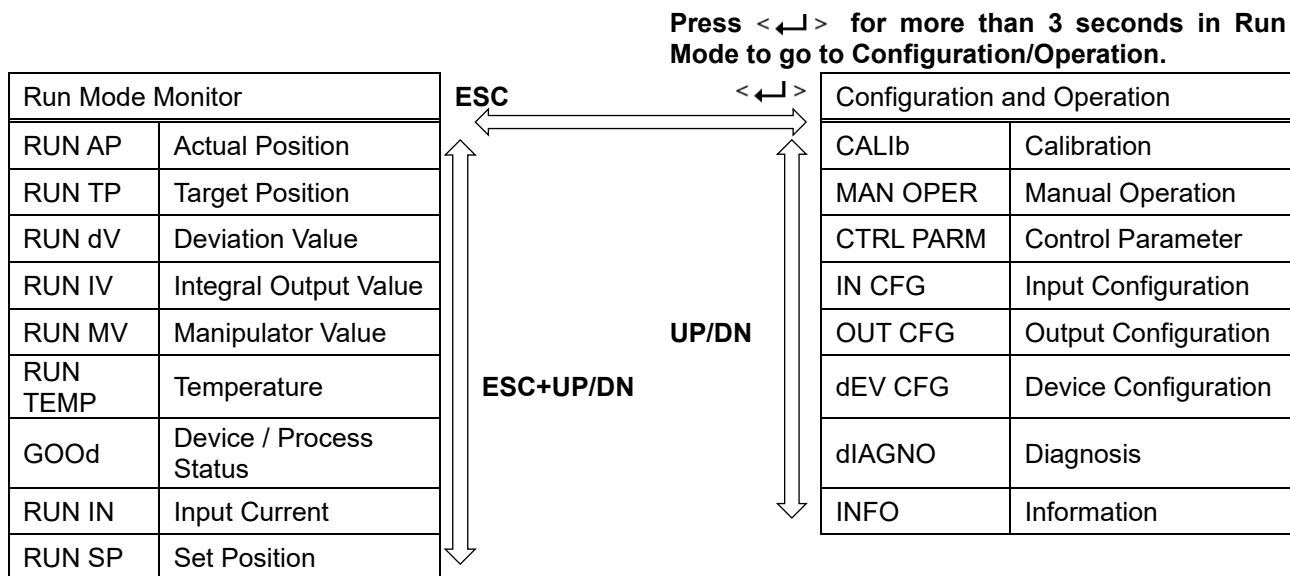

Press the <↵> button to select the lower menu of the Configuration/Operation menu. Press the ESC button to return to parent menu after completing configuration. Pressing the ESC button anywhere in the menu structure several times returns the user to the uppermost menu, Run Mode Monitor menu.

9.4 RUN Mode Monitor

The RUN Mode Monitor is displayed on the LCD display when power is provided to the positioner. Pressing the UP/DOWN button scrolls through the various process variables shown in table below. A "30.0%" in the LCD display below indicates that the valve is in the 30% position, and an "AP" indicates the abbreviation of "Actual Position".




The status variables displayed in the RUN Mode Monitor are divided into nine types as shown below.

On LCD	Name	Description
RUN AP [%]	Actual Position	Actual position of the valve indicated as %.
RUN TP [%]	Target Position	Target position in %
RUN dV [%]	Deviation Value	Deviation between target position and actual position.
RUN IV	Integral Output Value	Accumulated integral output value
RUN MV	Manipulator Value	Digital input value applied to I/P converter
RUN TEMP[°C]	Temperature	Internal temperature of positioner in °C.
** dS XXXX (PS XXXX)	** : Alarm Code dS: Device Status PS: Process Status XXXX: NE107 or Abbreviation of each alarm	The status of the current process or positioner is shown with English letter XXXX. Normally, GOOD is displayed when there is no problem, but alarm or status is displayed in abbreviated words (MNTR, FAIL, OUTS, FUNC and so on) along with NE107 symbol when a state change or alarm occurs. Any of the alarms is displayed alternately each time the ENTER button is pressed. (See 9.15 Status and Alarm Code)
RUN IN [mA]	Input Current	Current input signal in mA
RUN SP [%]	Set Position	Input signal converted into %


When there is no alarm.



When an alarm occurs.

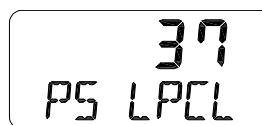

Explaining contents of alarm display

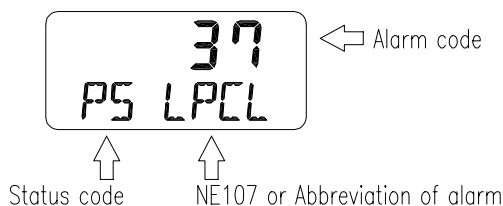

9.5 Configuration and Operation

The Table below shows the eight Configuration/Operation menus, each submenu, ranges for each parameter, and initial factory settings. The words shown in [] for each menu represent the abbreviations of each word displayed when operating the LCD screen.

Level 1	Level 2	Range	Initial factory setting
Calibration [CALIB]	Acting Type	[SINGLE, dOUBLE]	
	Auto Calibration 1 [AUTO 1]		
	Auto Calibration 2 [AUTO 2]		
	Auto Calibration 3 [AUTO 3]		
	Travel Zero [TVL ZERO]		
	Travel End [TVL END]		
Manual Operation [MAN OPER]	Manual Operation by Set Position [MAN SP]		
	Manual Operation by Manipulator Value [MAN MV]		
Control Parameters [CTL PARM]	Dead Band [dEAdbAND]	0.1 to 10.0 [%]	0.3 %
	Proportional Gain, Upward [KP UP]	0.1 to 50.0	1
	Proportional Gain, Downward [KP dN]	0.1 to 50.0	1
	Integral Gain, Upward [TI UP]	0.1 to 50.0	1
	Integral Gain, Downward [TI dN]	0.1 to 50.0	1
	Differential Gain, Upward [Kd UP]	0.1 to 50.0	1
	Differential Gain, Downward [Kd dN]	0.1 to 50.0	1
	Gap [GAP]	0.1 to 5.0 [%]	1 %
	GP [GP]	0.1 to 5.0	1
	GI [GI]	0.1 to 5.0	1
	GD [Gd]	0.1 to 5.0	1
	Auto Dead Band Mode [AUTO db]	oFF, [0 %]	oFF
	Performance Mode [PER]	Stable, Normal, Fast [STbL, NORM, FAST]	NORM
Input Configuration [IN CFG]	Signal Direction [SIG]	Normal, Reverse [NORM, REVS]	NORM
	Split Range Mode [SPLIT]	4-20, 4 to 12, 12 to 20, Custom [4.20, 4.12, 12.20, CST]	4.20
	Custom Split Range Zero [CST ZERO]	4-20.0 [mA]	4 mA
	Custom Split Range End [CST END]	4-20.0 [mA]	20 mA

Level 1	Level 2	Range	Initial factory setting
Input Configuration [IN CFG]	Characterization [CHAR]	Linear, Quick Open, Equal Percent, User Set 5point, User Set 21point [LIN, QO, EQ, U5, U21]	LIN
	User Set Characterization 5p [USER 5P]	0 to 110 [%]	0 %, 25 %, 50 %, 75 %, 100 %
	User Set Characterization 21p [USER 21P]	0 to 110 [%]	0 %, 5 %, 10 %, ... 95 %, 100 %
	Tight Shut Open [TSHUT OP]	0 to 100 [%]	100.0 %
	Tight Shut Close [TSHUT CL]	0 to 100 [%]	0.3 %
	SP Ramp Up Rate [RAMP UP]	oFF, 0.1 to 100 [%]	oFF
	SP Ramp Down Rate [RAMP dN]	oFF, 0.1 to 100 [%]	oFF
	Digital Input Function [dIF]	[oFF, FCL, FOP, PSTA, PSTO]	oFF
	Digital Input Logic [dI LOGIC]	[Lo, HI]	HI
Output Configuration [OUT CFG]	4-20 mA Analog Output Direction [PTM]	[NORM, REVS]	NORM
	4-20 mA Analog Output Zero [PTM ZERO]	0 to 100.00 [%]	
	4-20 mA Analog Output End [PTM ENd]	0 to 100.00 [%]	
	HART Feedback Direction [HT]	[NORM, REVS]	NORM
	Back Calculation [bACKCAL]	[oFF, on]	oFF
	Digital Output Function [dOF]	[OFF, TMPH, TMPL, TVLH, TVLL, DVTO, PSTF, LPCL, FAIL, FUNC, OUTS, MNTR]	OFF
	Digital Output Logic [dO LOGIC]	[Lo, HI]	HI
	Analog Output Function [AOF]	[OFF, TMPH, TMPL, TVLH, TVLL, DVTO, PSTF, LPCL, FAIL, FUNC, OUTS, MNTR]	OFF
	AO Current for Alarm Function [AO LOGIC]	[Lo, HI]	LO
Device Configuration [dEV CFG]	Action [ACT]	[dIR, REVS]	REVS
	Linear Interpolation [ITP]	[oFF, on]	on with Linear oFF with Rotary
	Write Protect [W]	[UNLOCK, LOCK]	UNLOCK
	View Mode [VI]	[NORM, REVS]	NORM
	Polling Address [POL Addr]	[0 to 63]	0
	Factory Reset [dEFAULT]		
	Self-Test [SELFTEST]		

Level 1	Level 2	Range	Initial factory setting
Diagnosis [dIAGNO]	Process Status [PS]	GOOd, FAIL, FUNC, OUTS, MNTR	GOOd
	Device Status [dS]	GOOd, Refer to 9.15 Status and Alarm Code.	GOOd
	View Monitoring Counts [VI CNTS]	[CYCL CNT, TVL ACUM, OPER CNT, FOP CNT, FCL CNT]	0
	Diagnosis Limit Configuration [LIMIT CFG]	TVL HI, TVL LO, TEMP HI, TEMP LO, dV TIME, dV db, AL TVLH, AL TVLL, AL TMPH, AL TMPL, AL dVTO	100 %, 0 %, 85 °C -30 °C (depending on option) 10 sec, 5.0 %, oFF, oFF, oFF, oFF, on
	Reset Alarm Status [RST ALRM]		
	View Event Log [EVT LOG]	RECORd 0 - 19	0
	View PST Result Record [PST RSLT]	RECORd 1 - 10	bLANK
	PST Configuration [PST CFG]	INTERVAL, START PO, TOL, TARGET, HOLD TM, LIMIT TM, PRAMP UP, PRAMP dN, NEXT PST	365 d, 100 %, 5 %, 90 %, 5 sec, 10 sec, 0 %, 0 %, oFF
	Run PST [PST NOW]		
	PST Schedule [PST SChd]	on, oFF	oFF
Information [INFO]	Model Name [YT3700*]		
	Firmware Version [SOFT VER] Download Date	*** YYYYMMDD	Program current version Program input date
	Run Time [RT]	** RT *d	
	Upward Stroke Time [FULL OP]	** **	
	Downward Stroke Time [FULL CL]	** **	
	Position Sensor Type [PSNT]	PTN, NCS	
	Absolute Position in Angle [AbS ANGL]	*** °	
	HART Protocol Revision [HART VER]	7	7

The Table below identifies the range and initial factory settings of each parameter for Menu Level 2 and Menu Level 3 where the menu hierarchy has been lowered by one level.

Level 2	Level 3	Range	Initial factory setting
View Monitoring Counts [VI CNTS]	Cycle Count [CYCL CNT]	0 to 4,200,000,000	
	Travel Accumulated [TVL ACUM]	0 to 168,000,000 [%]	
	Operating Count [OPER CNT]	0 to 4,200,000,000	
	Full Open Count [FOP CNT]	0 to 4,200,000,000	
	Full Close Count [FCL CNT]	0 to 4,200,000,000	
LIMIT CFG	Travel High Limit [TVL HI]	0 to 120 [%]	100 %
	Travel Low Limit [TVL LO]	-10 to 50 [%]	0 %
	Temperature High Limit [TEMP HI]	-57 to 85 [°C]	Selecting by temp. option
	Temperature Low Limit [TEMP LO]	-57 to 85 [°C]	Selecting by temp. option
	Deviation Time [dV TIME]	0 to 300 [sec]	60 sec
	Deviation Deadband [dV db]	0 to 10 [%]	5 %
	Travel High Limit Alarm Enable [AL TVLH]	oFF, on	oFF
	Travel Low Limit Alarm Enable [AL TVLL]	oFF, on	oFF
	Temperature High Limit Alarm Enable [AL TMPH]	oFF, on	oFF
	Temperature Low Limit Alarm Enable [AL TMPL]	oFF, on	oFF
PST CFG	PST Interval [INTERVAL]	1 to 365 [days]	365
	PST Starting Position [START PO]	0 to 100 [%]	100 %
	PST Tolerance [TOL]	0.1 to 10 [%]	5 %
	PST Target Position [TARGET]	0 to 100 [%]	90 %
	PST Hold Time [HOLD TM]	1 to 60 [sec]	5 sec
	PST Limit Time [LIMIT TM]	1 to 300 [sec]	10 sec
	PST Ramp Up Rate [PRAMP UP]	oFF, 1 to 100 [%/sec]	oFF
	PST Ramp Down Rate [PRAMP dN]	oFF, 1 to 100 [%/sec]	oFF
	PST Time Remaining [NEXT PST]	oFF, 1 to 365 [days], 0 to 24 [hour]	oFF

9.6 Calibration (CALIb)

The calibration consists of five menus.

Calibration [CALIb]	Acting Type [SINGLE/ dOUbLE]	Set manually single or double acting by actuator type
	Auto Calibration 1 [AUTO 1]	Calibration on the zero and end points of the valve
	Auto Calibration 2 [AUTO 2]	Calibration on all parameters required to operate the valve
	Auto Calibration 3 [AUTO 3]	Calibration on zero point, end point and control parameters required to operate the valve
	Travel Zero [TVL ZERO]	Manually adjust the zero point of the valve
	Travel End [TVL END]	Manually adjust the endpoint of the valve

Auto Calibration simplifies calibration without having to go through complex gain tuning. Once the current input between 4 and 20 mA is applied, it takes approximately 2-3 minutes to complete the automatic calibration, which may vary depending on the size of the actuator. There are two types of Auto Calibrations as shown below so that you select and use them as required.

※ Parameters reset after completion of Auto Calibration


Menu	Parameters	AUTO1	AUTO2	AUTO3
Calibration [CALIb]	Travel Zero [TVL ZERO]	O	O	O
	Travel End [TVL END]	O	O	O
Control Parameters [CTL PARM]	Dead Band [dEAdbANd]	X	O	O
	Proportional Gain, Upward [KP UP]	X	O	O
	Proportional Gain, Downward [KP dN]	X	O	O
	Integral Gain, Upward [TI UP]	X	O	O
	Integral Gain, Downward [TI dN]	X	O	O
	Differential Gain, Upward [Kd UP]	X	O	O
Input Configuration [IN CFG]	Differential Gain, Downward [Kd dN]	X	O	O
	Signal Direction [SIG]	X	O	X
	SP Ramp Up Rate [RAMP UP]	X	O	O
Output Configuration [OUT CFG]	SP Ramp Down Rate [RAMP dN]	X	O	O
	4-20 mA Analog Output Direction [PTM]	X	O	X
Device Configuration [dEV CFG]	HART Feedback Direction [HT]	X	O	X
	Action [ACT]	X	O	X
	View Mode [VI]	X	O	X
-	Linear Interpolation [ITP]	O	O	O
	BIAS	X	O	O

9.6.1 Acting Type (SINGLE / dDOUBLE)

This is used to change the settings of the positioner to SINGLE or dDOUBLE, depending on the actuator type. The setting of the SINGLE and dDOUBLE affects the automatic calibration, so it must be set carefully considering the actuator type.




When the actual acting types of Actuator is different with the setting values, make sure to fit the actual acting type with the currently operating Actuator type as it causes any problems.

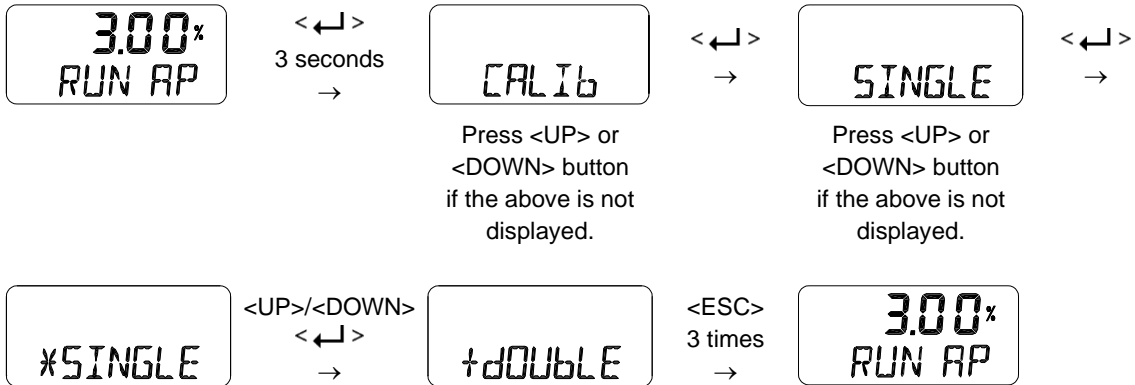

9.6.2 Auto Calibration 1 (AUTO 1)

AUTO 1 is used to set only the origin and end points. It does not change the PID and other parameter values that already have been set. This is usually used when the origin and end points of the already calibrated positioner have changed slightly.

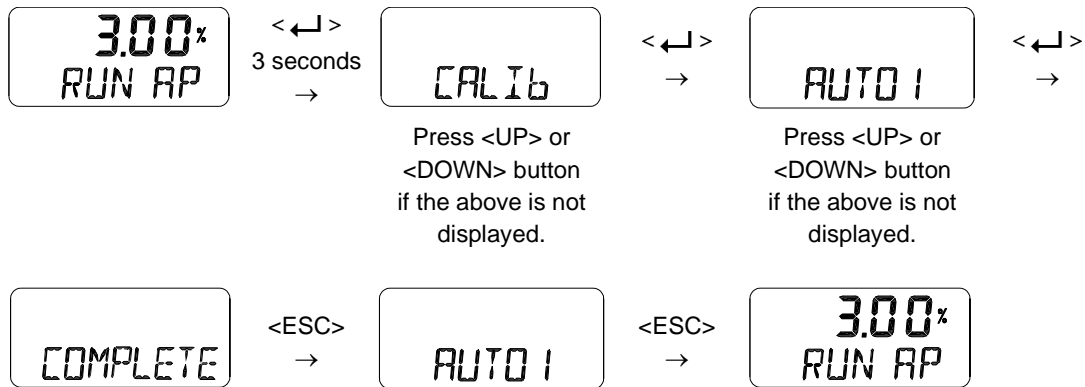


※ Parameters reset after completion of Auto Calibration 1

Menu	Parameters	Description
Calibration [CALIB]	Travel Zero [TVL ZERO]	The valve stroke reset to the zero point when the pressure in the OUT1 port is completely released.
	Travel End [TVL ZERO]	The valve stroke reset to the end point when the pressure in the OUT1 port is fully filled.

9.6.3 Auto Calibration 2 (AUTO 2)

AUTO 2 tunes up and then changes zero point, end point and control parameters(PID) required for valve operation. Be sure to perform this AUTO 2 when installing the positioner on the valve for the first time or when reinstalling the positioner from the actuator.

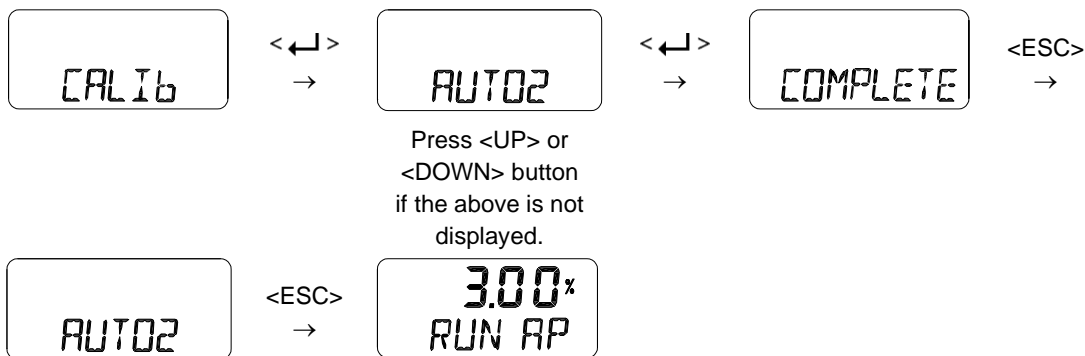


※ Parameters reset after completion of Auto Calibration 2

Menu	Parameters	Description
Calibration [CALIB]	Travel Zero [TVL ZERO]	The valve stroke reset to the zero point when the pressure in the OUT1 port is completely released.
	Travel End [TVL ZERO]	The valve stroke reset to the end point when the pressure in the OUT1 port is fully filled.
Control Parameters [CTL PARM]	PID Parameter [KP UP], [KP dN] [TI UP], [TI dN] [Kd UP], [Kd dN]	Applied after automatically calculating the PID value according to the valve or actuator.
Input Configuration [IN CFG]	Signal Direction [SIG]	Initialized in normal direction.
	SP Ramp Up Rate [RAMP UP] SP Ramp Down Rate [RAMP dN]	If the Performance mode is STbL, it is applied after automatic calculation, and if it is NORM / FAST, it is off.
Output Configuration [OUT CFG]	4-20 mA Analog Output Direction [PTM]	Initialized in normal direction.
	HART Feedback Direction [HT]	Initialized in normal direction.
Device Configuration [dEV CFG]	Action [ACT]	Initialized in normal direction.
	View Mode [VI]	Initialized in normal direction.
	Linear Interpolation [ITP]	Automatically set On/Off according to the angle of use of the feedback lever (On when feedback lever use angle > 20°)
-	BIAS	It is automatically calculated and applied depending on the valve or actuator.

9.6.4 Auto Calibration 3 (AUTO 3)

AUTO 3 tunes up and then changes all parameters required for valve operation. It is mainly used when valve characteristics change during valve operation or due to aging.

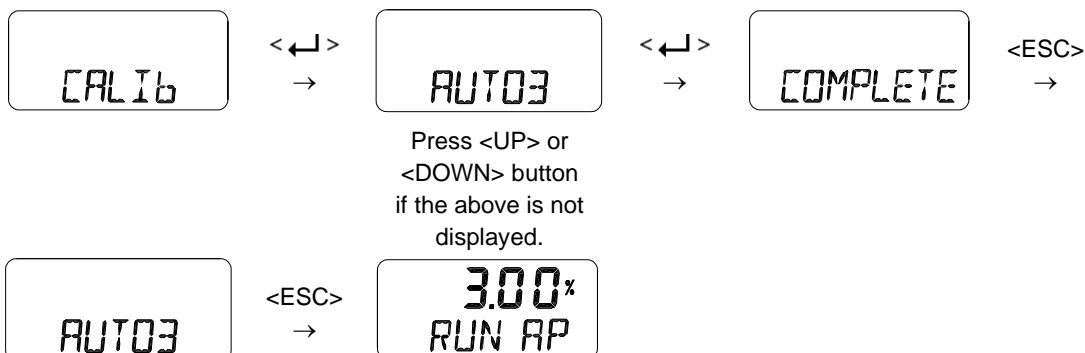


※ Parameters reset after completion of Auto Calibration 3

Menu	Parameters	Description
Calibration [CALIB]	Travel Zero [TVL ZERO]	The valve stroke reset to the zero point when the pressure in the OUT1 port is completely released.
	Travel End [TVL ZERO]	The valve stroke reset to the end point when the pressure in the OUT1 port is fully filled.
Control Parameters [CTL PARM]	PID Parameter [KP UP], [KP dN] [TI UP], [TI dN] [Kd UP], [Kd dN]	Applied after automatically calculating the PID value according to the valve or actuator.
Input Configuration [IN CFG]	SP Ramp Up Rate [RAMP UP]	If the Performance mode is STbL, it is applied after automatic calculation, and if it is NORM / FAST, it is off.
	SP Ramp Down Rate [RAMP dN]	
Device Configuration [dEV CFG]	Linear Interpolation [ITP]	Automatically set On/Off according to the angle of use of the feedback lever (On when feedback lever use angle > 20°)
-	BIAS	It is automatically calculated and applied depending on the valve or actuator.

9.6.5 Travel Zero (TVL ZERO) and Travel end (TVL END)

This is a manual adjustment of the zero point or endpoint of the valve after auto calibration. Once you enter the TVL ZERO (or TVL END) setting, press the UP/DOWN button to change the zero point (or endpoint) of the valve, and then press the ENTER button to save it. The saved position is recognized as the zero (or endpoint) of the valve.

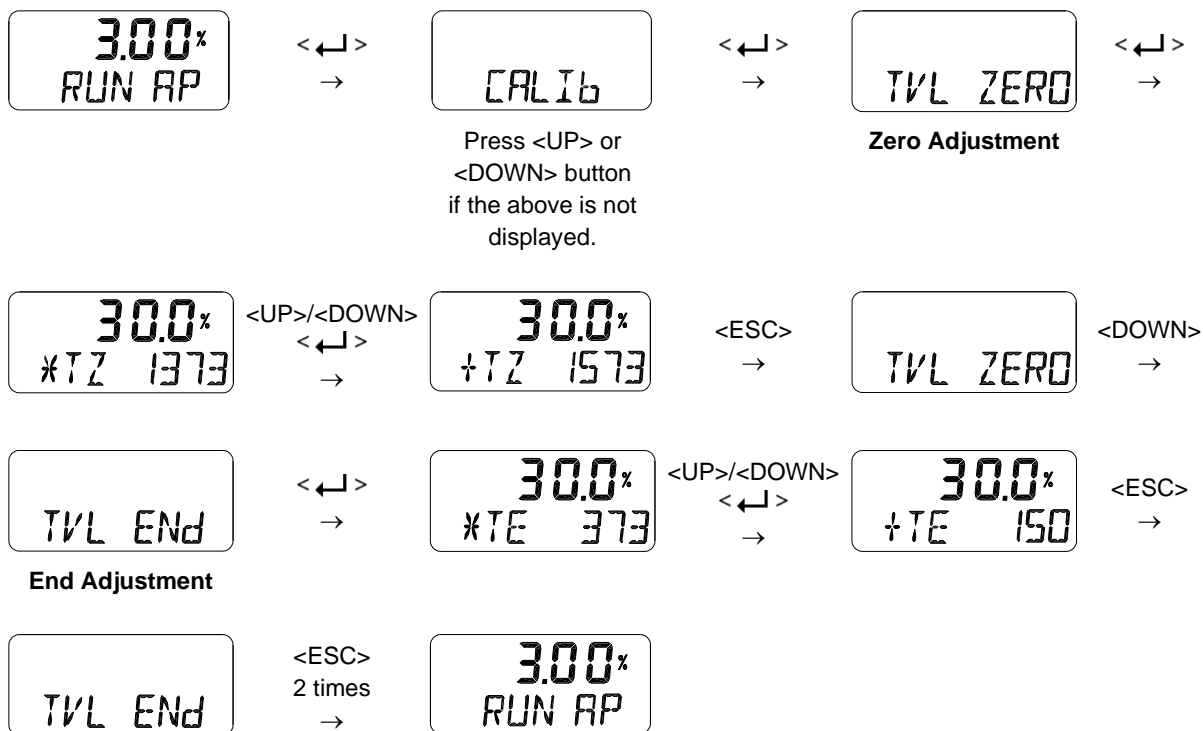

9.7 Manual Operation (MAN OPER)


It is used to manually raise or lower the valve stem by operating the UP or DOWN buttons. This can be used to observe the move of valve stem without any external input signals. When engaged, the current input signal to the positioner has no effect on the positioner.



Manual operation may affect the process in service, so use this function when the process is down or when it is acceptable to shut down the process.


9.7.1 Manual Operation by Set position (MAN SP)

The target position is incremented by the UP and DOWN buttons based on the currently entered set position values, which moves the stem of the valve up and down. Once out of the menu by <ESC>, the positioner is controlled again by an input signal.

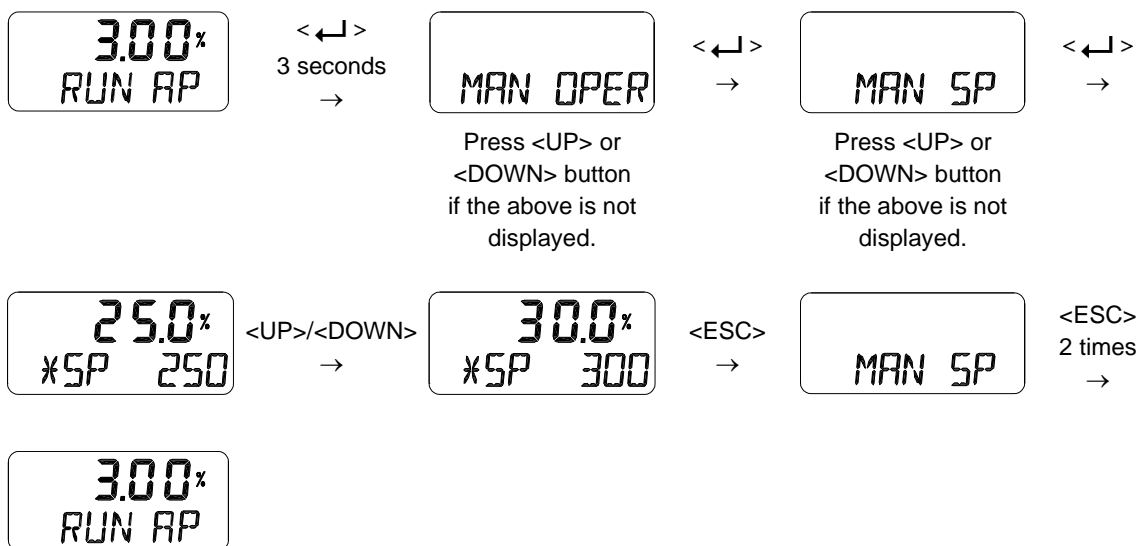

9.7.2 Manual Operation by Manipulator Value (MAN MV)

The input to I/P converter is incremented or decremented by the UP and DOWN buttons based on the currently entered I/P input value, which moves the stem of the valve up and down. Once out of the menu by <ESC>, the positioner is controlled again by an input signal.

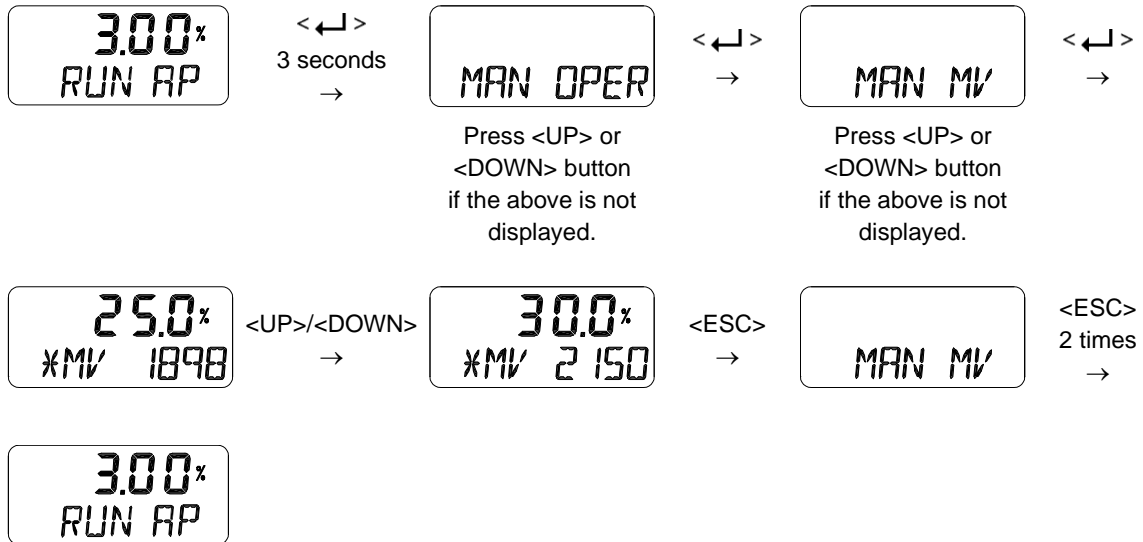


9.8 Control Parameters (CTL PARM)

Followings are the values changeable at the Control Parameters Mode.

- 1) Dead Band (dEAdbANd)
- 2) Forward P parameter (KP UP) and reverse P parameter (KP dN)
- 3) Forward Integral time parameter (TI UP) and reverse Integral time parameter (TI dN)
- 4) Forward D parameter (Kd UP) and reverse D parameter (Kd dN)
- 5) GAP parameter (GAP)
- 6) GAP P parameter (GP)
- 7) GAP I parameter (GI)
- 8) GAP D parameter (Gd)
- 9) Auto Dead band Mode (AUTO db)
- 10) Performance Mode (PER STbL / NORM / FAST)


9.8.1 Dead Band (dEAdbANd)

Deadband indicates the size of the allowable deviation that is set near the target position. If the valve has large packing friction, this value can be adjusted and set accordingly to prevent the limit cycle caused by the friction. If the deadband is set to 0.5%, its range is $\pm 0.5\%$ of the target.

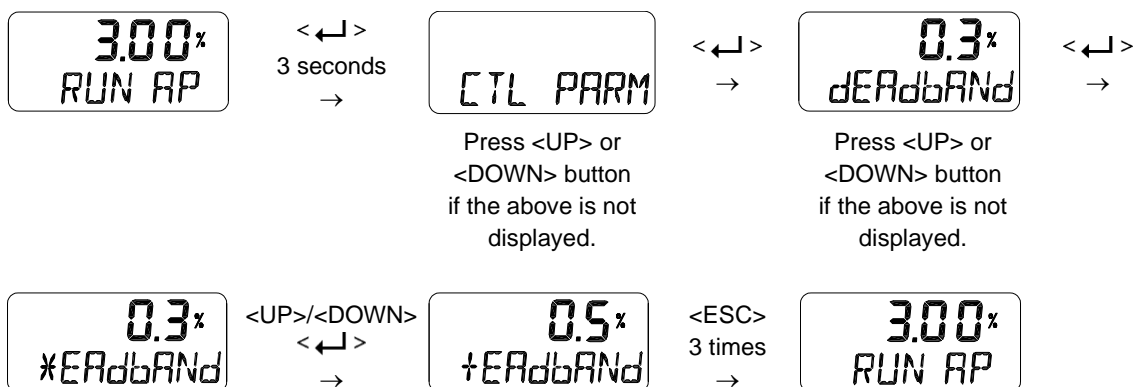


9.8.2 Forward P parameter (KP UP) and reverse P parameter (KP dN)

The KP parameter is the proportional control constant to the calibration signal to reduce the error between the target position and the current position, the KP UP is applied when the valve moves in the direction of increasing output air pressure, and KP dN is applied when the valve moves in the direction of venting output air pressure. A larger value of gains "KP UP" or "KP dN" moves the valve faster to reach a target position, but will tend to oscillate it if set to high. However, smaller gains improve stability, but make it slower to reach a target position.

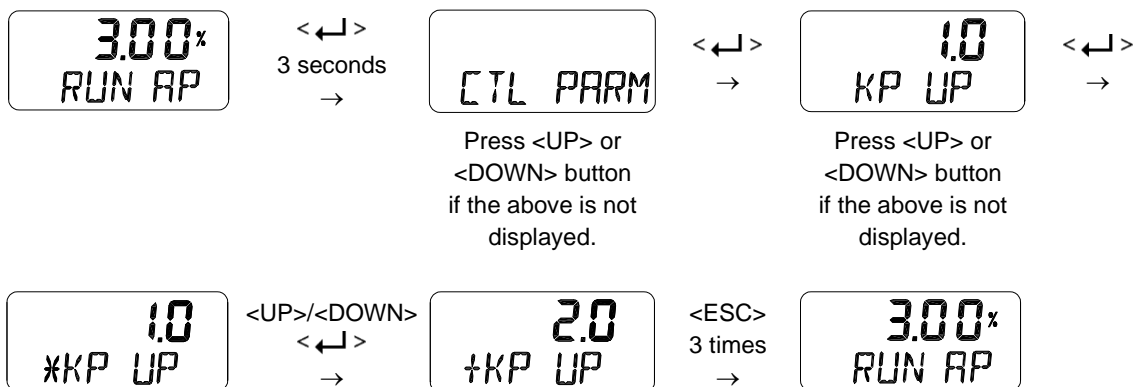


9.8.3 Forward Integral time parameter (TI UP) and reverse Integral time parameter (TI dN)

TI parameters are an integral gain which is used for integral time of correction signal by margin of error, TI UP is applied when the valve moves in the direction of increasing the output air pressure, and TI dN is applied when the valve moves in the direction of decreasing the output air pressure. A smaller TI makes the valve longer to reach a target position and tends to cause oscillation.

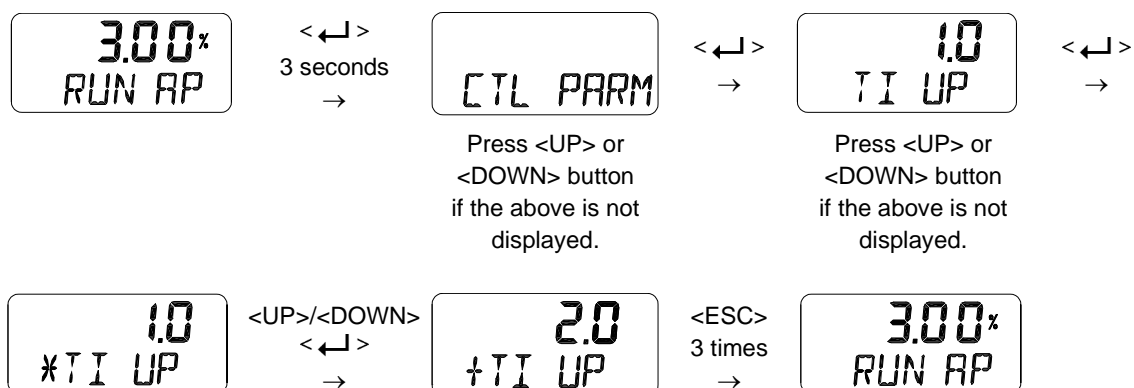


9.8.4 Forward D parameter (Kd UP) and reverse D parameter (Kd dN)

The Kd parameter is a differential value that adds the correction signal due to the rate of error to the existing calibration signal. Kd UP is applied when the valve moves in the direction of increasing output air pressure, and Kd dN is applied when the valve moves in the direction of decreasing output air pressure. A larger D value makes the valve hunting and a smaller value can lead to poor linearity or dynamic properties.

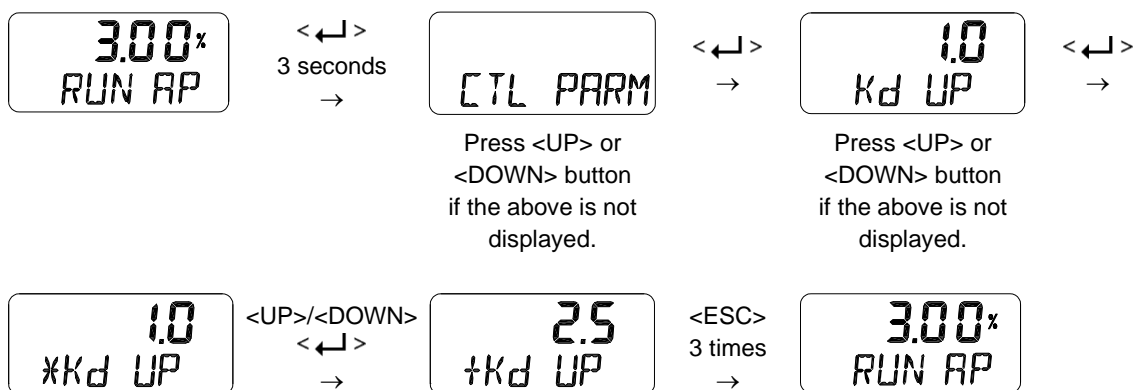


9.8.5 GAP parameter (GAP)

The GAP parameter sets the control range at which Gap control begins. If the current position of the valve falls within the setting range GAP (%) relative to the final target position (target position ± GAP), Gap control operates along with PID Control. When the GAP control begins, the PID GAP parameters (GAP P, GAP I and GAP D) interacted with the PID parameters (KP, KI and KD) are applied to valve control.

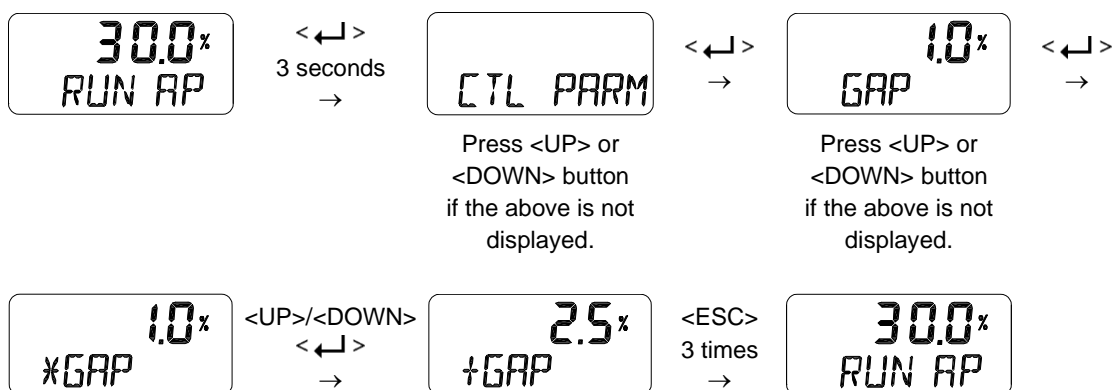


9.8.6 GAP P parameter (GP)

GP is a proportional gain. If the valve position is within the GAP parameter range, a proportion gain created based on KP and GP is applied to valve control.

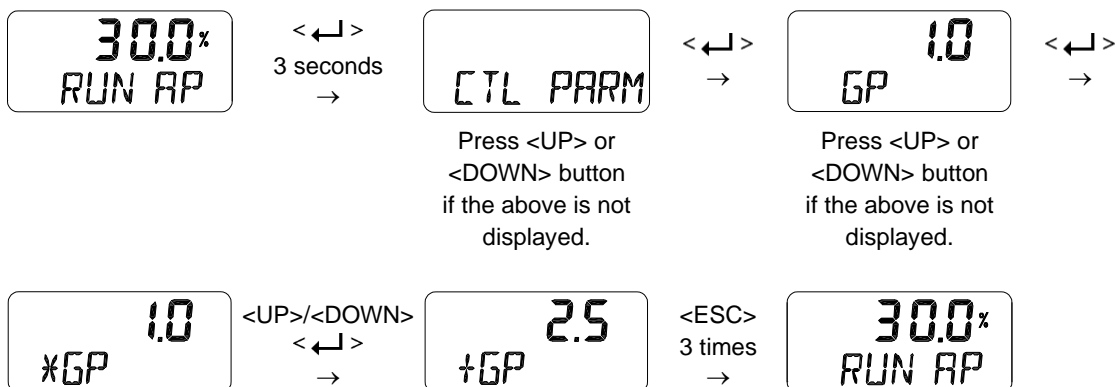


9.8.7 GAP I parameter (GI)

GI is an integral gain. If the valve position is within the GAP parameter range, an integral gain created based on 1/TI and GI is applied to valve control.

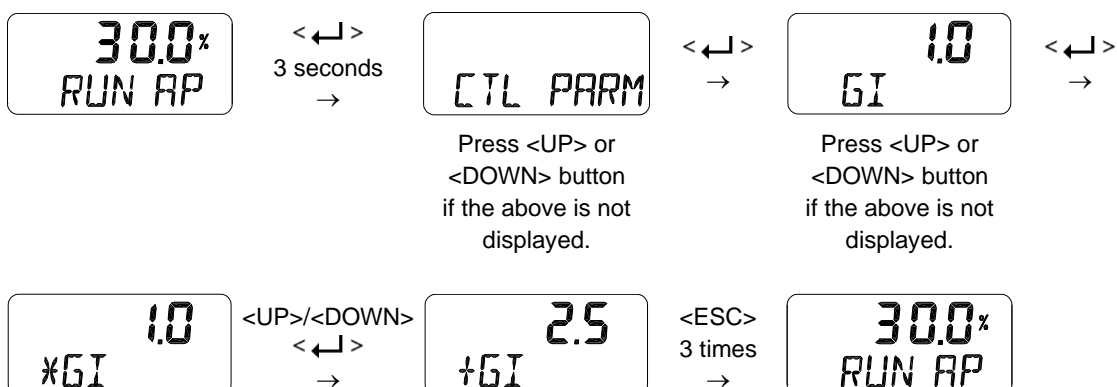


9.8.8 GAP D parameter (Gd)

Gd is a differential gain. If the valve position is within the GAP parameter range, a differential gain created based on Kd and Gd is applied to valve control.

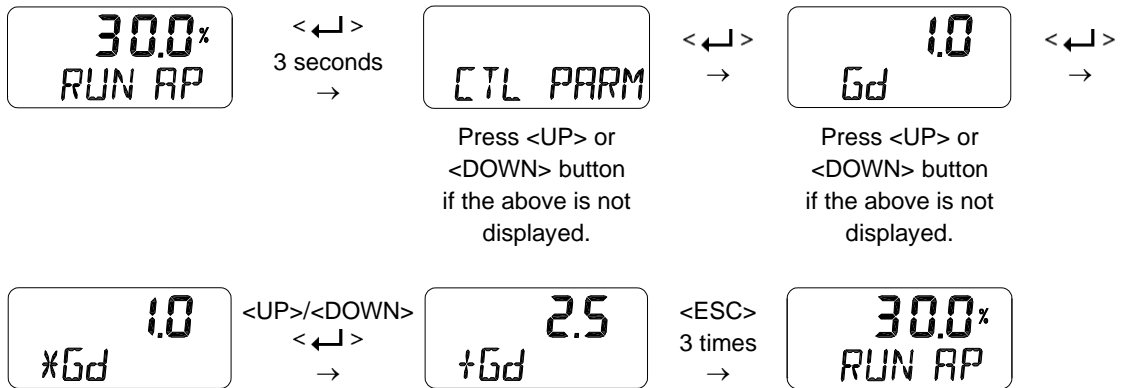


9.8.9 Auto Dead band Mode (AUTO db)

This function is used to suppress a hunting for valves with high static friction. The initial value is OFF and it shall be set to 0 % to activate the auto dead band automatically. The value is changed to a proper value once this mode is activated.

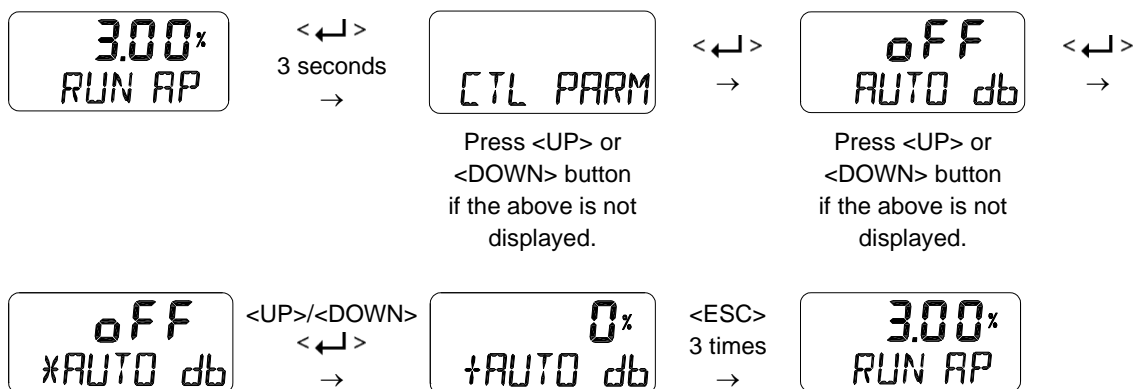

9.8.10 Performance Mode (PER STbL / NORM / FAST)

This mode has three modes of operation: Stable, Normal, and Fast that allow you to select the required responsiveness. The performance modes indicate the response characteristics from slow response to quick response in the order of Stable, Normal and Fast.

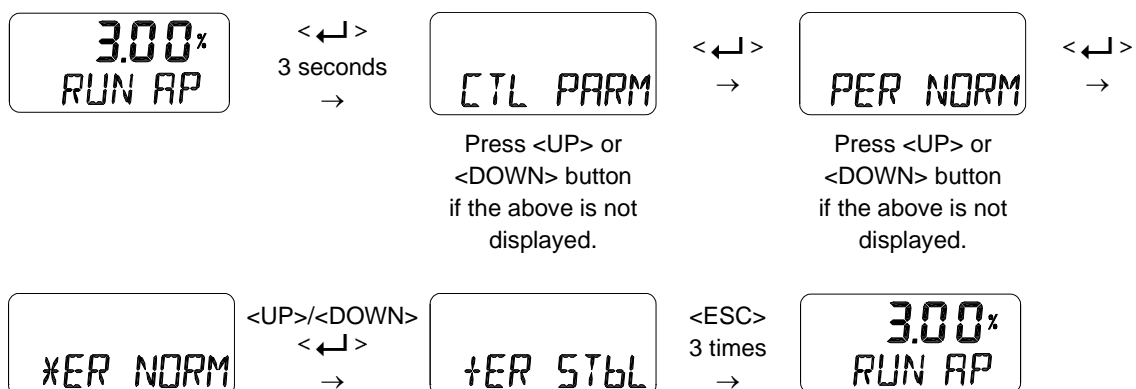


9.9 Input Configuration (IN CFG)

Followings are the values changeable at the Input Configuration Mode.

- 1) Signal Direction (SIG NORM / REVS)
- 2) Split Range Mode (SPLIT 4.20 / 4.12 / 12.20 / CSt)
- 3) Custom Split Range Zero (CST ZERO)
- 4) Custom Split Range End (CST ENd)
- 5) Characterization Curves (CHAR LIN / EQ / USER 5P / USER 21P)
- 6) User Set Characterization 5 Points (USER 5P)
- 7) User Set Characterization 21 Points (USER 21P)
- 8) Tight Shut Open (TSHUT OP)
- 9) Tight Shut Close (TSHUT CL)
- 10) Target Position Ramp Up Rate (RAMP UP) and Target Position Ramp Down Rate (RAMP dN)
- 11) Digital Input Function (dIF OFF / FCL / FOP / PSTA / PSTO)
- 12) Digital Input Logic (dI LOGIC HI / Lo)


9.9.1 Signal Direction (SIG NORM / REVS)

This function changes the action type of the valve, NORM or REVS. if NORM is selected, the air is completely released through output port 1 of the positioner when 4 mA is applied, and the maximum air pressure is loaded to the actuator through output port 1 when 20 mA is applied. If set to REVS, the maximum air pressure is loaded to the actuator via output port 1 when an input current of 4 mA is applied to the positioner.

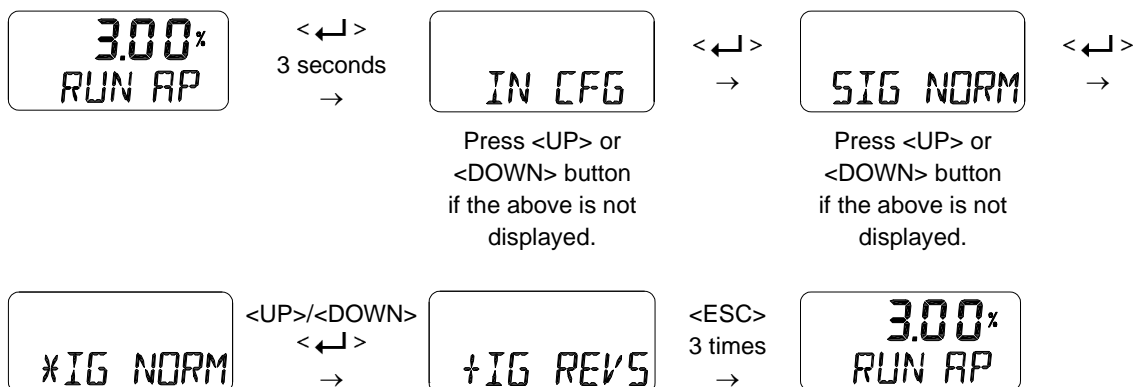


9.9.2 Split Range Mode (SPLIT 4.20 / 4.12 / 12.20 / CSt)

This is used to set the range of the input signal to control the entire stroke of the valve. You can select one of the four input signals that consists of 4-20 mA, 4-12 mA, 12-20 mA, and user settings (Custom, CSt). 4-20 mA is the factory setting.

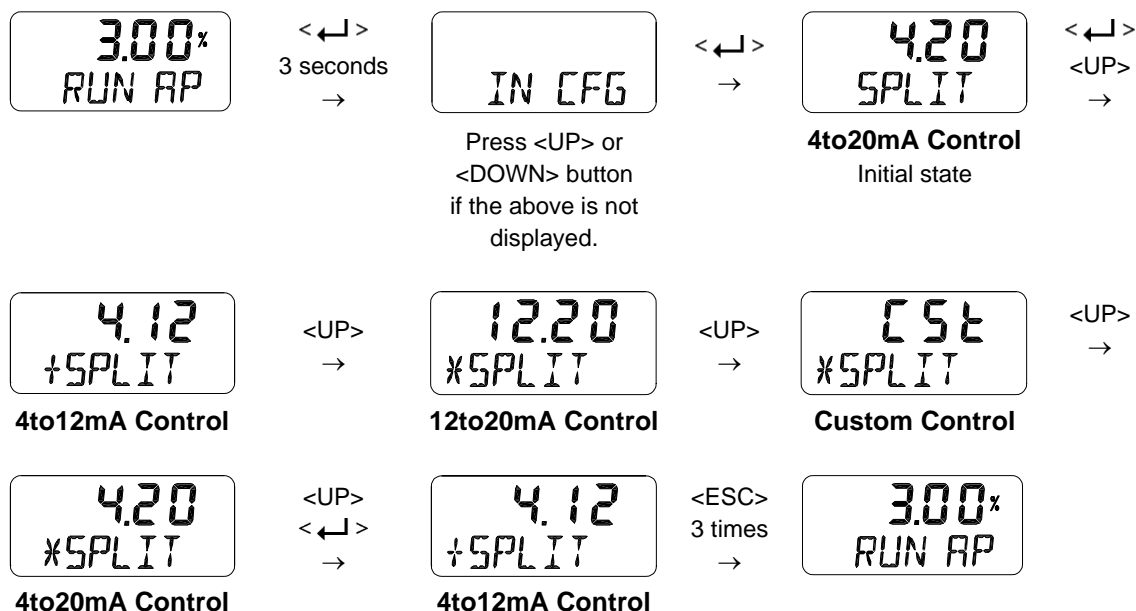

9.9.3 Custom Split Range Zero (CST ZERO)


It is used to set the current corresponding to the zeropoint when the valve position of 0 to 100% is controlled by the user-set CUSTOM. For example, if the valve is controlled by 6-20 mA instead of 4-20 mA, CST ZERO is 6 mA. However, the difference of the current between the origin point and the endpoint must be greater than 4 mA.

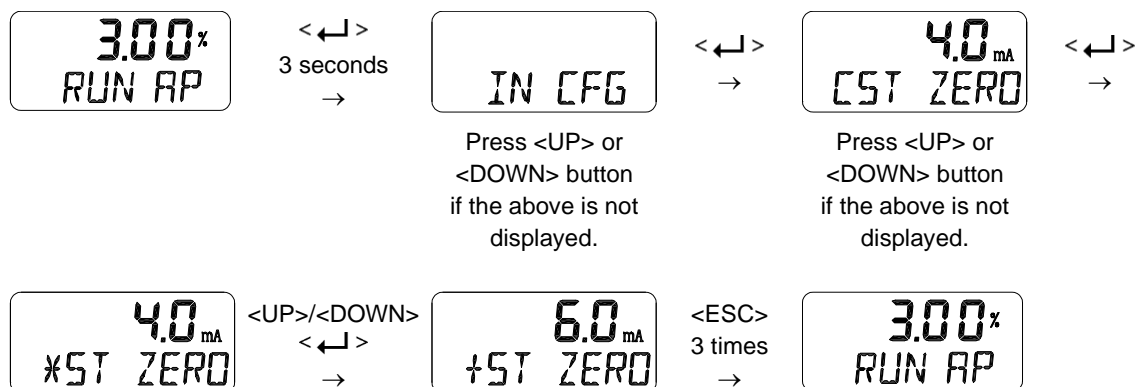

This function is activated by saving the Split Range Mode (SPLIT) of above Section 9.9.2 as “CSt”.

9.9.4 Custom Split Range End (CST END)



It is used to set the current corresponding to the endpoint when the valve position of 0 to 100% is controlled by the user-set CUSTOM. For example, if the valve is controlled by 4-18 mA instead of 4-20 mA, CST END is 18 mA. However, the difference of the current between the origin point and the endpoint must be greater than 4 mA.

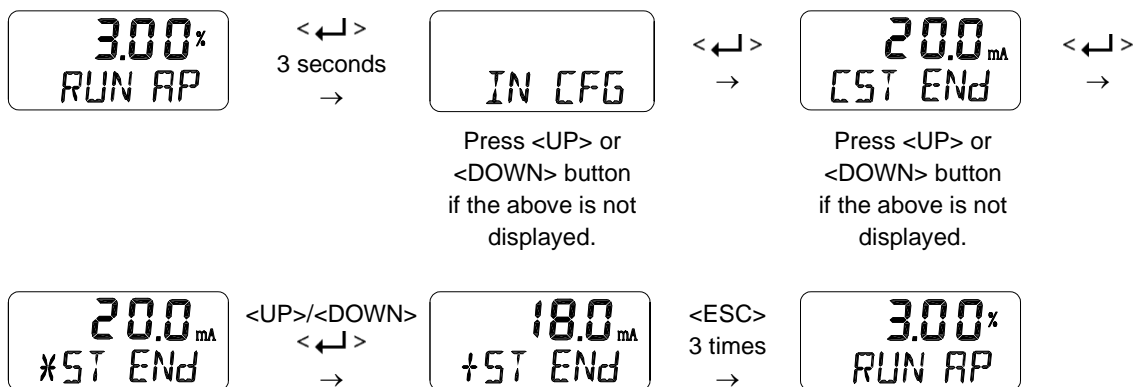

This function is activated by saving the Split Range Mode (SPLIT) of above Section 9.9.2 as “CSt”.


9.9.5 Valve Flow Characterization Curves (CHAR LIN / EQ / USER 5P / USER 21P)

The flow characteristic curve of valve is available by selecting one of the following: Linear(LIN), Quick Open(QO), Equal Percentage(EQ), User Set Characterization 5 Points (U5) and User Set Characterization 21 Points(U21).

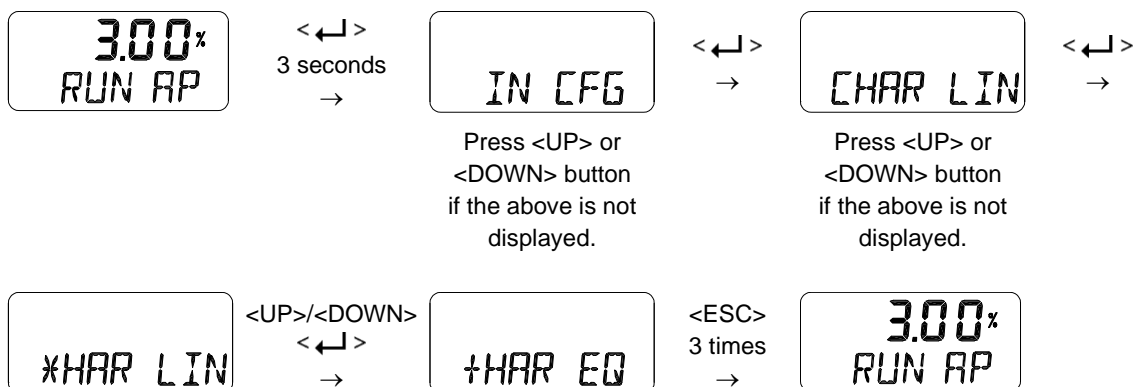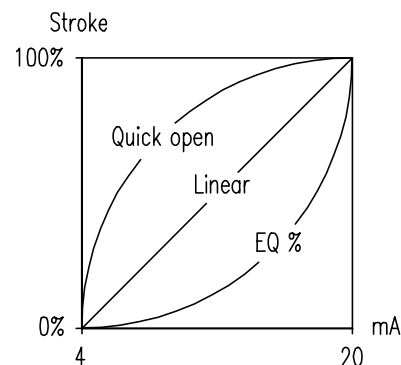

9.9.6 User Set Characterization 5 Points (USER 5P)



A total of 5 target positions are set every 4 mA intervals. When shipped from the factory, the initial positions are P0 (4mA, 0%), P1 (8mA, 25%), P2 (12mA, 50%), P3 (16mA, 75%), and P4 (20mA, 100%). User can change all 5 points or only change partially and exit the menu by pressing <ESC> button.

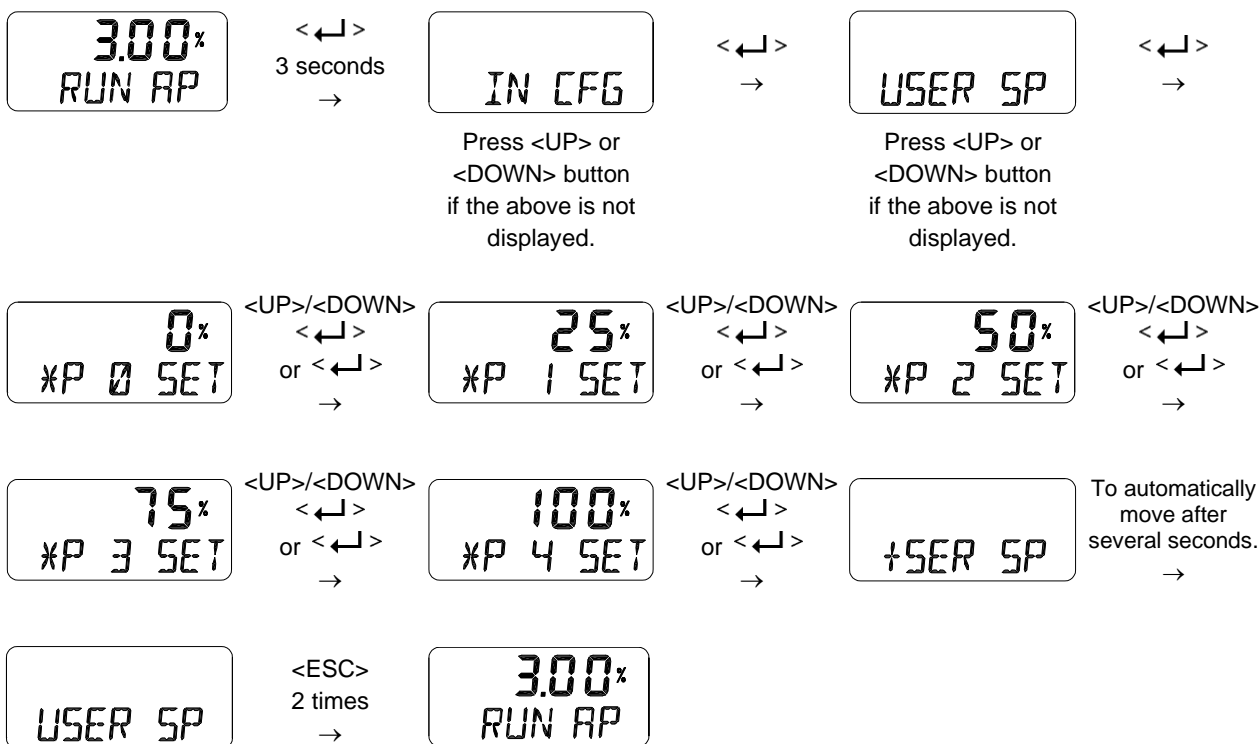

This function is activated by saving the Valve Flow Characterization Curves (CHAR) of above Section 9.9.5 as "U5".

9.9.7 User Set Characterization 21 Points (USER 21P)


A total of 21 target points can be set every 0.8 mA intervals. When shipped from the factory, the initial P0 (4mA, 0%), P1 (4.8 mA, 5%), P2 (5.6 mA 10%), - - -, P19 (19.2 mA, 95%), and P20 (20 mA, 100%). For example, a characteristic curve below can be made through the settings of P1 to P20. User can change all 21 points or only change partially and exit the menu by pressing <ESC> button.

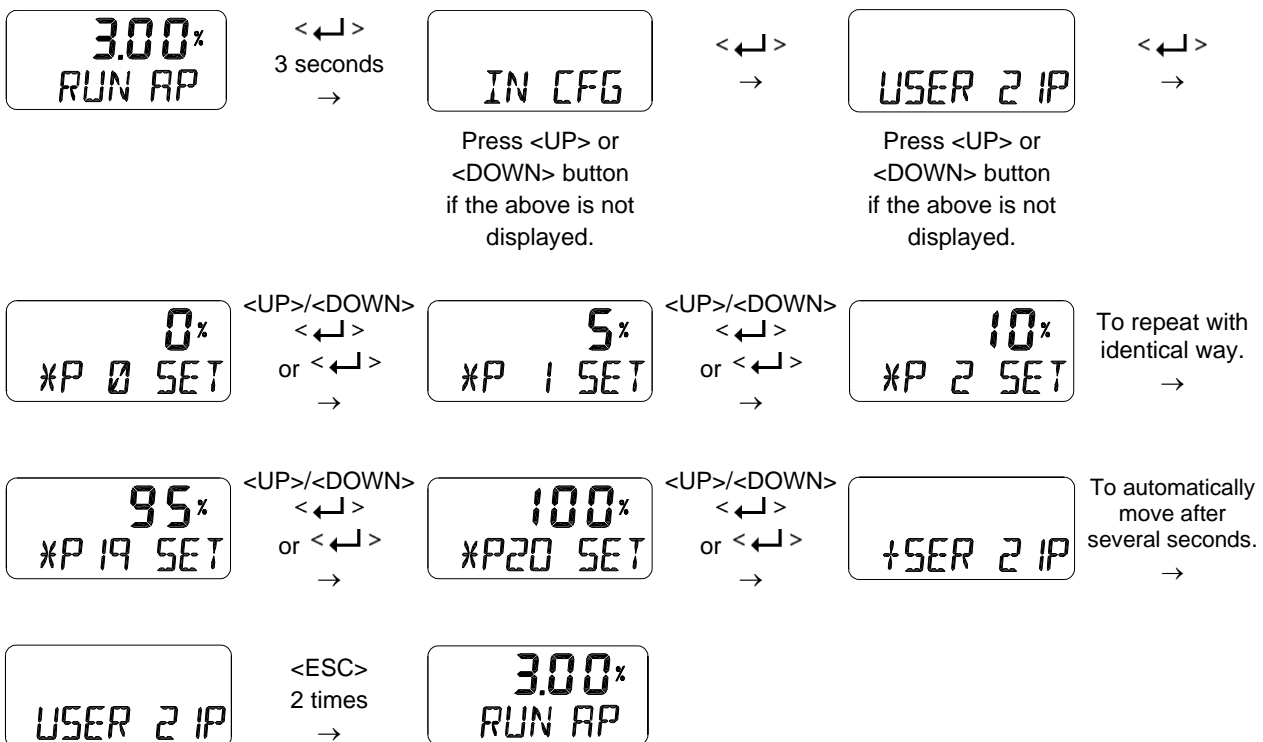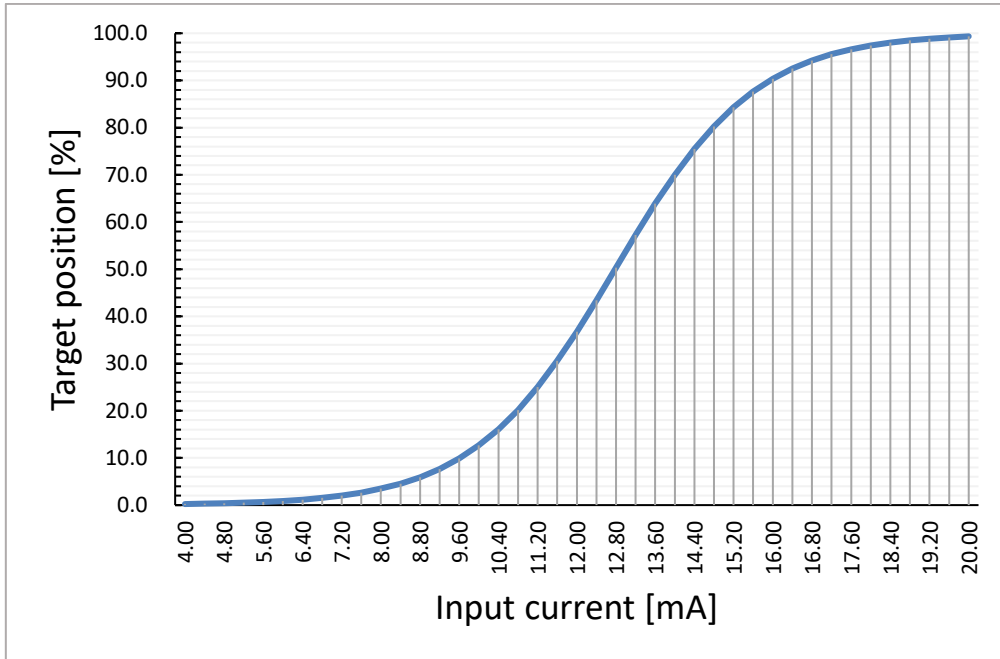

This function is activated by saving the Valve Flow Characterization Curves (CHAR) of above Section 9.9.5 as "U21".


9.9.8 Tight Shut Open (TSHUT OP)

It is used to ensure that the valve is fully opened with a large force. When the input signal SP is greater than the value set in the TSHUT OP, all available force is applied to OUT 1 port to tightly open the valve. If the input current of 4 mA is 0% of valve position and 20 mA is 100% of valve position, and the Tight Shut Open value is set to any position less than 100% (e.g. 95%), then the valve stroke will be 100% immediately when the input signal is over the set value (e.g. 95%). A full supply pressure applied to the actuator via the OUT1 port prevents leakage of the valve by shutting the valve tightly. However, when the value is set to 100%, Tight Shut Open function doesn't work.

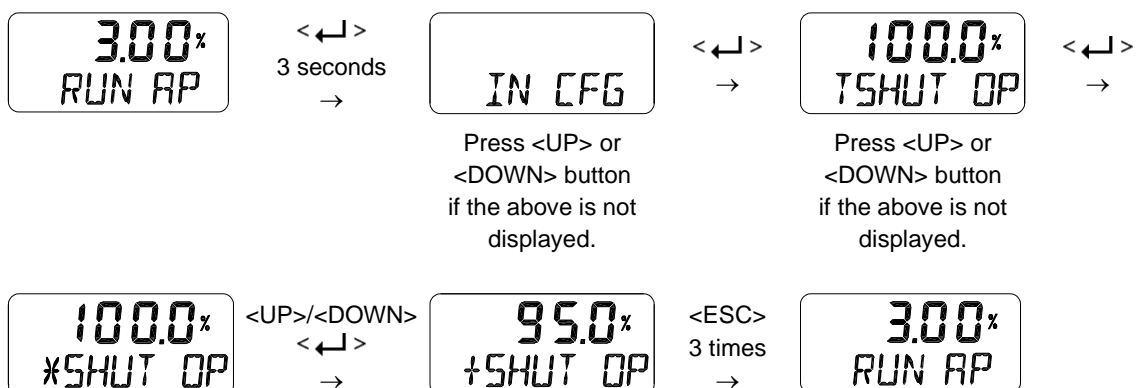


9.9.9 Tight Shut Close (TSHUT CL)

It is used to ensure that the valve is fully closed with a large force. When the input signal SP is smaller than the value set in the TSHUT CL, air pressure is vented through OUT 1 port to tightly close the valve. If the input current of 4 mA is 0 % of valve position and 20 mA is 100 % of valve position, and the Tight Shut Close value is set to any position larger than 0 % (e.g. 5%), then the valve stroke will be 0 % immediately when the input signal goes below the set value (e.g. 5%). The air venting from the actuator via the OUT1 port prevents leakage of the valve by shutting the valve tightly. However, when the value is set to 0%, Tight Shut Close function doesn't work.

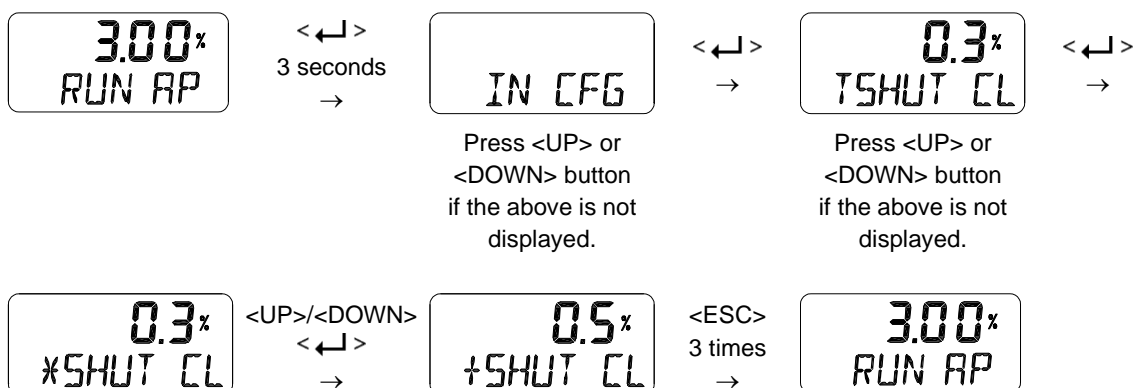


The following graph shows the operation of the valve stroke when the input signal corresponding to Tight Shut Open or Tight Shut Close is applied to the device.

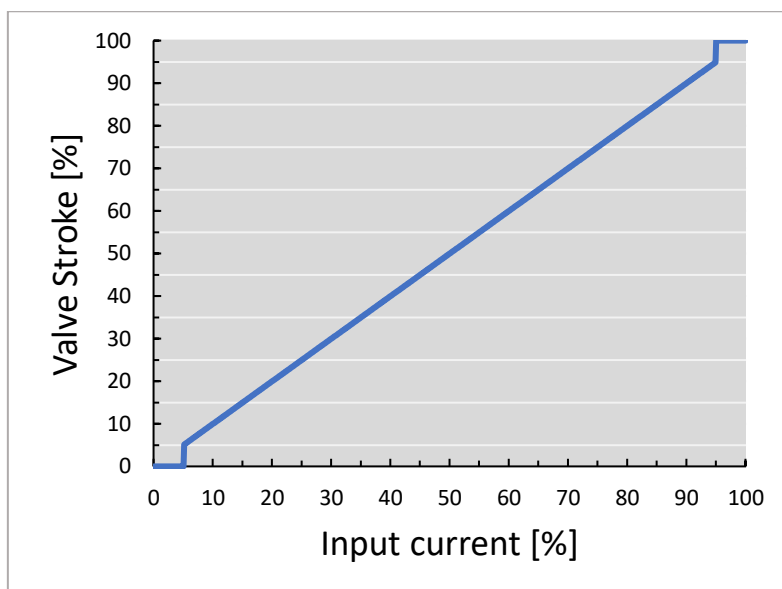



9.9.10 Target Position Ramp Up Rate (RAMP UP) and Target Position Ramp Down Rate (RAMP dN)

It is used to prevent the valve from moving too fast when the process to be controlled is too sensitive to rapid changes in flow or pressure. The unit of setting is %/sec. If you want to move 100% of the stroke for about 5 seconds, set it to 20 [%/sec]. The rising and falling speed can be set independently, and the valve will move to the target position as soon as possible when this function is switched off.

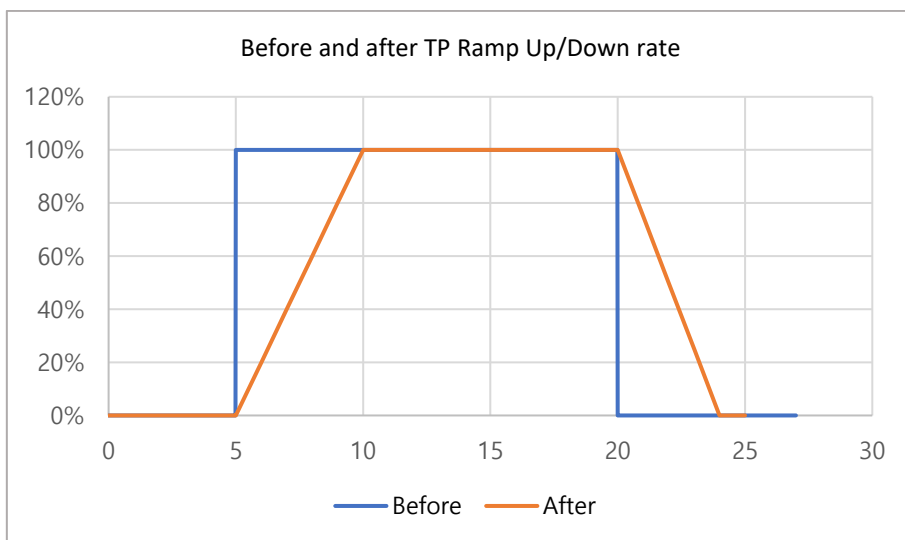

The curves below show the target position (red) and the actual position (blue) of the valve after applying SP Ramp Up/Down rate.

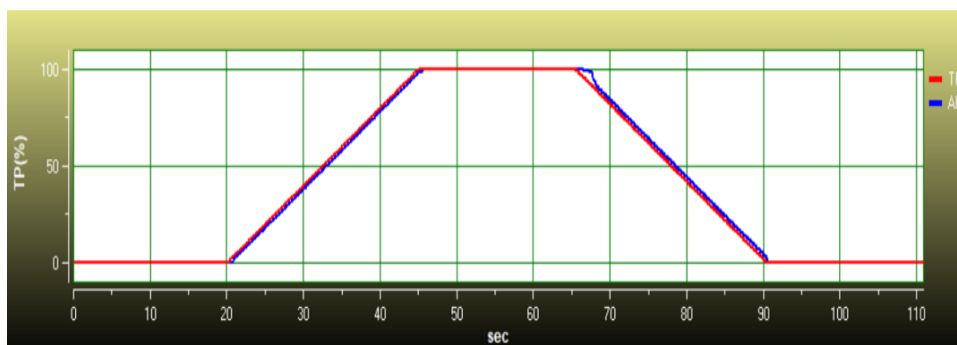


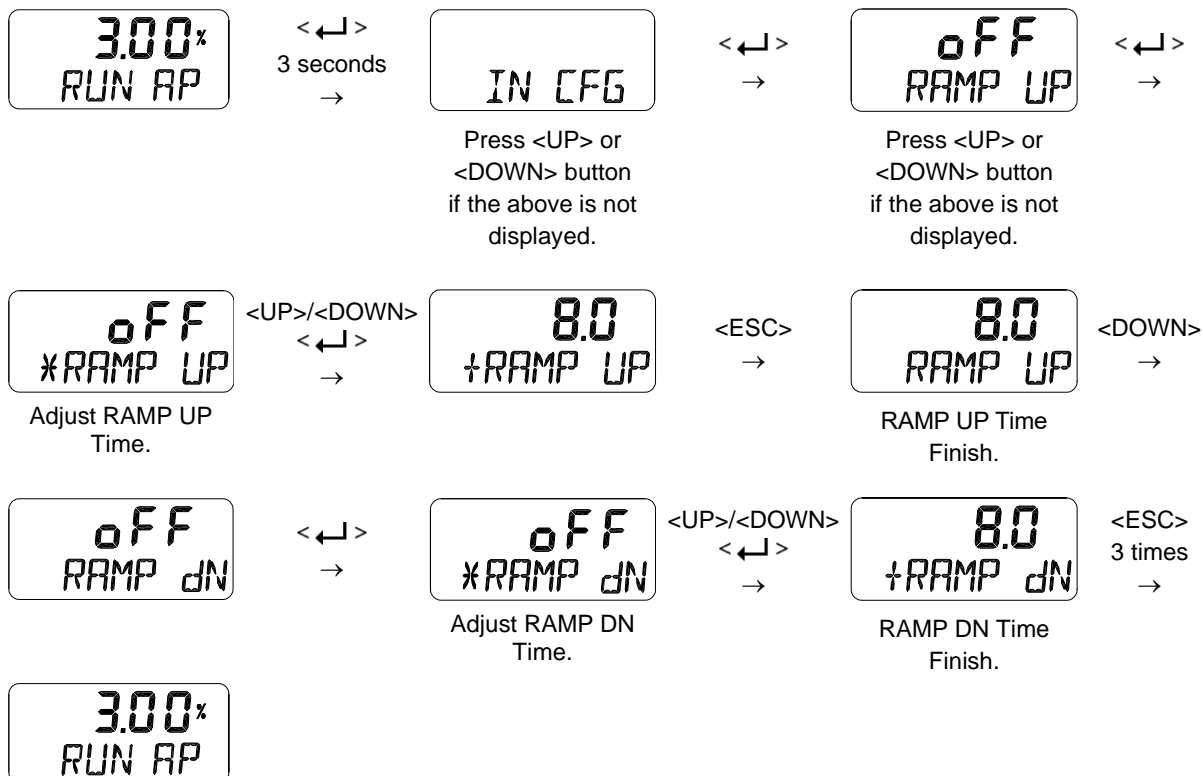

9.9.11 Digital Input Function (dIF OFF / FCL / FOP / PSTA / PSTO)


It is used to perform a specific function as the signal is activated on the digital input port. The dIF should be configured taking into account Digital Input Logic of Section 9.9.12.

Function name	Abbreviation on LCD	Description
OFF	OFF	Not performing any function.
Fully Closed Position	FCL	Valve moves to a fully closed position, i.e. safe position.
Fully Open position	FOP	Valve moves to a fully open position.
Partial Stroke Test Start	PSTA	Start Partial Stroke Test
Partial stroke Test Stop	PSTO	Stop Partial Stroke Test in progress

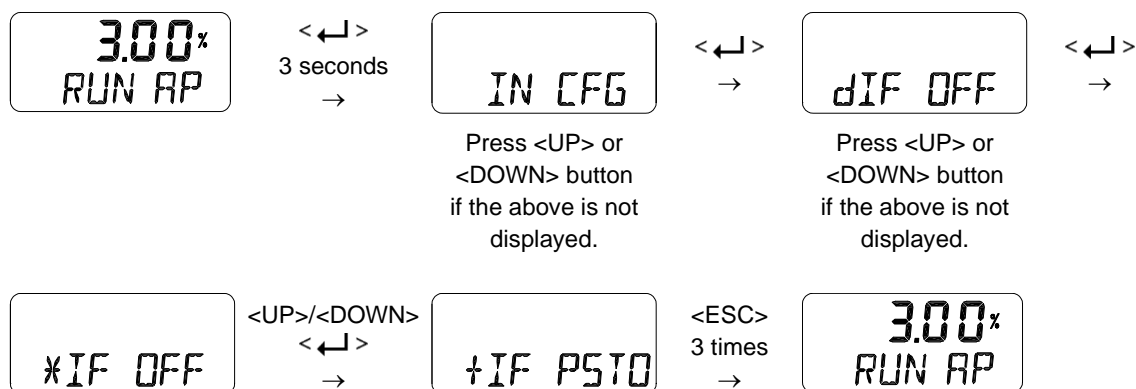

9.9.12 Digital Input Logic (dI LOGIC HI / Lo)

It sets the logic that activates digital input to High (HI) or Low (Lo). The initial factory setting is HI, which means that when 10 - 28 V DC voltage is applied, it is recognized as HI state. If Lo is set, when 0 – 5V is applied or the electric power is disconnected, it is recognized as Lo state.

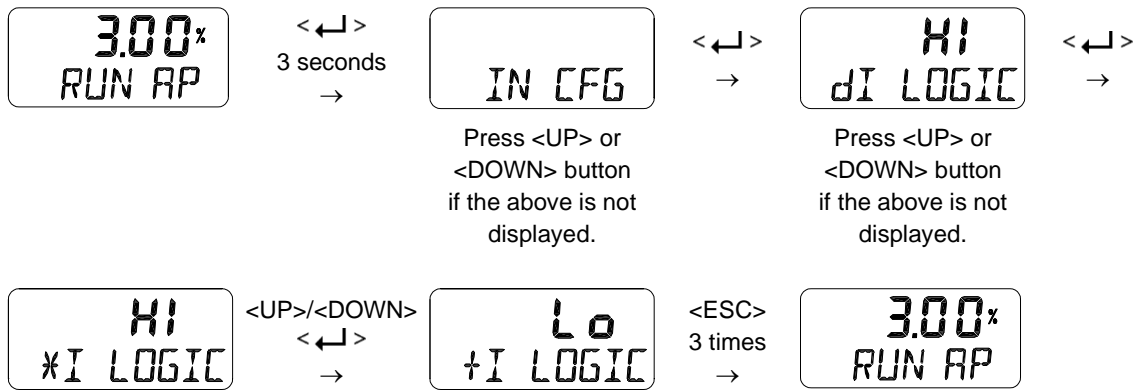


9.10 Output Configuration (OUT CFG)

Followings are the values changeable at the Output Configuration Mode.

- 1) 4-20 mA Analog Output Direction (PTM NORM / REVS)
- 2) 4-20 mA Analog Output Zero / End (PTM ZERO / ENd)
- 3) HART Feedback Direction (HT NORM / REVS)
- 4) Back Calculation (bACKCAL oFF / on)
- 5) Digital Output Function (dOF OFF / ...)
- 6) Digital Output Logic (dO LOGIC HI / Lo)
- 7) Analog Output Function (AOF OFF / ...)
- 8) Analog Output Logic (AO LOGIC Lo / HI)

9.10.1 4-20 mA Analog Output Direction (PTM NORM / REVS)

The 4-20 mA Analog Output from the positioner can be changed to normal (NORM) or reverse (REVS), which means they are the same or reversed direction as the actual position.

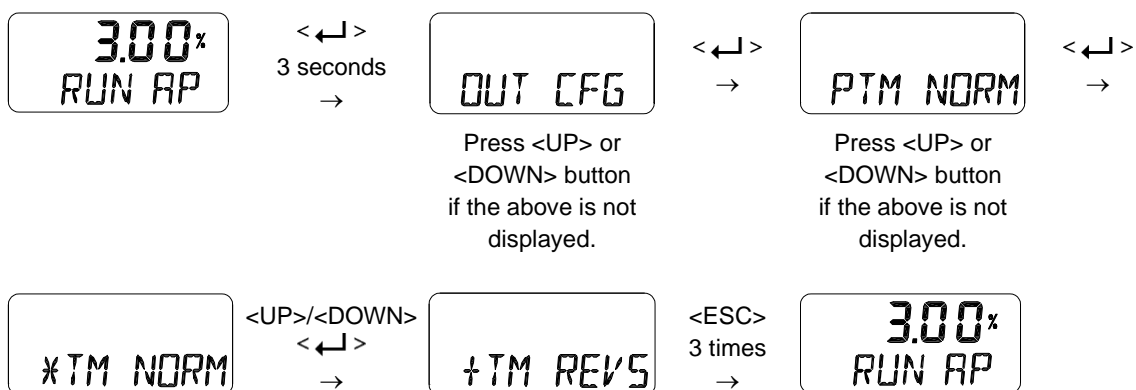

9.10.2 4-20 mA Analog Output Zero / End (PTM ZERO / ENd)

ZERO adjusts the zero point of the Analog Output (4 mA output), and ENd adjusts the end point of the Analog Output (20 mA output). This is used when the analog output signal needs to be feedbacked differently than the actual position of the valve, or to be adjusted a little. A measuring instrument such as an ampere meter is needed to view the analog output signal, and it should be connected as shown below.



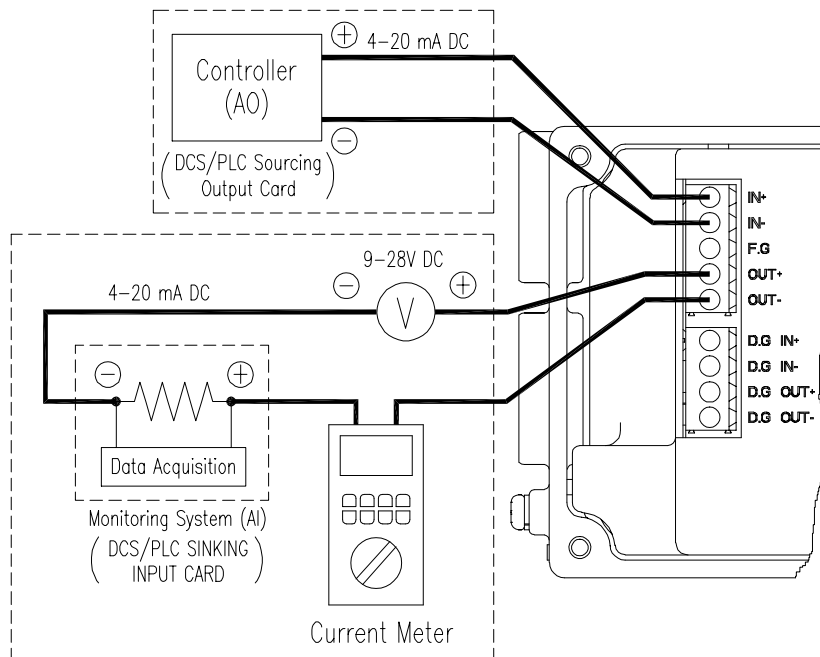


Fig. 9-3: Setting 4-20 mA Analog Output

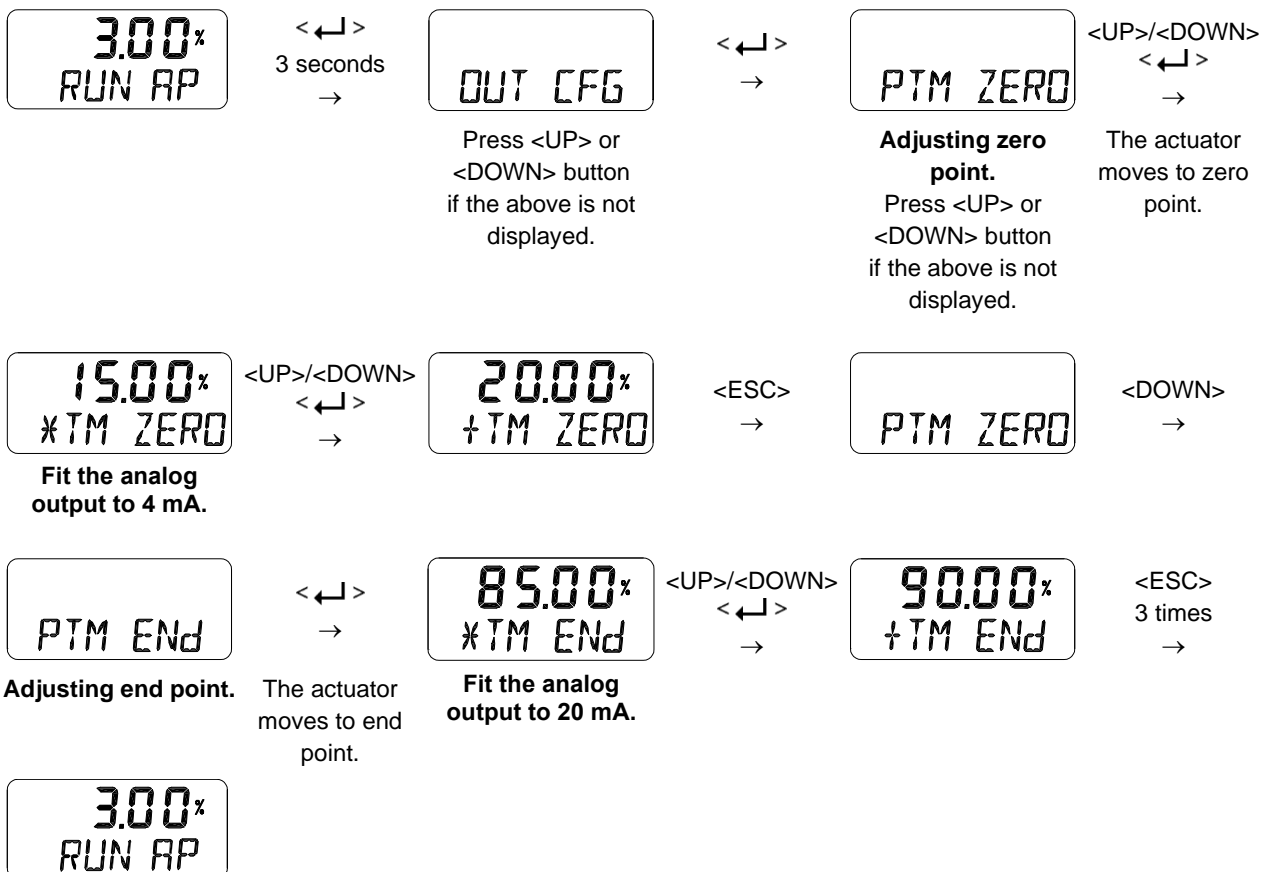


9.10.3 HART Feedback Direction (HT NORM / REVS)

The feedback signal from the HART communication output of the positioner can be output in the same direction or the reversed direction as the actual position of the valve. NORM or REVS is selected.

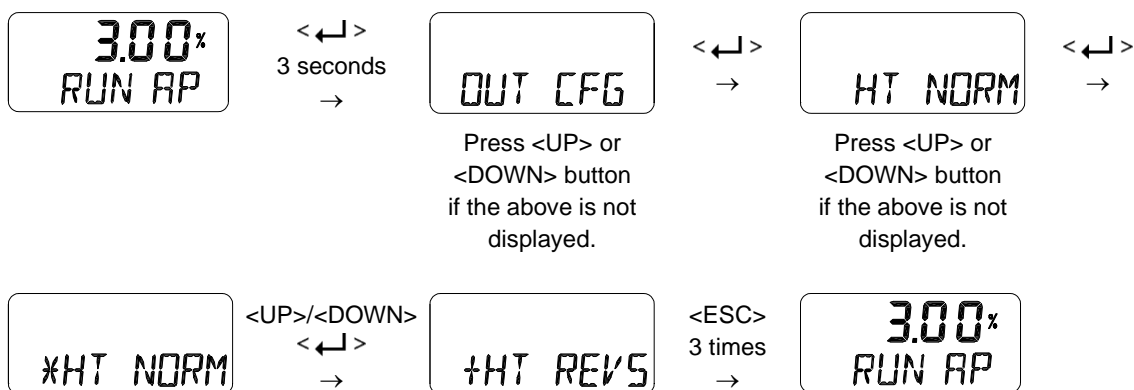

9.10.4 Back Calculation (bACKCAL off / on)

This function recalculates the output "RUN AP" value changed by the flow characteristics setting mode to display it linearly proportional to actual input current. For example, if the flow characteristic mode is set from "LIN" to "EQ", when an input current value of 8 mA (25 %) is applied, the target position is changed to 6.25 % and "RUN AP" is displayed as 6.25 % after the move. If you change the bACKCAL from OFF to ON, the "RUN AP" is displayed as 25 %.

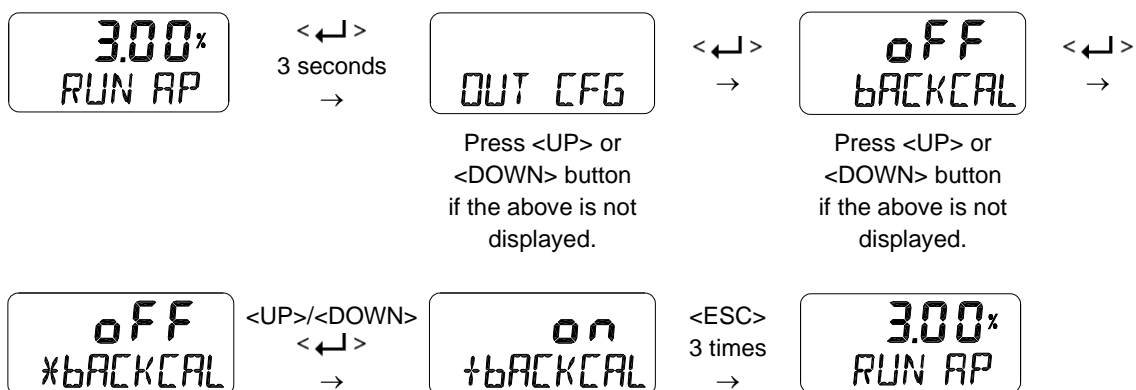


9.10.5 Digital Output Function (dOF OFF / ...)

This is used to output a specific alarm through the digital output port when triggered. Any of the alarms below can be configured to activate digital output. Assign any alarm to one of four NE107 signals to activate a digital output even when several alarms are triggered. The initial factory setting is OFF.


Alarm name to be assigned to digital out port	Abbreviation on LCD	Activated by digital output signal
OFF	OFF	Not activated when alarm occurs.
Temperature High Limit	TMPH	When the internal temperature exceeds the preset Temperature High Limit.
Temperature Low Limit	TMPL	When the internal temperature is lower than the preset Temperature Low Limit.
Travel High Limit	TVLH	When the valve position exceeds the Travel High Limit towards the 100 % position.
Travel Low Limit	TVLL	When the valve position is lower than Travel Low Limit towards the 0 % position.
Deviation Timeout	DVTO	When actual deviation greater than the preset Deviation persists longer than the preset Deviation Time.
PST Fail	PSTF	When Partial Stroke Test failed.
Loop Current Low	LPCL	When Loop input current is below 3.8 mA
Failure	FAIL	When the events classified as Failure in NE107 signals occur.
Functional Check	FUNC	When the events classified as Functional Check in NE107 signals occur.
Out of Specification	OUTS	When the events classified as Out of Specification in NE107 signals occur.
Maintenance required	MNTR	When the events classified as Maintenance Required in NE107 signals occur.

The assignment of any alarms to NE107 signals is shown in section 9.12.1 Default Alarms Settings. A review of the alarms that occurred the most recently can be done through 9.12.7 View Event Log (EVT LOG).

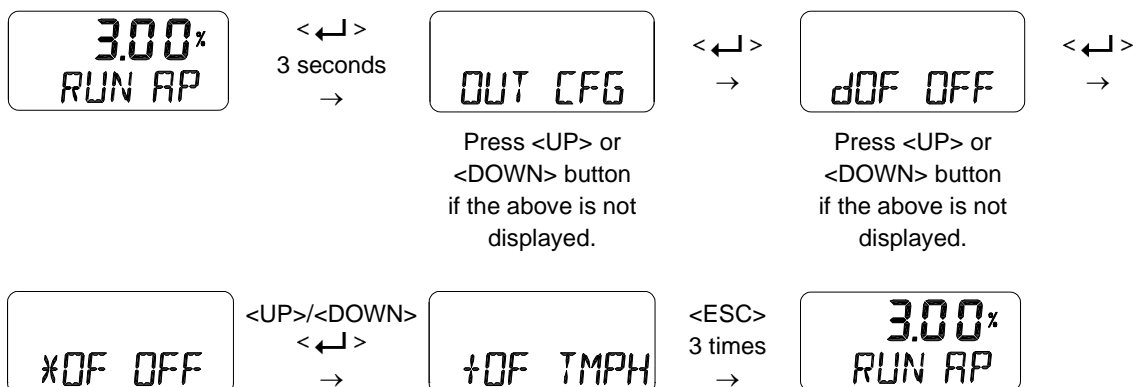


9.10.6 Digital Output Logic (dO LOGIC HI / Lo)

This logic is used to determine the state of Digital Output Switch by High (HI) or Low (Lo) when an event or alarm in synchronization with specific Digital Output switch is triggered. The initial factory setting is HI, which means that when 5 to 28 V DC voltage is applied, the output current will be in the range of 2.2 to 14 mA flowing through the digital output switch. Under the setting of Low (Lo), the output current will be less than 1.0 mA when 5 to 28 V DC is applied. A resistor limiting the output current is built into the electronic board.

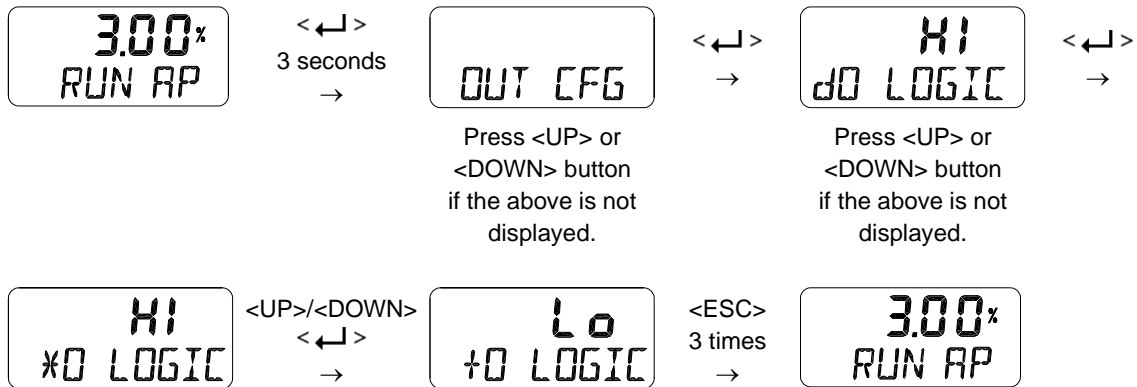


9.10.7 Analog Output Function (AOF OFF / ...)

This is used to output a specific alarm(NAMUR NE43) through the analog output port when triggered. If one of the alarms below occurs, it can be configured so that the analog output is activated. Assign any alarm to one of the four NE107 signals to activate an analog output signal required for any of the listed alarms. The initial factory setting is OFF. Analog output current is selected as 3.6 mA or 21.0 mA by Analog Output Logic (AO LOGIC).

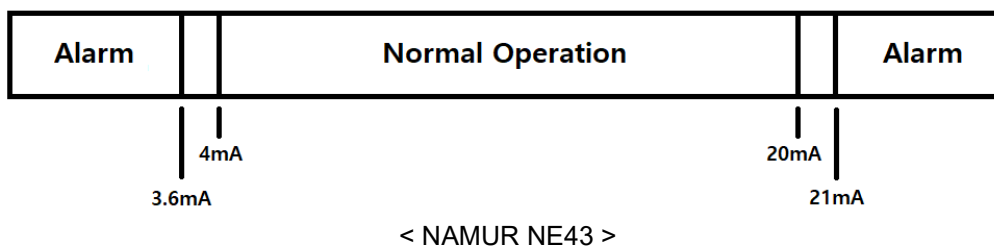


Alarm name to be assigned to digital out port	Abbreviation LCD	Activated by analog out signal
OFF	OFF	Not activated when alarm occurs.
Temperature High Limit	TMPH	When the internal temperature exceeds the preset Temperature High Limit.
Temperature Low Limit	TMPL	When the internal temperature is lower than the preset Temperature Low Limit.
Travel High Limit	TVLH	When the valve position exceeds the Travel High Limit towards the 100 % position.
Travel Low Limit	TVLL	When the valve position is lower than Travel Low Limit towards the 0 % position.
Deviation Timeout	dVTO	When actual deviation greater than the preset Deviation persists longer than the preset Deviation Time.
PST Fail	PSTF	When Partial Stroke Test failed.
Loop Current Low	LPCL	When Loop input current is below 3.8 mA
Failure	FAIL	When the events classified as Failure in NE107 signals occur.
Functional Check	FUNC	When the events classified as Functional Check in NE107 signals occur.
Out of Specification	OUTS	When the events classified as Out of Specification in NE107 signals occur.
Maintenance required	MNTR	When the events classified as Maintenance Required in NE107 signals occur.

The assignment of any alarms to NE107 signals is shown in section 9.12.1 Default Alarms Settings. The verification of the alarms that occurred the most recently can be done through 9.12.7 View Event Log (EVT LOG).

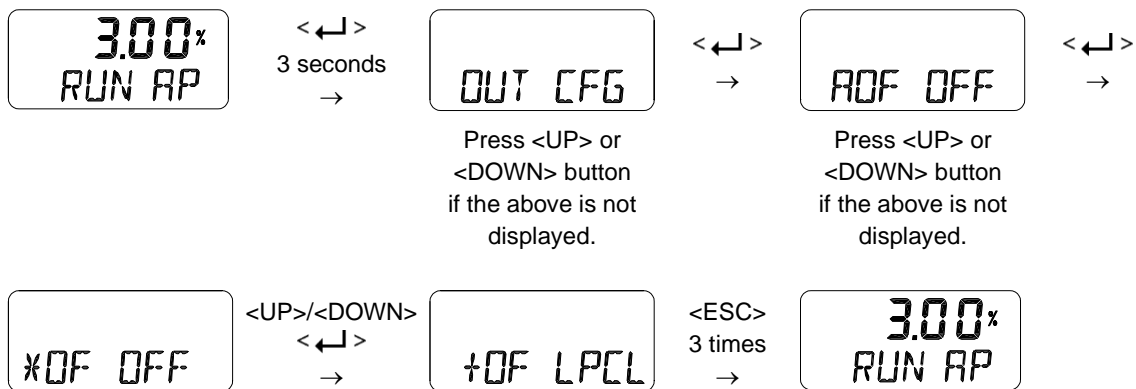

9.10.8 Analog Output Logic (AO LOGIC Lo / HI)

This logic function activates the analog output to High (HI) or Low (Lo). A current of less than 3.6 mA is sourced from the analog output port when the initial factory setting is low (Lo) with an external voltage source applied to the analog output. When the analog output logic is set to HI, more than 21.0 mA is sourced.

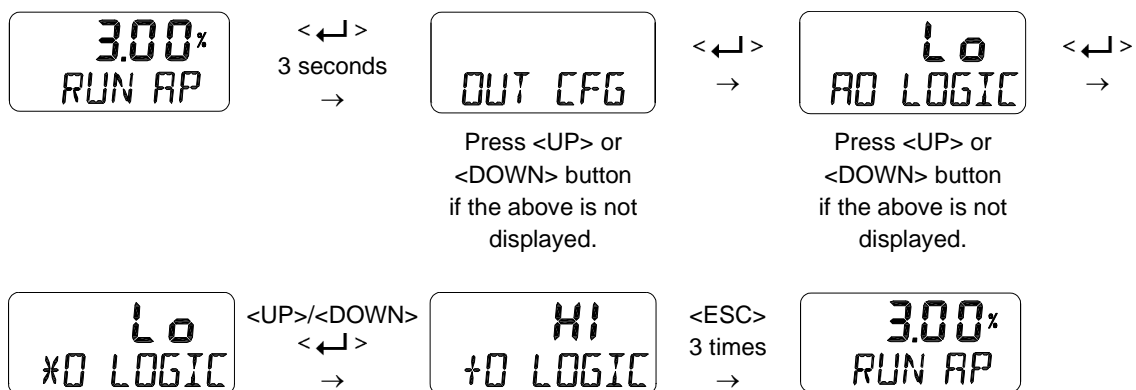


9.11 Device Configuration (dEV CFG)

Followings are the values changeable at the dEV CFG Mode.

- 1) Action Setting (ACT REVS / dIR)
- 2) Linear Interpolation (ITP oFF / on)
- 3) Lock of Parameters (Write Protect, W UNLOCK / LOCK)
- 4) Actual Position View Mode (View Mode, VI NORM / REVS)
- 5) Polling address setting (POL Addr 0 to 63)
- 6) Factory Reset (dEFAULT oFF / on)
- 7) Positioner Self-Test (SELFTEST)

9.11.1 Action Setting (ACT REVS / dIR)


Reverse Action (REVS) or Direct Action (dIR) are automatically set by performing "AUTO 2" within the Auto Calibration function. However, this function is used when the user requires to change ACT REVS or ACT dIR to other action. Changing the action from Reverse Action (REVS) to Direct Action (dIR) or Direct Action (dIR) to Reverse Action (REVS) will also change the Signal Direction (SIG), Position Transmitter Direction (PTM), HART Feedback Direction (HT) and View Mode (VI).

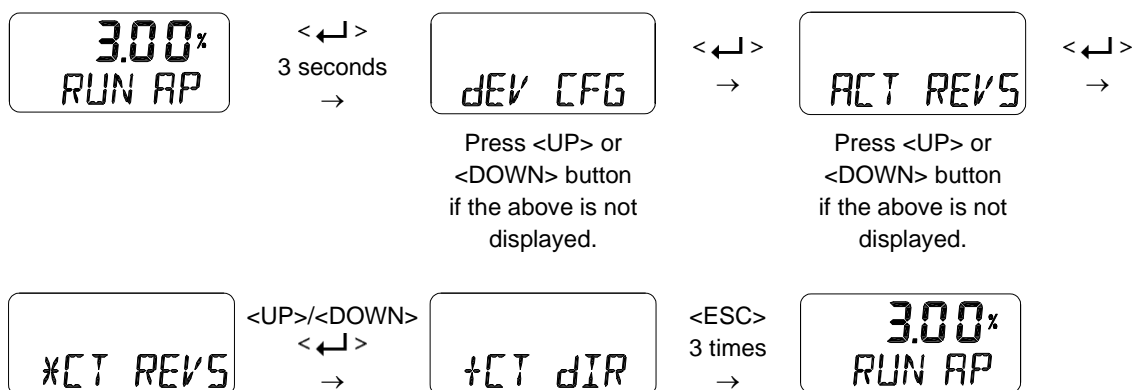

9.11.2 Linear Interpolation (ITP OFF / on)


ITP is used to compensate the linear motion of the actuator into rotary motion of the feedback lever. Following Auto Calibration, the ITP mode is set automatically to “on” when the angle range of the feedback lever is greater than 20 °, but it is set to oFF when this angle is less than 20 ° or rotary positioner is used.

The settings below are the process of manually changing the “ITP OFF” to the “ITP on”.

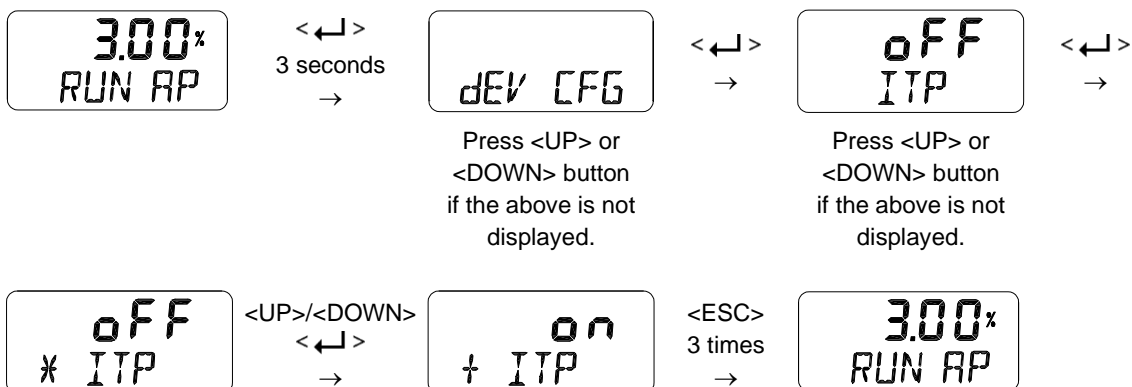


9.11.3 Lock of Parameters (Write Protect, W UNLOCK / LOCK)

This function is used to set (LOCK) or disable (UNLOCK) the lock for the parameters. Used to prevent the stored parameters from being changed.

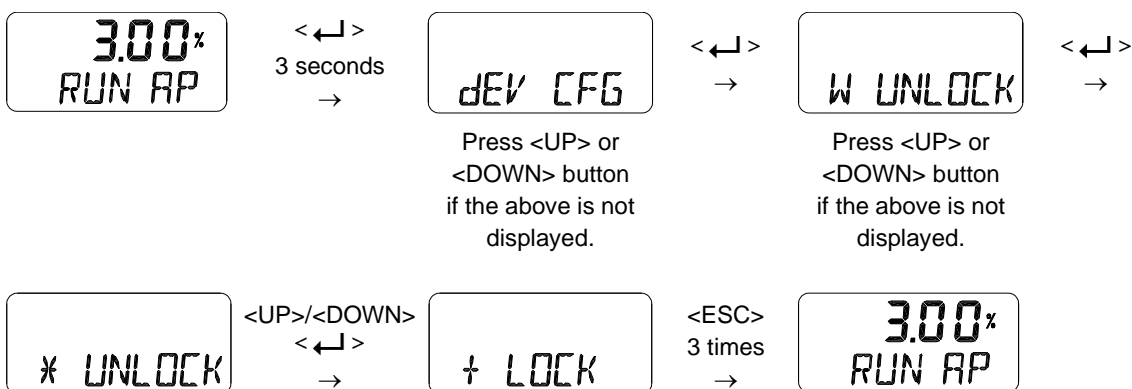


9.11.4 Actual Position View Mode (View Mode, VI NORM / REVS)

This function is used to set the "RUN AP" value on the LCD to be displayed as direct (NORM) or reversely (REVS) as the actual position of the valve.

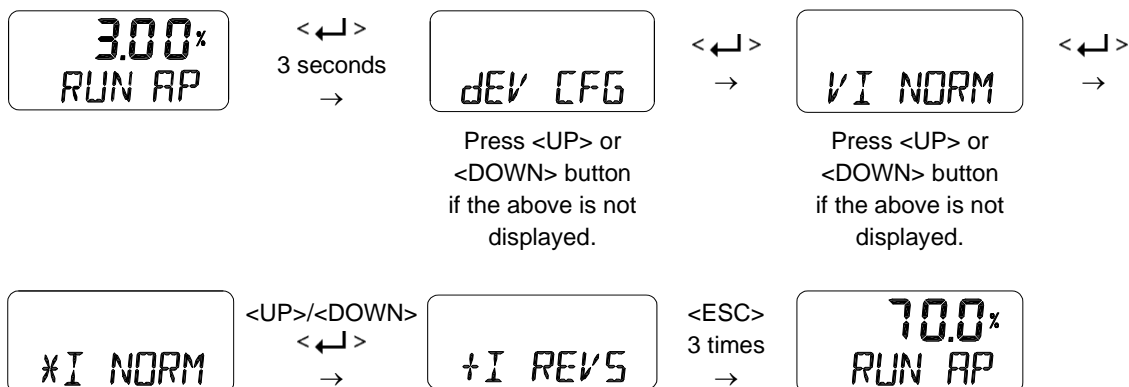

9.11.5 Polling address setting (POL Addr)

This function is used to set the address value of the positioner on HART(Highway Addressable Remote Transducer) communication. The value from 0 to 63 could be set and default is 0.

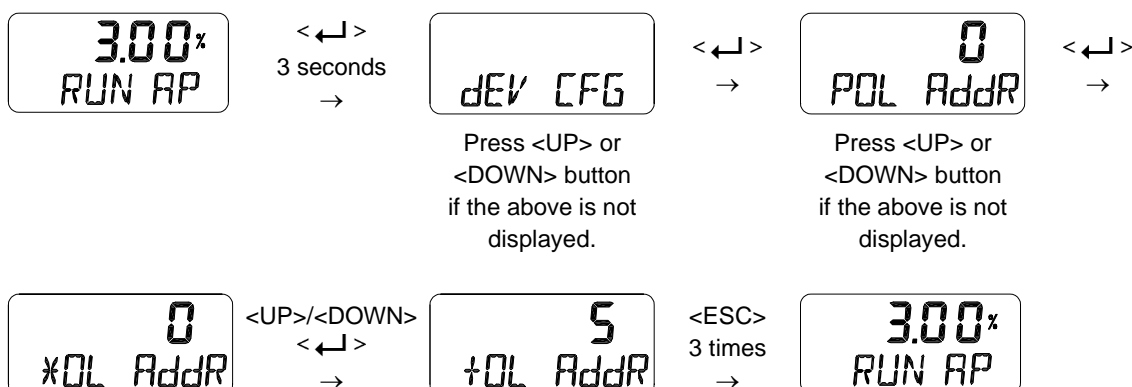


9.11.6 Factory Reset (dEFAULT oFF / on)

This function initializes all parameters stored in the positioner to initial factory setting. In the dEFAULT mode, press the Enter button to enables ON/OFF setting and then pressing Enter button for approximately 3 seconds changes the dEFAULT mode from oFF to "on". Additional pressing of Enter button resets all parameters to initial factory state.




Pay attention when using this mode as all the parameter values will be changed to the factory settings.

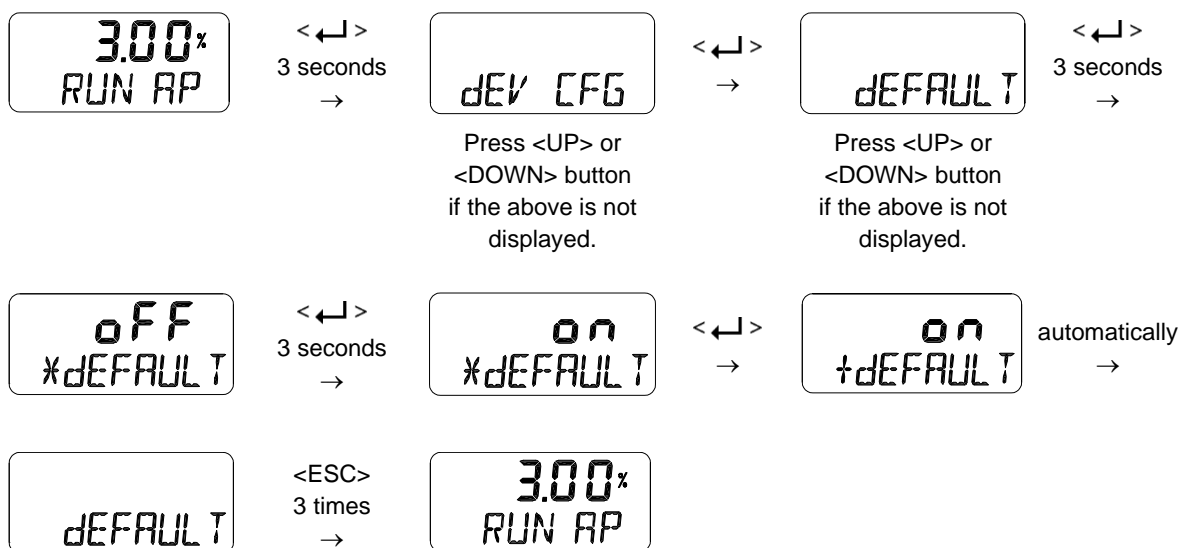

9.11.7 Positioner Self-Test (SELFTEST)

This function is used to diagnose the operation of the memory (RAM or NVM) inside the positioner. If no error is found during SELFTEST, the SELFTEST menu is displayed after FINISH is displayed, and if abnormalities are detected, the message "SEt / NVMW" is displayed.

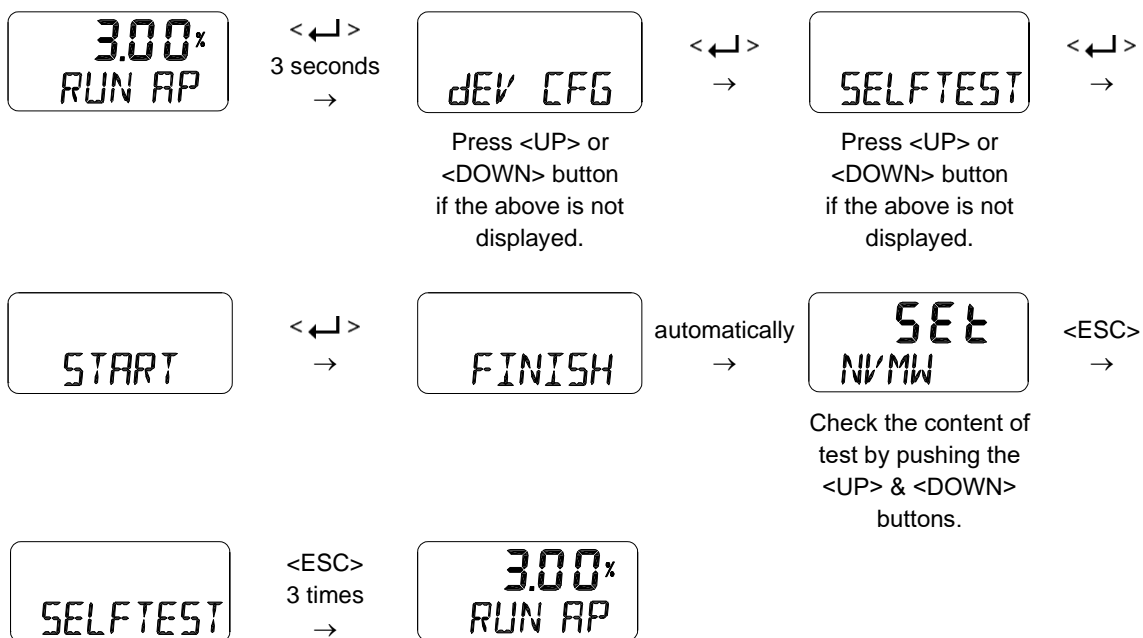

Diagnostic message



If the abbreviation displayed at the top line is "SEt", it means the event has been created, and if it is "CLr", the message has been cleared. NVMW at the bottom is an alarm message that has occurred. See "9.15 Status and Alarm Code" for alarm details.

9.12 Diagnosis Mode (dIAGNd)

Followings are the values changeable at the dIAGNO Mode.

- 1) Default Alarm Settings
- 2) Process Status (PS)
- 3) Device Status (dS)
- 4) View Monitoring Counts (VI CNTS)
- 5) Diagnostic Limit Configuration (LIMT CFG)
- 6) Reset Alarm Status (RST ALRM)
- 7) View Event Log (EVT LOG)
- 8) Partial Stroke Test Record (View PST Result Record, PST RSLT)
- 9) PST Configuration (PST CFG)
- 10) Run PST (PST NOW)
- 11) Periodic PST Test (PST Schedule, PST SCHd)

9.12.1 Default Alarm Settings

The table below shows the initial values set at factory for handling the positioner status or associated process conditions. To trigger any alarm automatically when a specific event occurs, the corresponding alarm needs to be set to "Enable". Each status or alarm is also set to either Failure, Out of Specification, Maintenance Required, or Functional Check depending on the classification of the NE107 signal, so that the corresponding NE107 symbol is displayed when a preset alarm occurs. This setting can be reassigned to the one of NE107 signals, depending on the operator's decision. As shown in the table below, the status / alarms that can be manually reset are Auto Calibration Running, Diagnosis Running, Critical NVM Fail, Non-Critical NVM Fail, PST Fail and Auto Calibration Fail. The activation of each status / alarm and the classification of NE107 signals can be set through HART communication, and the five alarms below can be even activated using the LCD screen and button.





- Travel High Limit, Travel Low Limit, Temperature High Limit, Temperature Low Limit, Deviation Timeout

Status / Alarm	Default setting	Default NE107 signal	Resettable manually when alarm occurred?
Local Operation Active	Enable	Functional Check	No
Auto Calibration Running	Enable	Functional Check	Yes
PST Running	Enable	Functional Check	No
Diagnosis Running	Enable	Functional Check	Yes
Position Sensor High Limit	Disable	Out of Specification	No
Position Sensor Low Limit	Disable	Out of Specification	No
Critical NVM Fail	Enable	Failure	Yes
Non Critical NVM Fail	Disable	Failure	Yes

Status / Alarm	Default setting	Default NE107 signal	Resettable manually when alarm occurred?
Cycle Count Limit	Disable	Maintenance Required	No
Travel Accumulate Limit	Disable	Maintenance Required	No
Operating Count Limit	Disable	Maintenance Required	No
Temperature High Limit	Disable	Out of Specification	No
Temperature Low Limit	Disable	Out of Specification	No
Travel High Limit	Disable	Out of Specification	No
Travel Low Limit	Disable	Out of Specification	No
Deviation Timeout	Enable	Out of Specification	No
PST Fail	Enable	Failure	Yes
Temperature Sensor Fail	Disable	Failure	No
Position Sensor Fail	Enable	Failure	No
Abnormal Drive Signal	Disable	Out of Specificaion	No
I Value High Limit	Disable	Out of Specification	No
I Value Low Limit	Disable	Out of Specification	No
Travel Cutoff High Limit	Disable	Out of Specification	No
Travel Cutoff Low Limit	Disable	Out of Specification	No
Not Calibrated	Disable	Maintenance Required	No
Auto Calibration Fail	Enable	Maintenance Required	Yes
Zero Point Drift	Disable	Maintenance Required	No
End Point Drift	Disable	Maintenance Required	No
Stack Overflow	Enable	Failure	No
Communication Error Limit	Disable	Out of Specification	No
Full Close Count Limit	Disable	Maintenance Required	No
Full Open Count Limit	Disable	Maintenance Required	No
Loop Current High Limit	Disable	Out of Specificaion	No
Loop current Low Limit	Enable	Failure	No
DI Status Change	Disable	Not defined	No
DO Status Change	Disable	Not defined	No
Diagnosis Fail	Disable	Failure	No

9.12.2 Process Status (PS)

The status of the current process is indicated as GOOd, NE107 symbol, and abbreviation for alarm.

NE107 symbols	Abbreviation	Function
None	PS GOOd	Good
	PS FAIL	Failure
	PS FUNC	Functional Check
	PS OUTS	Out of Specification
	PS MNTR	Maintenance Required





Alarms generated by each process are assigned to one of the four NE107 signals at initial factory settings and can be used by reassigning the already preset signals as required. Reassignment of NE107 signals to process alarms shall be made using HART communication. The table below shows the type of the process status or alarm and its abbreviations. See 9.15 Status and Alarm Code for the details of each alarm.

Process Alarm	Abbreviation
Cycle Count Limit	CYCC
Travel Accumulator Limit	TVLA
Operating Count Limit	OPRC
Temperature High Limit	TMPH
Temperature Low Limit	TMPL
Travel High Limit	TVLH
Travel Low Limit	TVLL
Deviation Timeout	dVTO
Travel Cutoff High Limit	TVCH
Travel Cutoff Low Limit	TVCL
Zero Point Drift	ZPDR
End Point Drift	EPDR
Full Close Count Limit	FCLC
Full Open Count Limit	FOPC
Loop Current High Limit	LPCH
Loop Current Low Limit	LPCL




9.12.3 Device Status (dS)

The status of the current device is indicated as GOOd, NE107 symbol, and abbreviation for alarm.

NE107 symbols	Abbreviation	Function
None	dS GOOd	Good
	dS FAIL	Failure
	dS FUNC	Functional Check
	dS OUTS	Out of Specification
	dS MNTR	Maintenance Required

Reassignment of NE107 signals to device alarms shall be made using HART communication. The table below shows the type of the device status or alarm and its abbreviations. See 9.15 Status and Alarm Code for the details of each alarm.

Device Alarm	Abbreviation
Loop Operation Active	LOPA
Auto Calibration Running	CALR
PST Running	PSTR
Diagnosis Running	dIGR
Position Sensor High Limit	PSNH
Position Sensor Low Limit	PSNL
Critical NVM Fail	NVMF
Non-Critical NVM Fail	NVMW
Abnormal Drive Signal	AbdS
Not Calibrated	NCAL
Auto Calibration Fail	CALF
Communication Error Limit	COMM
DI 1 Status	dI1S
DO 1 Status	dO1S
Diagnosis Fail	dIGF
PST Fail	PSTF

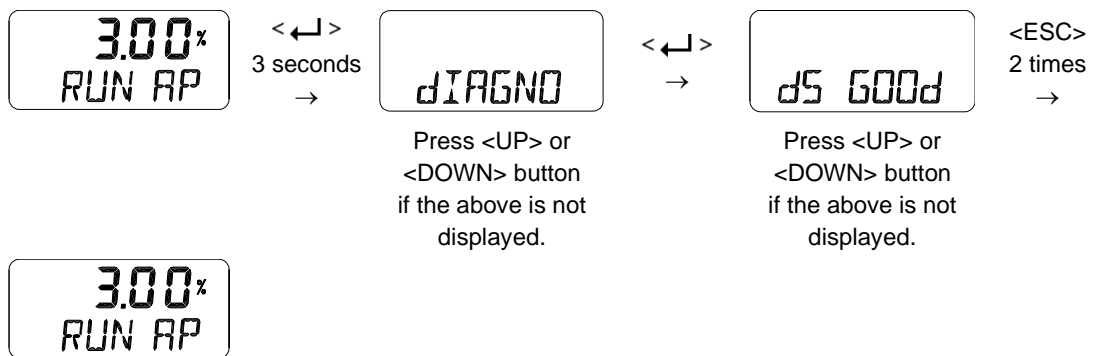


9.12.4 View Monitoring Counts (VI CNTS)

It is used to just view the accumulated data information for valve movement up to now.

Counter Name	Abbreviation [unit]	Function
Cycle Count	CYCL CNT	The accumulated number of times the valve has changed its direction. It is accumulated only when the valve change direction while Cycle Count Deadband is exceeded.
Travel Accumulator	TVL ACUM [%]	The total valve travel accumulated whenever Travel Accumulator Deadband is exceeded.
Operating Count	OPER CNT	Total number of input change applied to I/P converter.
Fully Open Count	FOP CNT	The accumulated number of times the valve has been fully open.
Fully Closed Count	FCL CNT	The accumulated number of times the valve has been fully closed.


The upper limit for the five counters can be set so that an alarm is triggered if the accumulated counter value exceeds this limit. Other parameters related to the counters, such as Cycle Count Deadband, Travel Accumulator Deadband or Upper Limits for the counters can be only set through HART using DD or DTM.

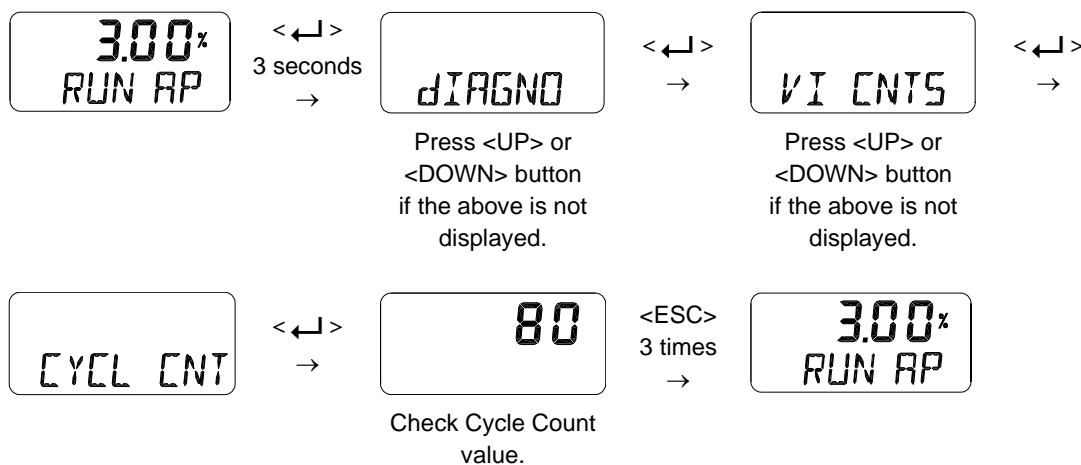

9.12.5 Diagnostic Limit Configuration (LIMT CFG)

This configuration is used to set the upper or lower limit that is generated by the Travel High Limit Alarm, Travel Low Limit Alarm, Temperature High Limit Alarm, Temperature Low Limit Alarm, and Deviation Timeout Alarm. Even if this condition is met, the corresponding alarm will not be triggered if the alarm(s) is not enabled.

Upper / Lower Limit or Enable	Abbreviation [unit]	Description
Travel High Limit	TVL HI [%]	Alarm is triggered if the valve stroke exceeds TVL HI. The initial factory setting is 100%
Travel Low Limit	TVL LO [%]	Alarm is triggered if the valve stork is lower than TVL LO. The initial factory setting is 0 %.
Temperature High Limit	TEMP HI [°C]	Alarm is triggered if the internal temperature exceeds TEMP HI. The initial factory setting is +85°C
Temperature Low Limit	TEMP LO [°C]	Alarm is triggered if the internal temperature is lower than TEMP LO. The initial factory setting is -30°C
Deviation Time	dV TIME [sec]	Alarm is triggered if actual deviation larger than the preset "dV db" persists longer than the preset "dV TIME". The initial factory setting is 60 sec and 5 %.
Deviation Deadband	dV db [%]	
Travel High Limit Alarm Enable	AL TVLH	These are used to set "on" or "oFF" for each alarm. When set to oFF, the alarm does not occur even if the conditions are met. All the initial factory settings are oFF.
Travel Low Limit Alarm Enable	AL TVLL	
Temperature High Limit Alarm Enable	AL TMPH	
Temperature Low Limit Alarm Enable	AL TMPL	
Deviation Timeout Alarm Enable	AL dVTO	

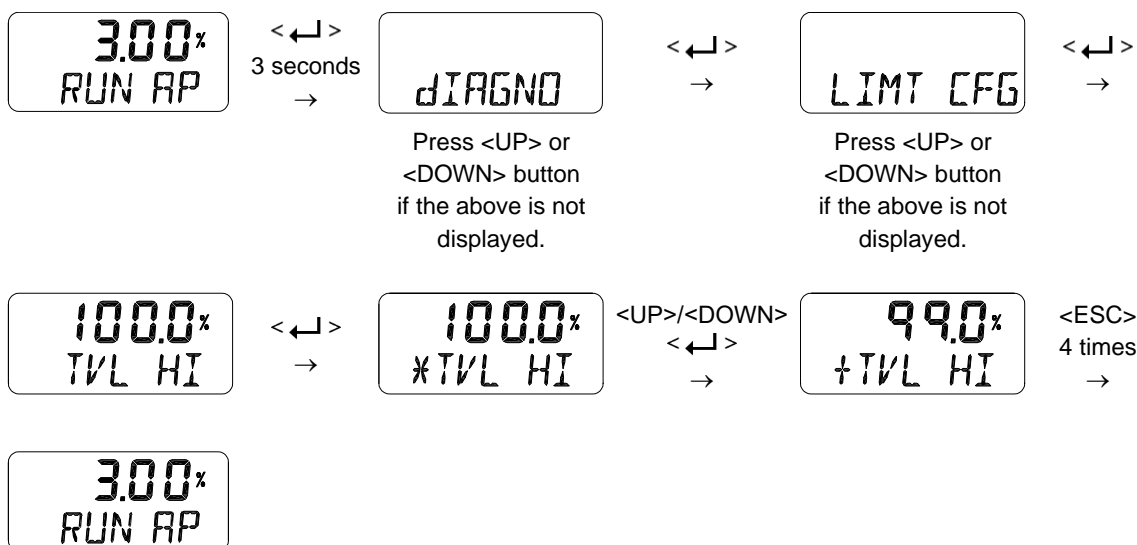


9.12.6 Reset Alarm Status (RST ALRM off / on)

The alarm is automatically released when the cause of the alarm is removed. For example, if a high-temperature alarm is created, the alarm is automatically released when internal temperature drops below the Temperature High Limit. However, if the Partial Stroke Test fails or Auto Calibration fails, use this function to release the alarm.


Below is an alarm list that can be released using the RST ALRM function.

- 1) Auto Calibration Running
- 2) Diagnosis Running
- 3) Critical NVM Fail
- 4) Non-Critical NVM Fail
- 5) PST Fail
- 6) Auto Calibration Fail

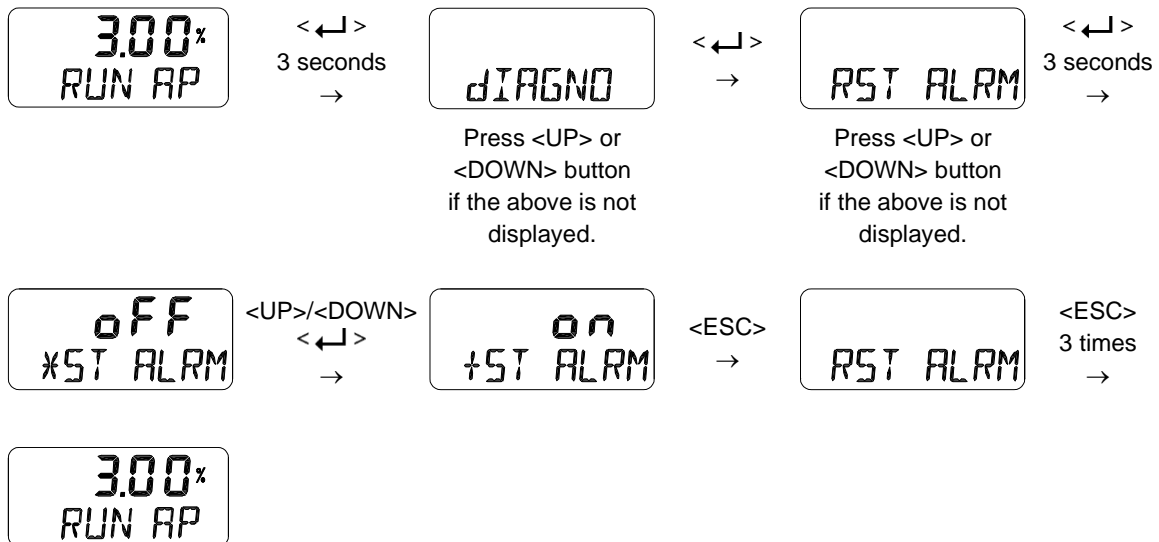

9.12.7 View Event Log (EVT LOG)

This is used to show the 20 most recent events that occurred in operation. Record 0 is the most recent of the 20 events and Record 19 is the oldest event. The event detail shows the time when the event occurred (EVT TIME) as well as the content of the event (EVT INFO). See 9.15 Status and Alarm Codes for an abbreviation and description of the event details.

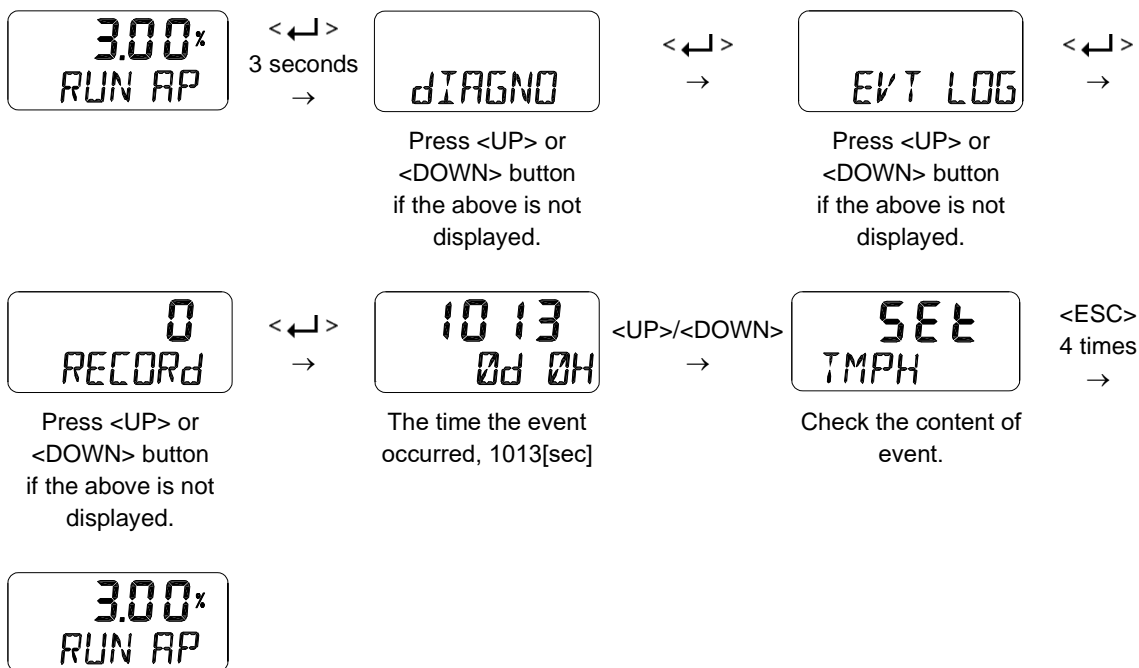

Event Message Description




The “SEt on the upper section of screen shows that a specific event has occurred, while the “CLr” means that the event has been removed. The “TMPH” displayed on the bottom section indicates an abbreviation for the alarm.

9.12.8 Partial Stroke Test Record (View PST Result Record, PST RSLT)

This is used to show information about the 10 most recent Partial Stroke Tests performed. Record 1 is the most recent of the 10 PST histories, and Record 10 is the result of the oldest PST operation. The response time (RT), response code (RC), and dead time (dT) after the PST operation are also shown. Response time represents the time to reach the target position from the PST start, and deadtime indicates the time from the start of the PST command to the moment the valve starts to move. The table below describes the response codes.

Name of RC	Response Code (RC)		Description
Pass	PASS	1	Pass
Out Of Tolerance	OOT	2	Out of Tolerance : When PST is executed, the AP (actual position) is out of PST tolerance compared to the PST start position value.
PST Time Out	PSTO	3	Time Out : Aborted if the AP fails to move to the Target Position within PST Limit Time during PST execution.
Abort	AbOT	4	Abort, but reserved
Hunting	HUNT	5	Hunting occurs during the test.
Abnormal Shutdown	AbSd	6	Abnormal Shutdown : An unexpected problem occurred during the test.
Loop Current Low	LPCL	256	PST execution is stopped due to a change in the input signal (0.8 mA (5%) or more).
Stop By Digital Input	STdI	512	Stopped by Digital Input Function (dIF)

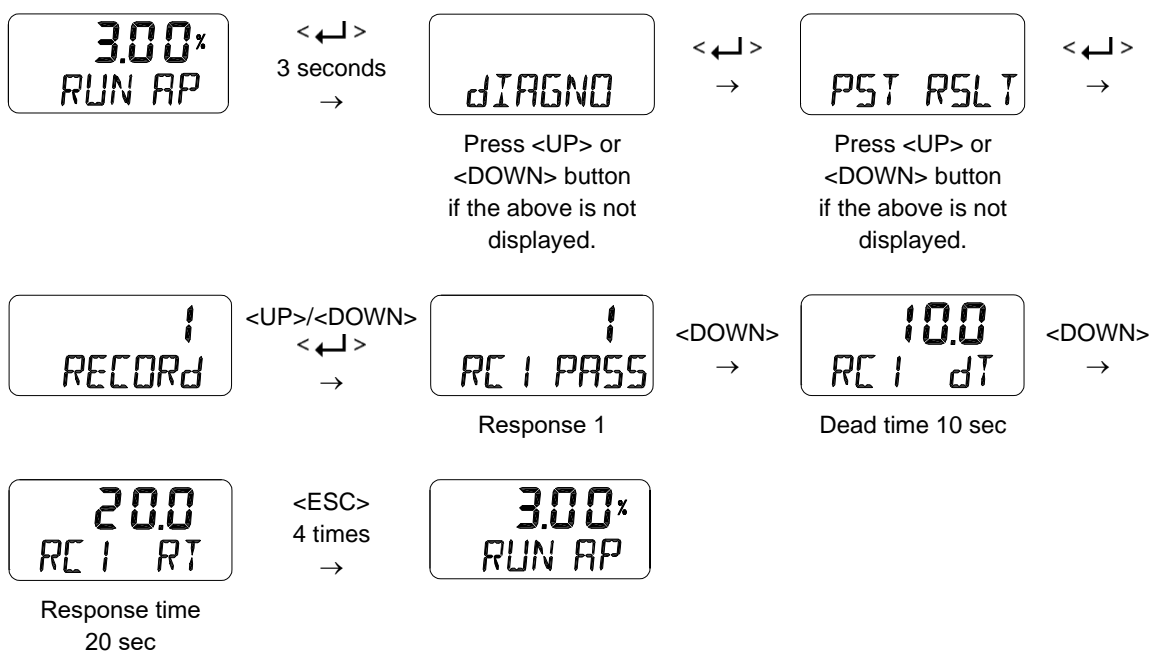


9.12.9 PST Configuration (PST CFG)

Parameter names	Abbreviation [unit]	Description
PST Interval	INTERVAL [days]	Sets time interval PST is triggered. Initial factory setting is 365 days.
PST Start Position	START PO [%]	Sets the start position to launch PST. Initial factory setting is 100 %.
PST Tolerance	TOL [%]	The allowable tolerance for the start position. PST Failure alarm is triggered as Out of Tolerance(OOT) when actual position exceeds the tolerance. Initial setting is 5%.
PST Target Position	TARGET [%]	Target position. Initial factory setting is 90%.
PST Hold Time	HOLD TM [sec]	Sets hold time after target position ($\pm 2\%$) is reached. Initial factory setting is 5 sec.
PST Limit Time	LIMIT TM [sec]	PST Failure alarm is triggered as Limit Time Over (LTO) when target position is not reached within LIMT TM after starting PST. Initial factory setting is 10 sec.
PST Ramp Up Rate	RAMP UP [%/sec]	Sets ramp rate when the valve moves from the target position to the start position. Initial factory setting is oFF.
PST Ramp Down Rate	RAMP dN [%/sec]	Sets ramp rate when the valve moves from the start position to the target position. Initial factory setting is oFF.
Remaing PST Time	NEXT PST[days.hrs]	Based on the current time, the remaining time to start PST is displayed by Days and Time.


Graph below shows PST target position (TP) and actual position (AP) when applying PST Start Position 100%, Target Position 90%, Hold Time 10 sec, PST Ramp up Rate 0.5%/sec, PST Ramp down Rate 0.5%/sec.



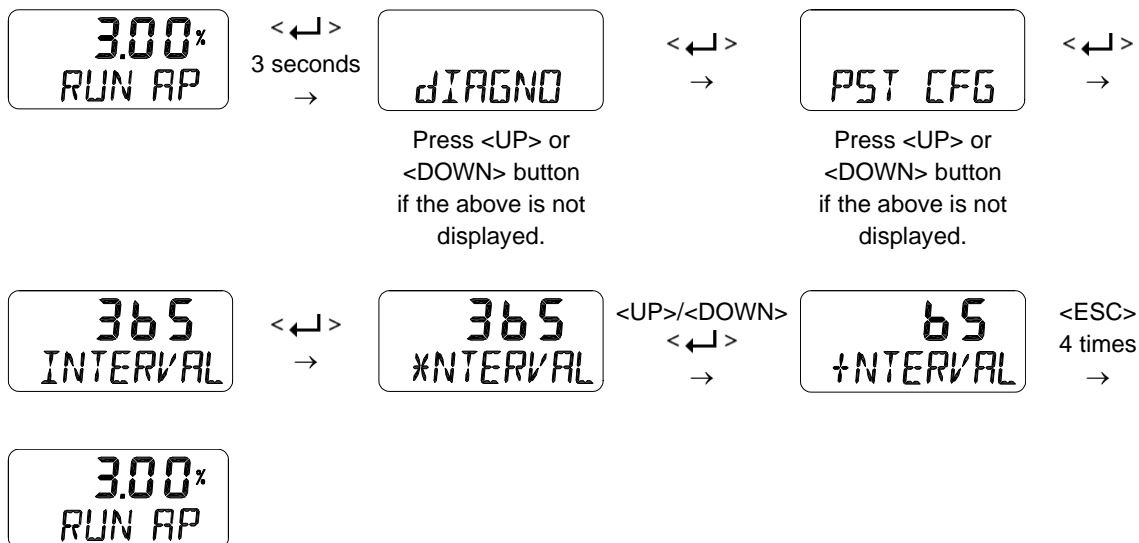


9.12.10 Run PST (PST NOW)

PST NOW is used to perform Partial Stroke Test promptly in accordance with the conditions set in 9.12.9.

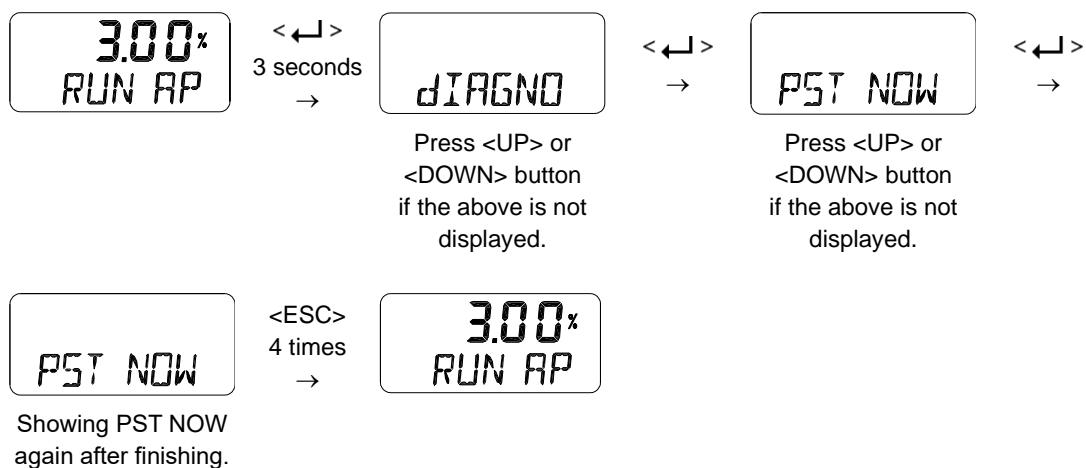


9.12.11 Periodic PST Test (PST Schedule, PST SCHd OFF / on)

When PST SCHd is set to ON, the Partial Stroke Test is executed regularly under the conditions set in 9.12.9 above. For example, PST is performed every 365 days when PST Interval is set to 365 days. The initial factory setting is OFF.

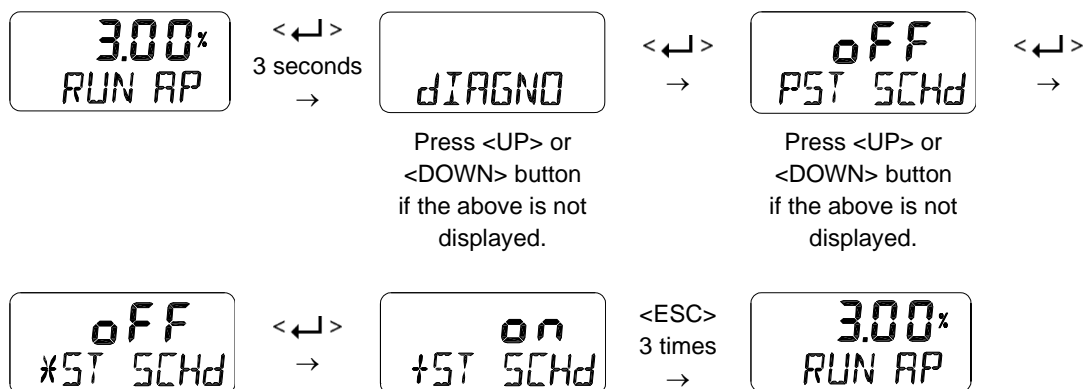

9.13 Position information (INFO)

The diverse Positioner information is provided in the INFO Mode.

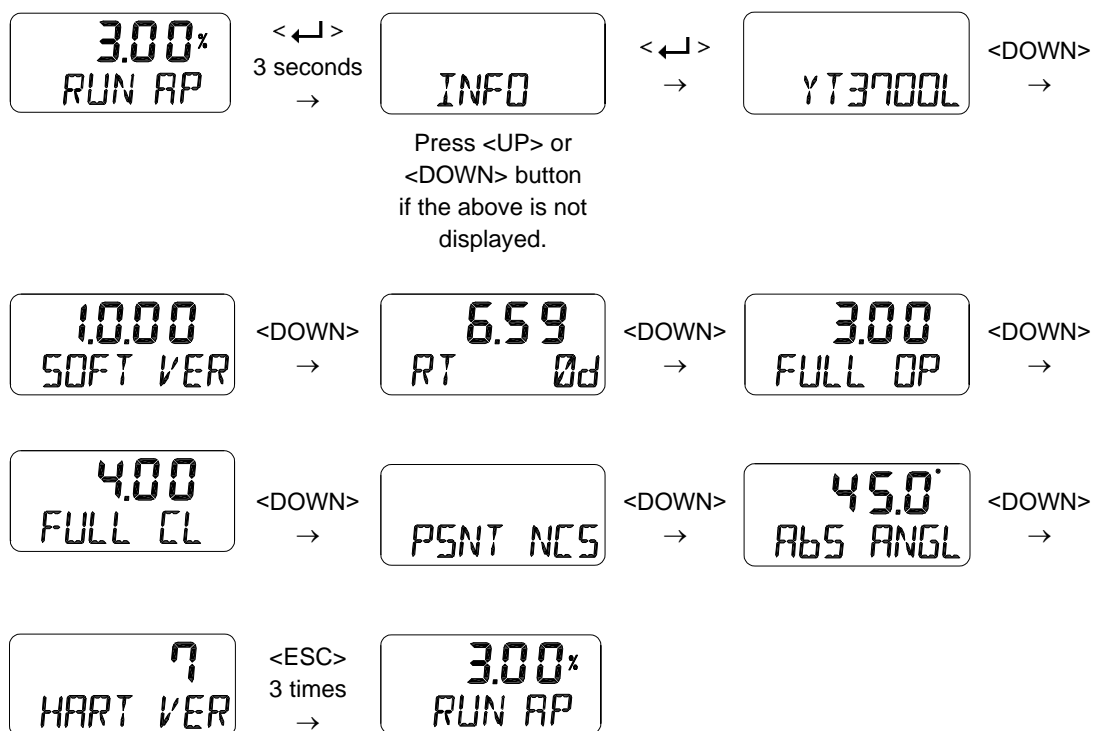

LCD display	Description
YT3700L	Model Name
1.0.00 SOFT VER / 2022JA31	Software Version [SOFT VER] "1.0.00" Software Input date : "2022-01(JA)-31" (January JA, February FB, March MR, April AR, May MY, June JN, July JL, August AG, September SP, October OT, November NV, December DC) At SOFT VER status if <← > button is pressed, the date will be displayed and then if <← > button is pressed again, SOFT VER is displayed again.
4.18 RT 0d	Run Time [RT] Total usage time of the product Upper "4.18" indicates 4 hours and 18 minutes. Lower "0d" indicates days used. Interval to store time is one hour.
3.12 FULL OP	Upward Full Stroke Time [FULL OP] This value is stored automatically after executing AUTO 2 / 3 calibration, and indicates the time in seconds it takes for the valve to fully open from fully closed.
2.97 FULL CL	Downward Full Stroke Time [FULL CL] This value is stored automatically after executing AUTO 2 / 3 calibration, and indicates the time in seconds it takes for the valve to fully closed from fully open.
PSNT NCS	Position Sensor Type [PSNT] Potentiometer [PTN] Non-Contact Sensor [NCS]
AbS ANGL	Absolute Position in Angle [ABS ANGL].
HART VER	HART Protocol Revision [HART VER]

9.14 Error codes during automatic calibration

There may be an error during the automatic calibration in case of irregularity.

- Error code : indicated if the positioner is out of control, malfunctions or becomes imprecise.
- When the error is detected, auto calibration is aborted and message is indicated immediately on LCD display.

Error code		Error content and cause	Action
CHK AIR	-7	➤ Indicated when the valve is not moving in "Full Open" direction during auto calibration.	➤ Check if pneumatic pressure is being supplied normally to the positioner.
	-9	➤ Indicated when the valve is not moving in "Full Close" direction during auto calibration.	
	-12	➤ Indicated when oscillation happens in steady state during SCAN 1 phase of auto calibration.	➤ Check for leakage from output port of the positioner and related to piping line.
CHK IP	-10	➤ Indicated when there is no response in torque motor.	➤ Please contact your point of purchase or Rotork YTC.
CHK LINK	-8	➤ Indicated when the movable range of the Feedback lever is too narrow(below 10°).	<ul style="list-style-type: none"> ➤ Linear : Check if the feedback lever is properly installed. Move and re-install the positioner to stem of actuator in order to make the angle use of the feedback lever larger than current use angle. ➤ Rotary: Check if the main shaft of the positioner is properly installed. In the case of Namur, the horizontal straight part of the main shaft of the positioner must be well inserted into the slotted groove of the actuator stem.

9.15 Status and Alarm Code


The status and alarm codes can be displayed on the LCD screen as required. Refer to the table below to check the status and alarm codes, and then take the appropriate action. (See 9.5 Configuration and Operation)

Alarm Code	Abbreviation	Status / Alarm name	Description or proposed actions
0	LOPA	Local Operating Active	It indicates the positioner is being operated by manual operation.
1	CALR	Auto Calibration Running	It is active when auto-calibration is in progress.
2	PSTR	PST Running	It is active when Partial Stroke Test is in progress.
3	DIGR	Diagnostics Running	It is active when diagnosis test such as Step Response Test, Stroke Time Test, and Trace Test is in progress.
4	PSNH	Position Sensor High Limit	Position sensor is out of range. Check the installed state if it happened during operation.
5	PSNL	Position Sensor Low Limit	
6	NVMF	Critical NVM Defect	It is active if there is a failure associated with NVM (Nonvolatile Memory). Initialize the positioner using Default function and then AUTO 2 calibration. If it is repeated, replace the electronics board by contacting the manufacturer or manufacturer's representative.
7	NVMW	Non-Critical NVM Defect	
8	CYCC	Cycle Count Limit	It is active if the accumulated cycle counter exceeds Cycle Count Limit. Check the condition of the valve and then determine if it is replaced or not. If there is no problem with the valve, increase the Cycle Count Limit.
9	TVLA	Travel Accumulator Limit	It is active if the travel accumulator exceeds Travel Accumulator Limit. Check the condition of the valve and then determine if it is replaced or not. If there is no problem with the valve, increase the Travel Accumulator Limit.
10	OPRC	Operating Count Limit	It is active if the number of operations for I/P converter exceeds has exceeded Operating Count Limit. Determine if the setting is appropriate or the I/P converter is replaced or not.
11	TMPH	Temperature High Limit	It is active if internal temperature exceeds Temperature Hi Limit. If the actual temperature exceeds the maximum temperature allowed by the product, the product may not operate if the ambient temperature around the positioner is not lowered.
12	TMPL	Temperature Low Limit	It is active if internal temperature is lower than Temperature Lo Limit. If the actual temperature is lower than the minimum temperature allowed by the product, the product may not operate if the ambient temperature around the positioner is not raised.

Alarm Code	Abbreviation	Status / Alarm name	Description or proposed actions
13	TVLH	Travel High Limit	It is active when the travel exceeds Travel Hi Limit.
14	TVLL	Travel Low Limit	It is active when the travel falls below Travel Lo Limit.
15	dVTO	Deviation Time Out	The deviation between the target location and the actual location is outside the set deviation and lasts longer than the set deviation time. Please check if the value you set is appropriate. Check for problems such as friction of the valve/actuator, leakage of pneumatic pressure, lack of supply pressure, etc.
16	PSTF	PST Failure	It is active when Partial Stroke Test has failed. Remove the cause of the fail after checking the response code of the PST.
17	TSNF	Temperature Sensor Defect	It is active when internal temperature sensor has failed. If it is repeated, replace the electronics board by contacting the manufacturer or manufacturer's representative.
18	PSNF	Position Sensor Defect	It is active if there is a problem with the position feedback sensor inside the positioner. If it is repeated, replace the electronics board by contacting the manufacturer or manufacturer's representative.
19	ABdS	Abnormal Drive Signal	It is active if there is a problem with I/P converter. If it is repeated, replace the electronics board by contacting the manufacturer or manufacturer's representative.
21	IVLH	Integral Value High Limit	It is active if the integrator output is saturated at Integral Value Hi Limit. It may happen when the valve/actuator has a high friction.
22	IVLL	Integral Value Low Limit	It is active if the integrator output is saturated at Integral Value Lo Limit. It may happen when the valve/actuator has a high friction.
23	TVCH	Travel Cutoff High Limit	It is active when the travel exceeds the available high stroke of the valve/actuator. The available stroke is already set during auto calibration. The event is not created when Tight Shut Open is used. Aging of the valve / actuator assembly or problem in the positioner sensor.
24	TVCL	Travel Cutoff Low Limit	It is active when the travel is below the available low stroke of the valve/actuator. The available stroke is already set during auto calibration process. The event is not created when Tight Shut Close is used. Aging of the valve / actuator assembly or problem in the positioner sensor.
28	NCAL	Not Calibrated	It is active when auto-calibration has not done after installation. Perform AUTO 2 calibration after checking if the installed state is good.

Alarm Code	Abbreviation	Status / Alarm name	Description or proposed actions
29	CALF	Auto Calibration Failure	It is active when auto-calibration has failed. Retry auto-calibration after checking if there is no problem with installed state such pneumatic leaks, lever position and others.
30	ZPdR	Zero Point Drift	It is active if zero point or endpoint exceeds the settings. The valve seat may be damaged or there may a linkage problem associated with lever.
31	EPdR	EndPoint Drift	
32	STAK	Stack Overflow	Replace the electronics board by contacting the manufacturer or manufacturer's representative.
33	COMM	Communication Error Count Limit	It is active if the HART related communication errors exceed the setting. Check the cable connections or make sure that the environment is susceptible to noise.
34	FCLC	Full Close Count Limit	It is active if the valve exceeds Full Close Count Limit.
35	FOPC	Full Open Count Limit	It is active if the valve exceeds Full Open Count Limit.
36	LPCH	Loop Current High Limit	It is active if the input current exceeds 20.5 mA.
37	LPCL	Loop Current Low Limit	It is active if the input current falls below 3.8 mA.
38	DI1S	Digital Input Status	It appears when Digital Input has been activated.
39	DO1S	Digital Output Status	It appears when Digital Output 1 switch has been activated.
40	DIGF	Diagnostics Failure	It indicates that the diagnosis test such as Large Step Test, Normal Step Test, Small Step Test, Stroke Time Test and Trace Test has failed.
145	VARA	Device Variable Alert	It is active when one of the internal variables are out of range.
144	MNTR	Maintenance Required	It is active when more than one of alarms assigned to "Maintenance Required" have happened. Remove the cause of the alarm after checking it.
147	FAIL	Failure	It is active when more than one of alarms assigned to "Failure" have happened. Remove the cause of the alarm after checking it.
148	OUTS	Out of Specification	It is active when more than one of alarms assigned to "Out of Specification" have happened. Remove the cause of the alarm after checking it.
149	FUNC	Function Check	It is active when more than one of alarms assigned to "Functional Check" have happened. Remove the cause of the alarm after checking it.
-	OVER CUR	Over Current	The input current exceeds 24mA.

10 Main Software Map

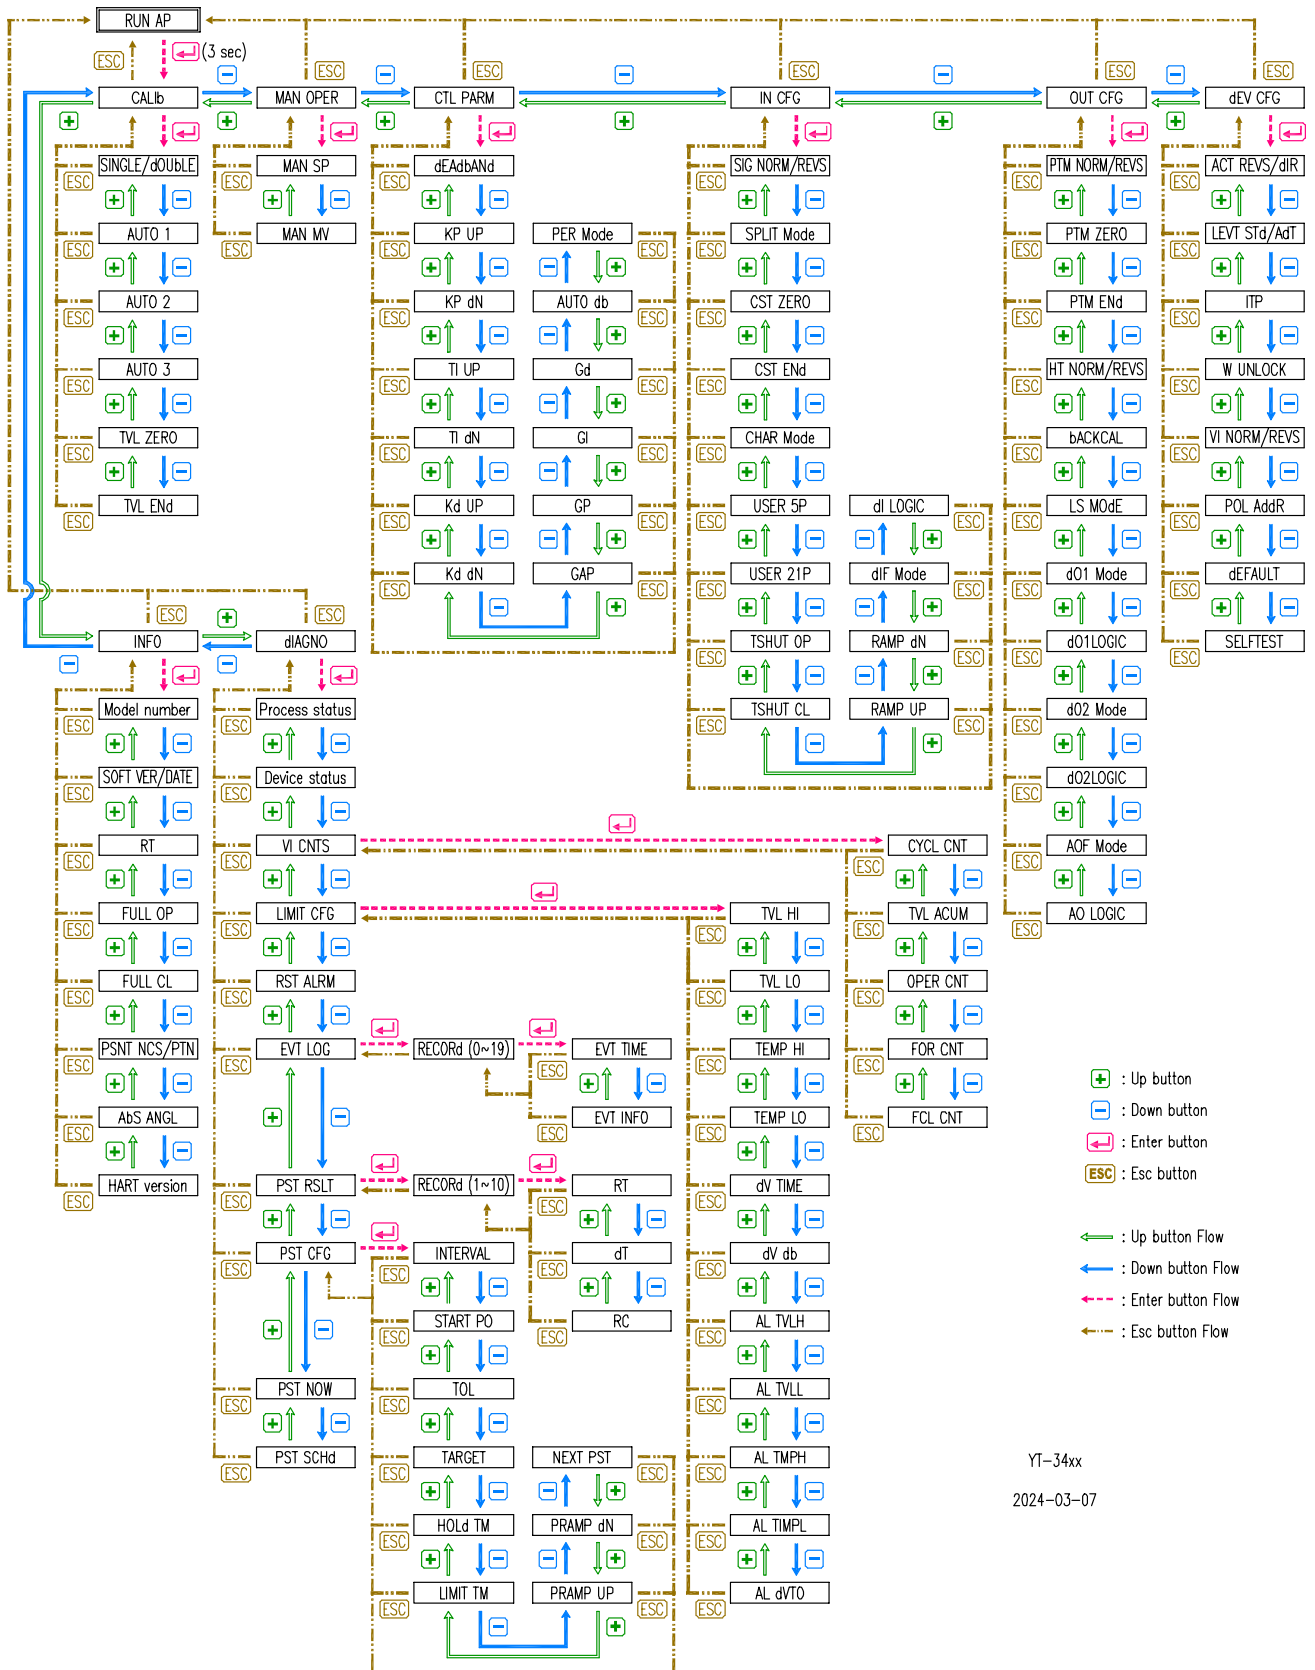

YT-34xx

2024-03-07

11 Intrinsically installation drawing

11.1 FM certification

REV. NO.

REVISION DESCRIPTION

DRAWN / DATE

REVIEWED / DATE

APPROVED / DATE

1	NEW RELEASE	JCS / 20190613	KJU / 20190613	KJU / 20190613
2	Positioned I.C. #2 (#3(0.55mf—2.5mf)	JCS / 20190822		KJU / 20190822
3	Changed the parameters.	JCS / 20200221		KJU / 20200221

PROJECT NAME

HAZARDOUS (CLASSIFIED) LOCATION

INTRINSICALLY SAFE CLASS I, ZONE 0, GROUP IIC CLASS I, DIV. 1, GROUPS A,B,C,D CLASS II, DIV. 1, GROUPS E,F,G CLASS III

TEMPERATURE CODE T5 (-40°C TO +60°C) T6 (-40°C TO +40°C)

NONINCENDIVE (ND) CLASS I, DIV. 5, GROUPS A,B,C,D CLASS II, DIV. 2, GROUPS E,F,G CLASS III

TEMPERATURE CODE T5 (-40°C TO +60°C) T6 (-40°C TO +40°C)

ENTITY INSTALLATION REQUIREMENTS:
V_{max} or U_i ≤ V_{oc} or U_o
I_{max} or I_o ≤ I_{sc} or I_o
C + Cable ≤ C_o
L + Lcable ≤ L_o

ENTITY APPROVAL PER CONNECTION ENTITY PARAMETERS: SEE TABLE 2.

ASSOCIATED APPARATUS MANUFACTURER'S INSTALLATION DRAWING MUST BE FOLLOWED WHEN INSTALLING THIS EQUIPMENT.

RESISTANCE BETWEEN INTRINSICALLY SAFE GROUND AND EARTH GROUND MUST BE LESS THAN 10

WARNING - THE MODELS YT-3700, YT-3701, YT-3702 & YT-3703 ENCLOSURES CONTAINS ALUMINUM WHICH IS CONSIDERED TO CONSTITUTE A POTENTIAL RISK OF IGNITION BY IMPACT OR FRICTION. CARE MUST BE TAKEN INTO ACCOUNT DURING INSTALLATION AND USE TO PREVENT IMPACT OR FRICTION.

PART OF THE APPARATUS ENCLOSURE IS CONSTRUCTED OF NON-METALLIC MATERIAL TO PREVENT THE RISK OF ELECTROSTATIC SPARKING, THE ENCLOSURE SHALL ONLY BE CLEANED WITH A DAMP TRANSDUCER.

CABLE CAPACITANCE AND INDUCTANCE MUST BE CONSIDERED WHEN CONNECTING TO PRESSURE TRANSDUCER.

NOTES:

- NON-HAZARDOUS (SAFE) AREA APPARATUS - UNSPECIFIED EXCEPT THAT IT SHALL NOT BE POWERED FROM WIRE CONNECTIONS IN AN APPARATUS OR IN AN APPARATUS CIRCUITS EXCEPT A SOURCE OF POTENTIAL WITH RESPECT TO EARTH GREATER THAN 250V AC RMS OR 30C.
- ZENER BARRIER - ANY SHUNT ZENER DIODE SAFETY BARRIER (S) CERTIFIED BY FM APPROVALS TO CLASS I, DIVISION 1, GROUPS A,B,C,D,E,F OR G (AS REQUIRED) AND WITH THE TYPE SAFETY RATINGS AS SHOWN IN INSTALLATION.
- WIRING PROVISIONS:
1/2" NPT CONDUIT CONNECTION TO INTERNAL TERMINAL BLOCK
- INSTALLATION SHOULD BE DONE IN ACCORDANCE WITH ANSI/ISA RRP206.01 AND THE NEC ANSI/NFPA 70.
- YT-3700, 3750, 3702 & 3703 SERIES (INCLUDING L/S) DEVICES ARE SUITABLE FOR NEMA 4X/IP66 INSTALLATIONS. TIGHT TIGHT CONDUIT SEALS MUST BE USED IN CLASS II & III ENVIRONMENTS.
- THE APPARATUS ARE NON-INCENDIVE (ND) FOR CLASS I, II or III DIVISION 2, GROUPS A,B,C,D,E,F,G DEPENDING ON MODEL (WITHOUT BARRIERS). TRANSDUCERS ARE TO BE INSTALLED IN ACCORDANCE WITH THE NEC DIVISION 2 WIRING METHODS OR NONINCENDIVE FIELD WIRE PARAMETERS. FOR NONINCENDIVE FIELD WIRE INSTALLATIONS THE TRANSDUCERS MUST BE CONNECTED TO AN FM APPROVALS APPROVED SOURCE.
NONINCENDIVE FIELD WIRE PARAMETERS: SEE TABLE 1.
- ENTITY APPROVAL PER CONNECTION ENTITY PARAMETERS: SEE TABLE 2.
- ASSOCIATED APPARATUS MANUFACTURER'S INSTALLATION DRAWING MUST BE FOLLOWED WHEN INSTALLING THIS EQUIPMENT.
- RESISTANCE BETWEEN INTRINSICALLY SAFE GROUND AND EARTH GROUND MUST BE LESS THAN 10
- WARNING - THE MODELS YT-3700, YT-3701, YT-3702 & YT-3703 ENCLOSURES CONTAINS ALUMINUM WHICH IS CONSIDERED TO CONSTITUTE A POTENTIAL RISK OF IGNITION BY IMPACT OR FRICTION. CARE MUST BE TAKEN INTO ACCOUNT DURING INSTALLATION AND USE TO PREVENT IMPACT OR FRICTION.
- PART OF THE APPARATUS ENCLOSURE IS CONSTRUCTED OF NON-METALLIC MATERIAL TO PREVENT THE RISK OF ELECTROSTATIC SPARKING, THE ENCLOSURE SHALL ONLY BE CLEANED WITH A DAMP TRANSDUCER.
- CABLE CAPACITANCE AND INDUCTANCE MUST BE CONSIDERED WHEN CONNECTING TO PRESSURE TRANSDUCER.

HAZARDOUS (SAFE) AREA

ROTOROK YTC LIMITED
SMART POSITIONER

YT-3700 DRY CONTACT (PROXIMITY SWITCH)
YT-3701 DRY CONTACT (PROXIMITY SWITCH)
YT-3702 DRY CONTACT (PROXIMITY SWITCH)
YT-3703 DRY CONTACT (PROXIMITY SWITCH)
YT-3750 DRY CONTACT (PROXIMITY SWITCH)

CONNECTION	1	2	3	4	5	6	DR	5/6	DR	5/6	DR	5/6	DR	5/6
POSITIONER	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc
I _{max}	100mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA
L _i	12µH	12µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH
C _i	2.59nF	57.5nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF

BARRIER	1	2	3	4	5	6	DR	5/6	DR	5/6	DR	5/6	DR	5/6
POSITIONER	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc
I _{max}	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA
P _i	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW
L _i	12µH	12µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH
C _i	2.59nF	57.5nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF

SURFACE TEXTURE	ROTOROK [®] SMART POSITIONER
FINISH TREATMENT	MODEL YT-3700
MATERIAL	PROTECTION SCALE N / S
OTHERWISE NOTE	GENERAL TOLERANCE QUANTITY SHEET No. 1 / 1

PROJECT NAME

ROTOROK[®] Rotorok YTC Limited

TITLE FM Intrinsically Safe Installation Drawing

Smart Positioner 11-3700 Series

DRAWING NO. SKC-190612

REV. 2

11.2 CSA certification

HAZARDOUS LOCATIONS
Class I, Division 1, Groups A, B, C, D T5/T6
Class I, Division 2, Groups A, B, C, D T5/T6
Class II, Division 1, Groups E, F, G T100°C/185°C
Class II, Division 2, Groups E, F, G T100°C/185°C
Class III
Ex Ia IIC T5/T6 Gb
Ex Ib IIC T100°C/185°C Db
T5 (-40°C ≤ Ta ≤ 60°C) / T6 (-40°C ≤ Ta ≤ 40°C)

HAZARDOUS LOCATIONS
Class I, Division 1, Groups A, B, C, D T5/T6
Class I, Division 2, Groups A, B, C, D T5/T6
Class II, Division 1, Groups E, F, G T100°C/185°C
Class II, Division 2, Groups E, F, G T100°C/185°C
Class III
Ex Ia IIC T5/T6 Gb
Ex Ib IIC T100°C/185°C Db
T5 (-40°C ≤ Ta ≤ 60°C) / T6 (-40°C ≤ Ta ≤ 40°C)

HAZARDOUS LOCATIONS
Class I, Division 1, Groups A, B, C, D T5/T6
Class I, Division 2, Groups A, B, C, D T5/T6
Class II, Division 1, Groups E, F, G T100°C/185°C
Class II, Division 2, Groups E, F, G T100°C/185°C
Class III
Ex Ia IIC T5/T6 Gb
Ex Ib IIC T100°C/185°C Db
T5 (-40°C ≤ Ta ≤ 60°C) / T6 (-40°C ≤ Ta ≤ 40°C)

NOTES

- Installation shall be in accordance with the Canadian Electrical Code, Part 1 (C22.1)
- Equipment is suitable for use in Class I, Division 2 Hazardous Locations (with suitable non-incendive associated apparatus).
a. Wiring in these applications shall utilize appropriate methods for Class I, Division 2 / Zone 2.
b. **WARNING - EXPLOSION HAZARD.** Do not connect or disconnect wiring unless all sources of power have been removed or the area is known to be non-hazardous.
AVERTISSEMENT - RISQUE D'EXPLOSION. Ne pas raccorder ou débrancher le câblage à moins. Toutes les sources d'énergie ont été enlevées ou la zone est connue pour être non dangereuse.
c. The power supply must be Class 2 with transient protection.
All of the following notes apply when installed as Intrinsically Safe equipment or installed as Equipment with Nonincendive Field Wiring (NIFW):
a. Associated Apparatus:
i. Connected in non-hazardous area location shall not be connected to a source greater than 250V.
ii. Shall be approved for Canada.
d. **WARNING -** The enclosure of models YT-3700, YT-3701, YT-3702 and YT-3703 contains aluminum, which is considered to constitute a potential risk of ignition when subjected to impact or friction. Care must be used during installation in locating this equipment to prevent impact or friction.
e. **WARNING -** Parts of the enclosure are made of non-metallic materials. To prevent the risk of electrostatic sparking, clean the enclosure only with a damp cloth.
f. Follow manufacturer's installation drawings when connecting Intrinsically Safe barriers, including ground bonding path of less than 1 Ohm between barrier ground terminals and Earth.
g. Cable capacitance and inductance must be considered. Ci + Cable ≤ Cai Li + Lcable ≤ La.
8. ENTITIES: Uj (Smart Positioner) ≥ Uo (barrier) ii (Smart Positioner) ≥ Io (barrier)
Pi (Smart Positioner) ≥ Po (barrier)
9. YT-3700, 3750, 3701, 3702 & 3703 SERIES (INCLUDING L/S) DEVICES ARE SUITABLE FOR IP66 INSTALLATIONS. DUST TIGHT CONDUIT SEALS MUST BE USED IN CLASS II & III ENVIRONMENTS.
10. Wiring provisions: 1/2" NPT conduit to internal terminal block.

TABLE 1: NON-INCENDIVE FIELD WIRE, NIFW, PARAMETERS

CONNECTION	1		2		3		4		5		6		DR		5/6		DR		5/6		
	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	
POSITIONER	TR (TRANSMITTER)	DIGITAL INPUT	DIGITAL OUTPUT	DIGITAL OUTPUT	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER
Vmax	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc
Imax	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA
Li	10µH	10µH	10µH	10µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH
Ci	25nF	57.5nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF

TABLE 2: INTRINSICALLY SAFE ENTITY PARAMETERS

BARRIER	1		2		3		4		5		6		DR		5/6		DR		5/6		
	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	TYPE 1	TYPE 2	
POSITIONER	TR (TRANSMITTER)	DIGITAL INPUT	DIGITAL OUTPUT	DIGITAL OUTPUT	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	LIMIT SWITCH (MECHANICAL) - UPPER & LOWER	
Vmax (DR ID)	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc	28Vdc
Imax (DR ID)	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA	93mA
Pi	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW	650mW
Li	10µH	10µH	10µH	10µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH	0µH
Ci	25nF	57.5nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF	0nF

REVISION HISTORY

REVNO	REVISION DESCRIPTION	DRAWN / DATE	REVIEWED / DATE	APPROVED / DATE
△	NEW RELEASE	JCS/20190613		KTI/20190613
△	Positioned Ci & L (Self-2.5nF)	JCS/20190822		KTI/20190822
△	Changed the parameters.	JCS/20200221		KTI/20200221
△	Changed the line and typical wire gauge values	JCS/20200615		KTI/20200615
△	Corrected the text of parentheses in the table 2	JCS/20200709		KTI/20200709
△	Updated the contents of hazardous locations	JCS/20200807		KTI/20200807

PROJECT INFORMATION

SURFACE TEXTURE	PRODUCT NAME	PROJECT NAME
FINISH TREATMENT	SMART POSITIONER	SMART POSITIONER
MATERIAL	MODEL	YT-3700
OTHERWISE NOTE	PROJECTION	SCALE
	GENERAL TOLERANCE	N / S
	QUANTITY	1 / 1
	SHEET No.	5

GENERAL INFORMATION

Rotork YTC Limited
TITLE: CSA Intrinsically Safe Installation Drawing
Smart Positioner YT-3700 Series
DRAWING NO. SKC-190613
REV. 5

Manufacturer: Rotork YTC Limited

Address: 81, Hwanggeum-ro, 89 Beon-gil, Yangchon-eup, Gimpo-si, Gyeonggi-do, South Korea

Postal code: 10048

Tel: +82-31-986-8545

Fax: +82-70-4170-4927

Email: ytic.sales@rotork.com

Homepage : <http://www.ytc.co.kr>

Issued : 2025-02-19

Copyright © Rotork YTC Limited. All Rights Reserved.