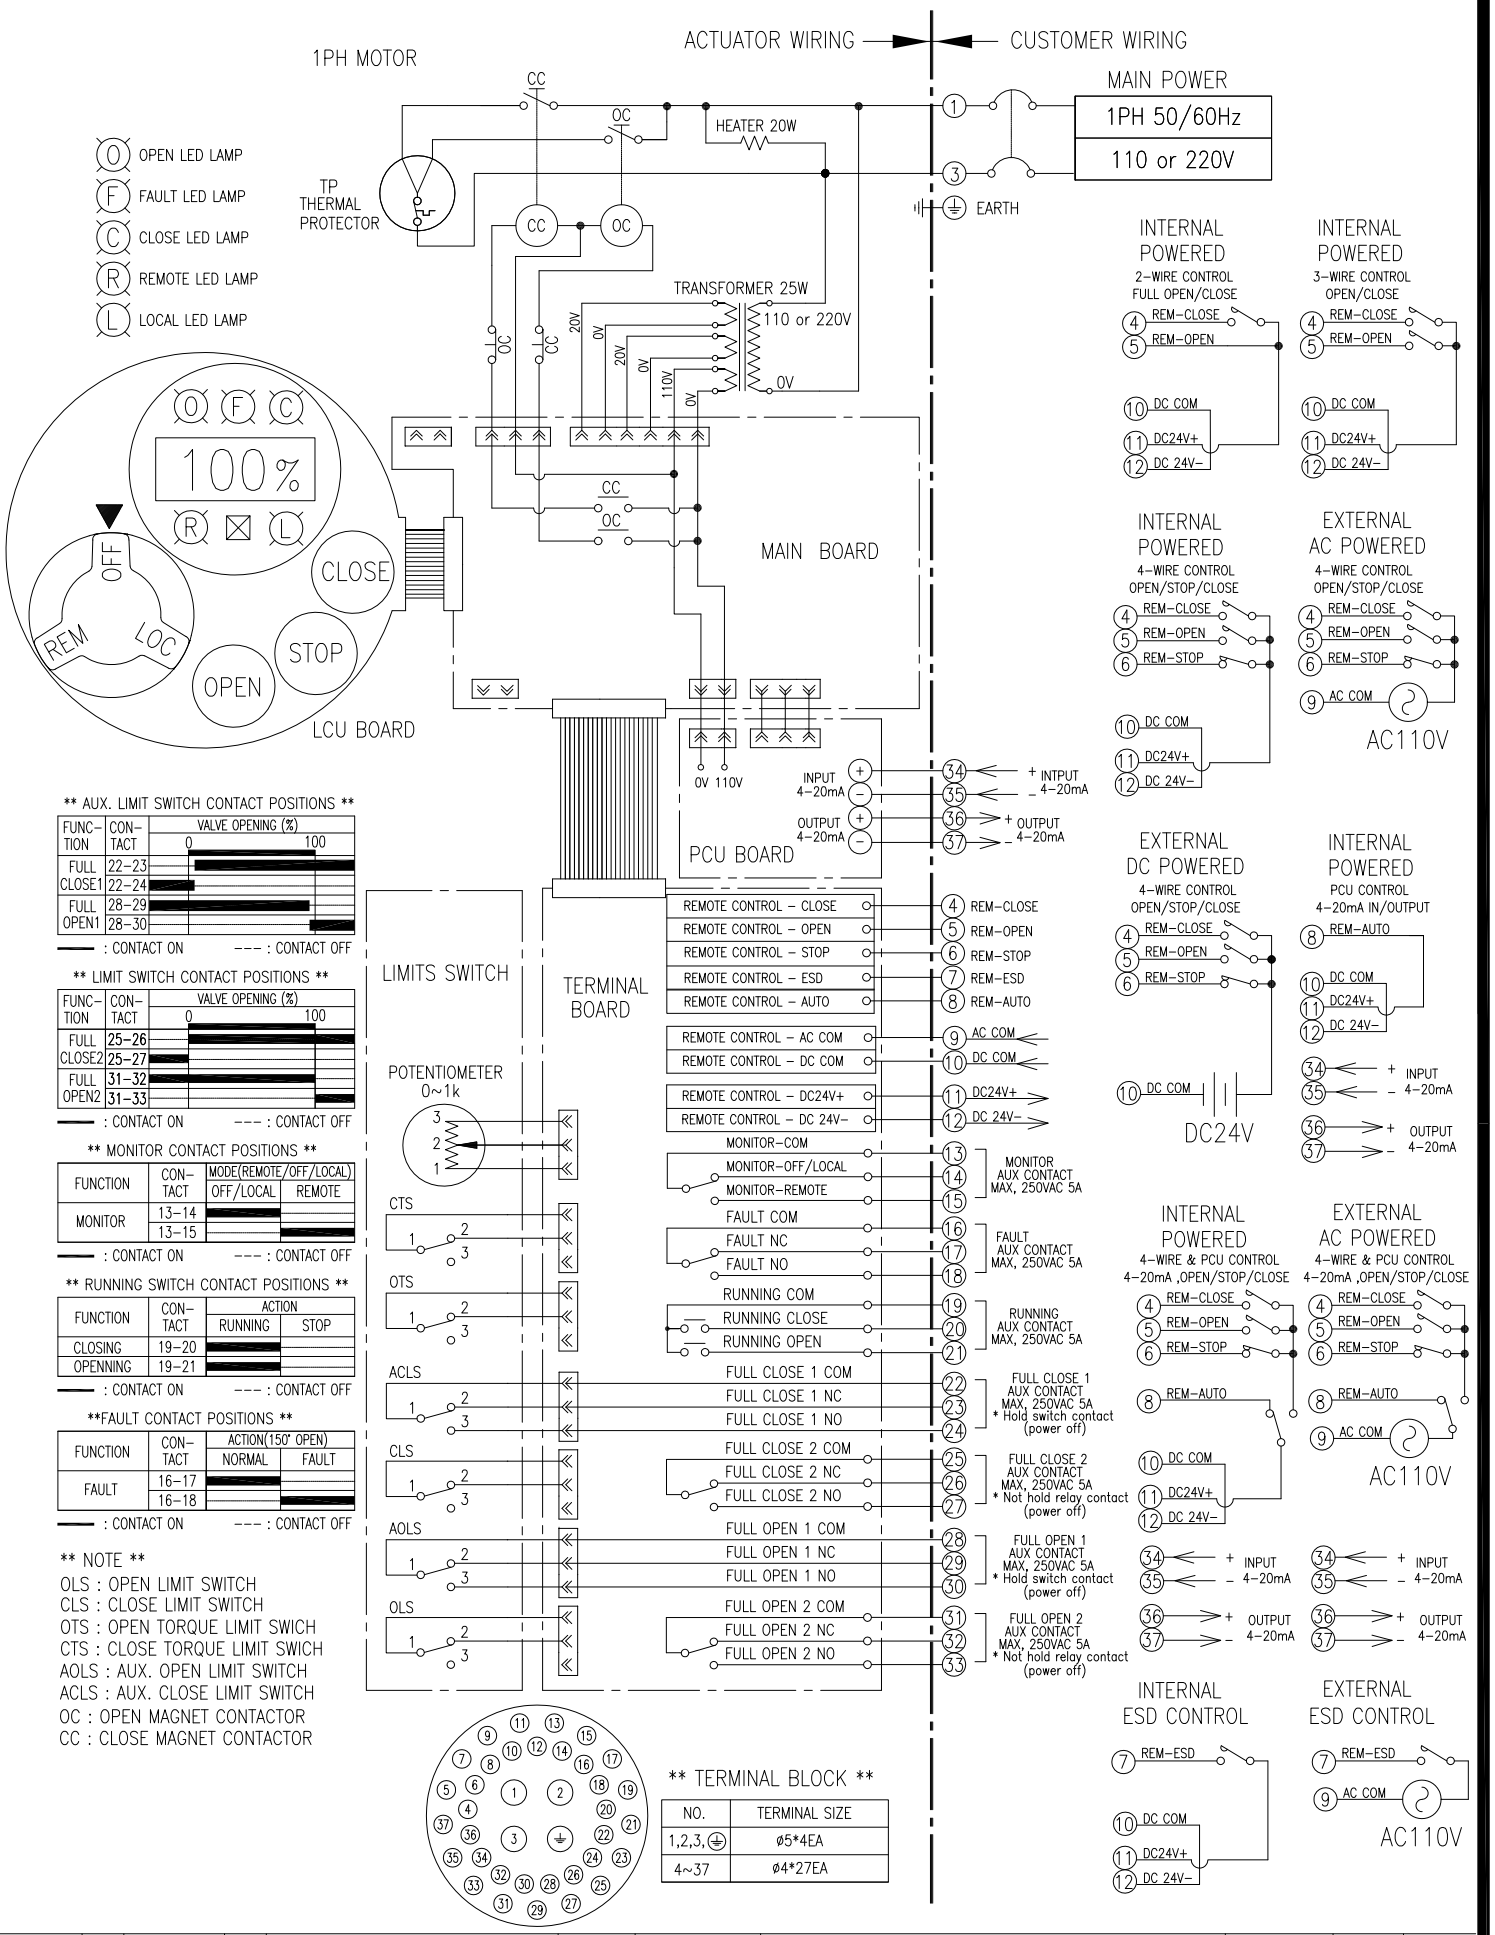

** AUX. LIMIT SWITCH CONTACT POSITIONS **

FUNC-TION	CON-TACT	VALVE OPENING (%) 0 — 100
FULL CLOSE1	22-23	
	22-24	
FULL OPEN1	28-29	
	28-30	

—— : CONTACT ON --- : CONTACT OFF

** LIMIT SWITCH CONTACT POSITIONS **

FUNC-TION	CON-TACT	VALVE OPENING (%) 0 — 100
FULL CLOSE2	25-26	
	25-27	
FULL OPEN2	31-32	
	31-33	

—— : CONTACT ON --- : CONTACT OFF

** MONITOR CONTACT POSITIONS **

FUNCTION	CON-TACT	MODE(REMOTE/OFF/LOCAL) OFF/LOCAL	REMOTE
MONITOR	13-14		
	13-15		

—— : CONTACT ON --- : CONTACT OFF

** RUNNING SWITCH CONTACT POSITIONS **

FUNCTION	CON-TACT	ACTION RUNNING	STOP
CLOSING	19-20		
OPENNING	19-21		

—— : CONTACT ON --- : CONTACT OFF

**FAULT CONTACT POSITIONS **

FUNCTION	CON-TACT	ACTION(150° OPEN) NORMAL	FAULT
FAULT	16-17		
	16-18		

—— : CONTACT ON --- : CONTACT OFF

** NOTE **

OLS : OPEN LIMIT SWITCH
CLS : CLOSE LIMIT SWITCH
OTS : OPEN TORQUE LIMIT SWICH
CTS : CLOSE TORQUE LIMIT SWICH
AOLS : AUX. OPEN LIMIT SWITCH
ACLS : AUX. CLOSE LIMIT SWITCH
OC : OPEN MAGNET CONTACTOR
CC : CLOSE MAGNET CONTACTOR

** TERMINAL BLOCK **

NO.	TERMINAL SIZE
1,2,3,⏚	ø5*4EA
4~37	ø4*27EA

A050	1	A250	1	DRAW	K.H. OH	△					
A038	1	A200	1			SYM	E C N NO	CHANGES	DATE	SIGN	APPD
A028	1	A150	1	CHECK	K.H. OH						
A019	1	A100	1	APPD	M.Y. HWANG	PART NAME		1PH WIRING DIAGRAM INTEGRAL PCU			
A015	1	A080	1								
APPLICATION		A060	1	DATE	22.10.11.	DWG NO.		NS-203-B			