



### **DWB-...** Angle rotation limiter


adaptable to ...Max actuators size S and M


Subject to change!

Туре	Technical data
DWB-S	Angle rotation limiter to 90° forMax size S
DWB-M	Angle rotation limiter to 90° forMax size M


### **Product views and applications**

DWB-...

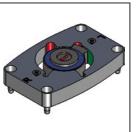

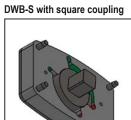



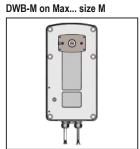




# Dimensions Dimensioning in mm 80 size S: □12 size M: □16

### Technical data

Material	Stainless steel
Screws	M3 × 6 mm, DIN 965 (2 ×)
	<b>DWB-S</b> : M4 × 8 mm, DIN 7500 (4 ×)
	<b>DWB-M:</b> M4 × 10 mm, DIN 912 (4 ×)
Shim ring	20 × 28 × 0,5 mm
Delivery	1 limit plate, 1 cover plate, 1 coupling (S or M), screws,
	1 shim ring

### **Special solution**

Angle rotation limiter with inserts for < 90° on request

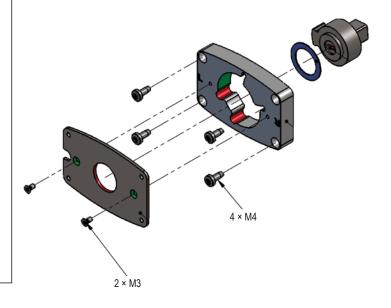

DWB\_e 02 - 23-May-202





### Mounting on ...Max... size S


### **Left-Mounting**





### Left-mounting:

- Place the coupling (square connector) with its tappet to the left onto the actuator's drive shaft.
- 2. Attach the shim ring.
- 3. Mount limit plate with engraved "L" visible on the left side.
- 4. Screw on cover plate with the sidewise cutout to the left.




### **Right-Mounting**

Top (Side R)




### Right-mounting:

- Place the coupling (square connector) with its tappet facing upwards onto the actuator's drive shaft.
- 2. Attach the shim ring.
- 3. Mount limit plate with engraved "R" visible on the left side.
- 4. Screw on cover plate with the sidewise cutout to the left.




## Mounting on ...Max... size M

### Left-Mounting



### Left-mounting:

- Place the coupling (square connector) with its tappet to the left onto the actuator's drive shaft.
- 2. Attach the shim ring.
- 3. Mount limit plate with engraved "L" visible on the left side.
- 4. Screw on cover plate with the sidewise cutout to the left.

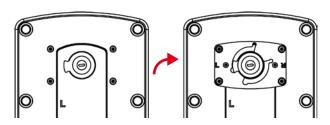


### **Right-Mounting**



### Right-mounting:

- Place the coupling (square connector) with its tappet facing upwards onto the actuator's drive shaft.
- 2. Attach the shim ring.
- 3. Mount limit plate with engraved  ${}_{\mbox{\tiny \it H}} R^{\mbox{\tiny \it H}}$  visible on the left side.
- 4. Screw on cover plate with the sidewise cutout to the left.

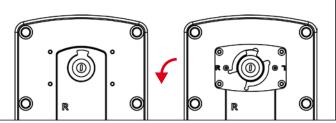

DWB\_en V02 – 23-May-2023

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com