

RedMax ¼ turn actuators - size S

Electrical, explosion proof rotary actuators

On-off / 3-pos. control mode, 24...240 VAC/DC, 95° angle of rotation incl. 5° pretension 5/10 Nm, 15/30 Nm without and 5/10 Nm, 15 Nm with safety operation (spring return) ATEX tested in acc. with directive 2014/34/EU for zone 1, 2, 21, 22

RedMax
RedMax F
RedMax S
RedMax SF
RedMax CTS
RedMax VAS

Subject to change!

Compact. Easy installation. Universal. Cost effective. Safe.

Туре	Torque	Supply	Motor running time	Spring return	Control mode	Feedback	Wiring diagram
RedMax- 5.10	5 / 10 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	-	On-off, 3-pos.	-	SB 1.0
RedMax- 15.30	15 / 30 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	-	On-off, 3-pos.	-	SB 1.0
RedMax- 5.10 - F	5 / 10 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	3 or 10 s/90°	On-off, 3-pos.	-	SB 2.0/2.1
RedMax- 15 - F	15 Nm 24240 VAC/DC 3 / 15 / 30 / 60 / 120 s/90° 3 or 10 s/90° On-off, 3-pos. – SB 2.0/2.1						
RedMax S/SF	Types as above with 2 integrated, potential free auxilliary switches, 5° and 85° angle of rotation $2 \times \text{aux. switches}$ SB 3.0						
RedMax CTS	Types as above with aluminium housing and seawater resistant coating (cable glands brass nickel-plated)						
RedMax VAS	Types as above with stainless steel housing for aggressive ambient (cable glands brass nickel-plated)						

Product views and applications











Safety damper

Ball valve

Throttle valve

Description

The RedMax actuators are a revolution for safety, control and shut-off dampers, VAV systems, ball valves, throttle valves and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in Ex-areas zone 2 (gas) and zone 22 (dust).

Highest protection class (ATEX) and IP66 protection, small dimensions, only 3,5 kg weight, universal functions and technical data, an integrated heater and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times and torques as well as spring return times, according to the actuator type, are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC/DC. The actuators are 100 % overload protected and self locking.

 \dots Max- \dots F actuators are equipped with spring return fail safe function. Standard shaft connection is a double square direct coupling with 12 \times 12 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptions for ball valves and throttle valves and other armatures.

Highlights

- For all types of gases, mists, vapours and dusts in zones 2 and 22
- Universal supply unit from 24...240 VAC/DC
- 5 different motor running times 3-15-30-60-120 s/90°, adjustable on site
- 2 different spring return running times ~ 3–10 s/90°, selectable on site
- On-off and 3-pos. control with or without spring return function
- > 5-10-15-30 Nm actuators in the same housing size
-) 100 % overload protected and self locking
-) Compact design and small dimension (L \times W \times H = 210 \times 95 \times 80 mm)
-) Direct coupling to the damper shaft with double square connection $12 \times 12 \text{ mm}$
- > 95° angle of rotation inclusive 5° pretension
- Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
-) IP66 protection
- Simple manual override included + preparation for comfortable manual override
- Gear made of stainless steel and sinter metal
- Weight only ~ 3,5 kg
- ▶ Integrated heater for ambient temperatures down to -40 °C
- Integrated safety temperature sensor
- Integrated equipment for manual adjustment (push button, lamp, switch)
- > Preparation for adaptable and adjustable auxiliary switches type ... Switch
- Wide range of accessories





Technical data

Dimensioning of external load Supply voltage / frequency Power consumption Protection class Angle of rotation and indication Working direction Motor running times 3 sec. mode – motor Motor Dimensioning of external load Upon spring return the 24240 VAC/DC ± 10 max. starting currents s Class I (grounded) 95° incl. ~ 5° pretension Selectable by left/right Motor running times 3 / 15 / 30 / 60 / 120 s In acc. with the supply Motor Brushless DC motor	ositions torques are higher than a e external load should be max. 80 9%, self adaptable, frequency 50 ee ① Extra information (in acc. wi	min. 10 Nm above specified torques for motor a 1 % of torque spring (F)60 Hz ± 20 % ith voltage, I start >> I rated), approx. 5 maft 4 s/90° angle of rotation	min. 15 Nm nd spring. W holding power, approx. 16 W for heater			
Torque blockade Dimensioning of external load Upon spring return the 24240 VAC/DC ± 10 Power consumption Protection class Angle of rotation and indication Working direction Working direction Motor running times 3 / 15 / 30 / 60 / 120 s 3 sec. mode – motor Brushless DC motor	e external load should be max. 80 1 %, self adaptable, frequency 50 ee ① Extra information (in acc. wi on, mechanical value indication mounting to the damper/valve sh/90° selectable on site voltage and external torque 3 to	above specified torques for motor at 0 % of torque spring (F)60 Hz ± 20 % (th voltage, I start >> I rated), approx. 5 maft 4 s/90° angle of rotation	nd spring. W holding power, approx. 16 W for heater			
Dimensioning of external load Supply voltage / frequency Power consumption Protection class Angle of rotation and indication Working direction Motor running times 3 / 15 / 30 / 60 / 120 s Brushless DC motor Dimensioning return the 24240 VAC/DC ± 10 max. starting currents s Class I (grounded) 95° incl. ~ 5° pretension Selectable by left/right Motor running times 3 / 15 / 30 / 60 / 120 s Brushless DC motor	e external load should be max. 80 1 %, self adaptable, frequency 50 ee ① Extra information (in acc. wi on, mechanical value indication mounting to the damper/valve sh/90° selectable on site voltage and external torque 3 to	% of torque spring (F)60 Hz ± 20 % ith voltage, I start >> I rated), approx. 5 haft 4 s/90° angle of rotation spring return upon voltage	W holding power, approx. 16 W for heater			
Supply voltage / frequency Power consumption Protection class Angle of rotation and indication Working direction Motor running times 3 / 15 / 30 / 60 / 120 s 3 sec. mode – motor Motor Brushless DC motor	%, self adaptable, frequency 50 ee ① Extra information (in acc. wi on, mechanical value indication mounting to the damper/valve sh/90° selectable on site voltage and external torque 3 to	60 Hz ± 20 % ith voltage, I start >> I rated), approx. 5 naft 4 s/90° angle of rotation spring return upon voltage.				
Power consumption max. starting currents so Protection class Class I (grounded) Angle of rotation and indication 95° incl. ~ 5° pretension Selectable by left/right Motor running times 3 / 15 / 30 / 60 / 120 so 3 sec. mode – motor In acc. with the supply Motor Brushless DC motor	on, mechanical value indication mounting to the damper/valve sh/90° selectable on site voltage and external torque 3 to	ith voltage, I start >> I rated), approx. 5 naft 4 s/90° angle of rotation spring return upon voltage				
Protection class Angle of rotation and indication Working direction Motor running times 3 / 15 / 30 / 60 / 120 s 3 sec. mode – motor Motor Brushless DC motor	on, mechanical value indication mounting to the damper/valve sh /90° selectable on site voltage and external torque 3 to	aft 4 s/90° angle of rotation spring return upon voltage				
Angle of rotation and indication Working direction Motor running times 3 / 15 / 30 / 60 / 120 s 3 sec. mode – motor In acc. with the supply Motor	mounting to the damper/valve sh /90° selectable on site voltage and external torque 3 to	4 s/90° angle of rotation spring return upon voltage	ge interruption			
Working directionSelectable by left/rightMotor running times3 / 15 / 30 / 60 / 120 s3 sec. mode – motorIn acc. with the supplyMotorBrushless DC motor	mounting to the damper/valve sh /90° selectable on site voltage and external torque 3 to	4 s/90° angle of rotation spring return upon voltage	ge interruption			
Motor running times3 / 15 / 30 / 60 / 120 s3 sec. mode – motorIn acc. with the supplyMotorBrushless DC motor	/90° selectable on site voltage and external torque 3 to	4 s/90° angle of rotation spring return upon voltage	ge interruption			
3 sec. mode – motor In acc. with the supply Motor Brushless DC motor	voltage and external torque 3 to	spring return upon volta	ge interruption			
Motor Brushless DC motor	,	spring return upon volta	ge interruption			
	cc. with wiring, selectable on site – –	spring return upon voltage	ge interruption			
Control mode On-off and 3-pos. in a	cc. with wiring, selectable on site – – –	spring return upon voltage	ge interruption			
·	- - -		ge interruption			
Spring return (F)	-	up to 1 sec. after voltage				
Spring return response time –	-	.,	e interruption			
Spring return running time (F) —		~ 3 or 10 s/90° selectable	e on site			
3 sec. mode – spring return –	-	~ 3 to 4 s/90° angle of ro	otation acc. to external load			
Safety operations at 10 sec. (F) –	-	min. 10,000 acc. to cons	struction of damper and ambient			
at 3 sec. (F) –	-	min. 1,000 acc. to cons	struction of damper and ambient			
$U_{\text{max}}/I_{\text{max}}$ AC = 250 V/5	SF 2 integrated auxiliary switches, switching at 5° and 85° angle of rotation, potential free. Grid fuse-protection is recommended! Umav Imax AC = 250 V/5 A; Umin AC/DC = 5 V; After one-time operation with U > 24 V AC/DC or I > 100 mA: Umin AC/DC = 12 V Umav Imax DC = 48 V/1 A; Imin AC/DC = 5 mA; Imin AC/DC = 100 mA					
Axle of the actuator Double square 12 × 12	2 mm, direct coupling, 100 % ove	erload protected and self locking up	to 15 Nm			
	s section 0.5 mm², equipotential ous areas require a terminal box!	bonding 4 mm².				
Diameter of cable ~ Ø 7.1 mm	~ Ø 7.1 mm	~ Ø 7.4 mm	~ Ø 7.4 mm			
2 cables in the versions	sS andSF (~ Ø + 7.4 mn	n)				
Cable gland M16 × 1.5 mm						
Manual override Use delivered socket w	Use delivered socket wrench, max. 4 Nm					
Heater Integrated, controlled	Integrated, controlled heater for ambient temperature down to $-40~^{\circ}\text{C}$					
	Aluminium die-cast housing, coated. Optional with seawater resistant coating (CTS) or stainless steel housing, No. 1.4581 / UNS-J92900 / similar AISI 316Nb (VAS)					
Dimensions (L \times W \times H) 210 \times 95 \times 80 mm, fo	$210 \times 95 \times 80$ mm, for diagrams see ① Extra information					
Weight ~ 3,5 kg aluminium ho	~ 3,5 kg aluminium housing, stainless steel ~ 7 kg					
Ambients Storage temperature –	Storage temperature –40+70 °C, working temperature –40+40 °C at T6 and –40+50 °C at T5					
Humidity 090 % rH, non cond	090 % rH, non condensing					
	e In 3 s mode the motor will work only after 1 minute of voltage supply. While open/close operation (open voltage supply and shut it down) motor works only with speed of 15 s/90°					
≥ 15 sec. motor run time at 15 / 30 / 60 / 120 s	at 15 / 30 / 60 / 120 s 100 % of ED is permitted (ED = duty cycle)					
Wiring diagrams SB 1.0	SB 1.0	SB 2.0 / 2.1	SB 2.0 / 2.1			
Scope of delivery Actuator, 4 screws M4	Actuator, 4 screws M4 \times 100 mm, 4 nuts M4, Allen key for simple manual override					
Parameter at delivery 5 Nm, 30 s/90°	15 Nm, 30 s/90°	5 Nm, 30 s/90°	15 Nm, 30 s/90°			

Approbations

ATEX Directive	2014/34/EU
ATEX Conformity	EPS 18 ATEX 1 216 X
IECEx Conformity	IECEX EPS 18.0107X
Marking Gases	II 3 (3) G Ex db [ic Gc] IIC T6, T5 Gc
Marking Dusts	II 3 (3) D Ex tc [ic Dc] IIIC T80°C, T95°C Dc

CE Marking	CE
EMC Directive	2014/30/EU
Low Voltage Directive	2014/35/EU
Enclosure Protection	IP66 in acc. with EN 60529





Electrical connection


All actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjusting to the connected voltage!

The safety operation of the spring return function works if the supply voltage is cut. For electrical connection inside hazardous areas a terminal box is required (e.g. RedBox).

When installed, the electrical protection shall be designed with regard to the inrush current and the starting current (see additional data sheet – extra information).

Integrated auxiliary switches signal the rotation angle's position. Umin and Imin change once the switches were operated with higher voltage or current.

Wiring diagram RedMax- ... (without spring return)

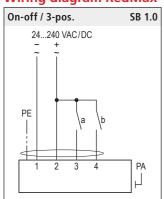






During commissioning apply a self adjustment drive.


Regard duty cycle at motor running times!

Never use spring return actuators without external load.


Risk of injury due to rotating handwheel for actuators with spring return!

Wiring diagram RedMax- ... -F (with spring return)

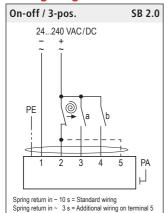


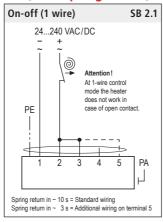

Wiring diagram RedMax- ... -S and ... -SF

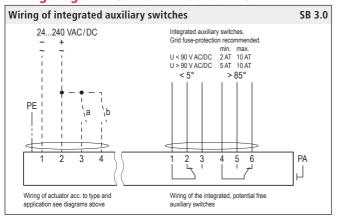

Parameters, adjustments and failure indication

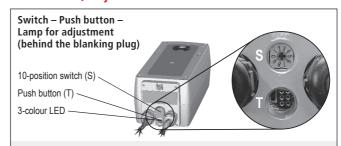

Parameter selection

Example:	
RedMax-15 30	

Requested parameter:
Torque 30 Nm
Motor running time 30 s/90°

Result: Switch position 07

	Туре			Tord	ques	
	RedMa	x- 5.10	\blacktriangleright	5 Nm	10 Nm	
	RedMa	x-15.30	\blacktriangleright	15 Nm	30 Nm	
	RedMa	x- 5.10-F		5 Nm	10 Nm	
	RedMa	x- 15-F		15 Nm		
,				▼	▼	
	Runnir	ng times		Position of	f switch (S)	
	3	s/90°	\blacktriangleright	00	05	
	15	s/90°	\blacktriangleright	01	06	
	30	s/90°	\blacktriangleright	02	07	
	60	s/90°	\blacktriangleright	03	08	
	120	s/90°	\blacktriangleright	04	09	

Functions, adjustments and parameters

A) Self adjustment of angle of rotation

Turn switch (S) to position 02 (low torque) or 07 (high torque). Press button (T) for a minimum of 3 seconds. The actuator drives to both end positions and detects the blocking positions. The LED flashes GREEN during adjustment.

The adjustment takes about 60 seconds (30 sec. "On", 30 sec. "Off").

B) Selecting motor running time and torque

Adjust parameters only if actuator is in idle state or without applied potential. Turn switch (S) to the position required for the intended operation acc. to table above. The selected parameters will be carried out at the actuator's next operation.

C) Selecting spring return time


Spring return time is selected by wiring.

D) Additional information for control in 3-pos. operation

a closed, b open a and b closed = motor doesn't work b closed, a open a and b open = direction II = motor doesn't work

The rotation direction (I and II) depends on left/right mounting of the actuator to the damper. To reverse the rotation direction (by motor) exchange the electrical wiring of terminal 3 and 4.

Installation

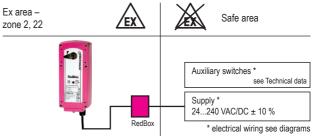

- Do not open the cover when circuits are live
- Connect potential earth
- Close all openings to ensure enclosure protection
- Clean only with damp cloth, avoid dust accumulation

⚠ Warning! The enclosure with a coating must not be used in areas affected by charge-producing processes, mechanical fricton and separation processes, electron emission, and pneumatically conveyed dust.



Important information for installation and operation

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations for hazardous Ex-areas must be complied with. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used.

For electrical connection an Ex-e terminal box is required (e.g. RedBox-...).

Attention: If the actuator is put out of operation all Ex rules and regulations must be applied. You have to cut the supply voltage before opening the terminal box!

The cables of the actuator must be installed in a fixed position and protected against mechanical and thermical damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP66. For outdoor installation a protective weather shield against sun, rain and snow should be applied to the actuator as well as a constant supply at terminal 1 and 2 for the integrated heater. During commissioning apply a self adjustment drive. Actuators are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Ex-actuators must not be opened by the customer.

B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight.

Attention: Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 12 \times 12 mm. For round shafts adaptors/clamping connection (accessories, e.g. KB-S) are available. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type.

D. Operation with 3 sec. motor running time Note following:

- The 3 sec. motor running time mode is only available in switch position 0 and 5 and at a constant supply voltage applied for a minimum of 1 minute on terminal 1 and 2.
- The actuator opens at voltage on terminal 3 (resp. closes) and closes at voltage on terminal 4 (resp. opens) – depending on mounting position of the actuator.
- 3. The max. duty ratio is 10 % resp. 1 cycle/minute. Between two fully 3 sec. cycles in the same direction there must be a minimum intermission of 1 minute. Trying to run the actuator in the same direction in less than the required minimum of 1 minute the function will be blocked for the rest of the idle period. Later the release for the next cycle is made automatically by an internal timing relay.
- Same function is applied on spring return actuators, fail safe operation is regarded same as a motor running cycle.
- Trying to use the 1 wire On-off methode in switch position 0 and 5, software changes the motor running time temporarily and automatically to 15 s/90° to protect the actuator for overheating due to uncontrolled duty ratio.

E. 3-position control mode

...Max actuators are in the best way suitable for the 3-pos. operation. To protect such elements as gears and mounting elements against harmful influences like minimum pulse time, ...Max actuators are protected via internal electronics. It ignores impulses < 0.5 s, the cyclic duration must be min. 0.5 s. At changing direction the pause is 1 s.

F. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

G. Operation at ambient temperatures below -20 °C

All actuators are equipped with a regulated integrated heating device designed for employments down to $-40\,^{\circ}\text{C}$ ambient temperature. The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.

- 1. After mounting the actuator must be immediately electrically connected.
- The heater switches on automatically when actuator reaches internally -20 °C. It heats up the actuator to a proper working temperature, then heater switches off automatically. Actuator will not run during heating process.
- 3. The adjustment options are only ensured after this heating up period.

H. Excess temperatures

In acc. to the ATEX rules and regulations Ex actuators must be protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversible. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

I. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

J. Mechanical protection

Actuators must be operated with a minimum external load.

After installing the actuator to the damper/armature a self adjustment drive has to be performed in order to protect the damper/armature against mechanical overload. During operation the actuator reduces briefly its speed (motor power) before reaching the end position for a "gentle" blockade/stop.

K. Intrinsically safe circuits

The supply of the push button (adjustment drive), the 10-position switch (adjustment of torque and running time) and the LED indicator is performed intrinsically safe!

L. Loss of voltage

In switch position 00, 01 and 05, 06 (motor running times 3 sec. and 15 sec.) and after interrupted voltage the actuator (types 5.10 and 15.30 and ...-S) moves in OFF position then the actuators works regarding control signal.

(i) Extra information (see additional data sheet)

Additional technical information, dimensions, installation instruction, illustration and failure indication.

Special solutions and accessories

CTS	Types in aluminium housing with seawater resistant coating, parts nickel-plated
VAS	Types in stainless steel housing, parts nickel-plated
Adaptions	for dampers and valves on request
RedMaxS3	Ambient temperature up to +60 °C (T4), 110240 VAC/DC, 25 % ED
RedMaxS7	Actuator shock approved up to 500 g
RedBox	Terminal boxes for zone 2, 22

MKK-S	Mounting bracket for boxes typeBox directly on actuator			
RedSwitch	2 external aux. switches, adjustable for zone 2, 22			
HV-S	Comfortable manual override forMax actuators size S			
KB-S	Clamp for damper shafts Ø 1020 mm and □ 1016 mm			
AR-12-xx	Reduction part for 12 mm square connection to 11, 10, 9 or 8 mm shafts			
Kit-S8	Cable glands nickel-plated			

Contact us now mail@rotork.com www.rotork.com

