



RedMax 1/4 turn actuators - size S

Electrical, explosion proof rotary actuators

On-off control mode, 24...240 VAC/DC, 95° angle of rotation incl. 5° pretension

6 Nm, 12 Nm with safety operation: fast spring return \sim 1 s*

ATEX tested in acc. with directive 2014/34/EU for zone 2, 22

RedMax - ... - F1
RedMax - ... - SF1
RedMax - ... - BF1
RedMax - ... - CTS

RedMax - ... - VAS

Subject to change!

Compact. Easy installation. Universal. Cost effective. Safe.

Туре	Torque	Supply	Motor running time	Spring return*	Control mode	e Feedback	Wiring diagram
RedMax- 8 - F1	6 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	~ 1 s/90°	On-off	-	SB 2.4/2.5
RedMax- 15 - F1	12 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	~ 1 s/90°	On-off	-	SB 2.4/2.5
RedMax- 8 - SF1	6 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	~ 1 s/90°	On-off 2	× aux. switches	SB 2.4/2.5 + 3.2
RedMax- 15 - SF1	12 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	~ 1 s/90°	On-off 2	× aux. switches	SB 2.4/2.5 + 3.2
RedMax- 8 - BF1	6 Nm	24240 VAC/DC	3 / 15 / 30 / 60 / 120 s/90°	~ 1 s/90°	On-off 2	× aux. switches + Ex-i tripping circuit	SB 2.4/2.5 + 7.4
RedMax- 15 - BF1	12 Nm	24240 VAC/DC	3/15/30/60/120s/90°	~ 1 s/90°	On-off 2	× aux. switches + Ex-i tripping circuit	SB 2.4/2.5 + 7.4
RedMax CTS Types as above with aluminium housing and seawater resistant coating (cable glands brass nickel-plated)							
RedMax VAS Types as above with stainless steel housing for aggressive ambient (cable glands brass nickel-plated)							
* At least temperatures the engine return time might year. For further excistance places contact any selections							

^{*}At low temperatures the spring return time might vary. For further assistance please contact our sales team.

Product views and applications

RedMax-...-F1



Safety damper



Ball valve



Throttle valve



Ex

Description

The RedMax actuators are a revolution for safety, control and shut-off dampers and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in Ex-areas zone 2 (gas) and zone 22 (dust).

Highest protection class (ATEX) and IP66 protection, small dimensions, only 3,5 kg weight, universal functions and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times are selectable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC/DC. The actuators are 100 % overload protected and self locking.

...Max-...-F1 actuators are equipped with spring return fail safe function. Additionally the ...Max-...-SF1 and ...-BF1 actuators are equipped with 2 integrated, potential free auxiliary switches each and ...Max-...-BF1 comes with an intrinsically safe tripping circuit for connecting the ...Pro-TT-... safety temperature trigger. Standard shaft connection is a double square direct coupling with 12 × 12 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptions for ball valves and throttle valves and other armatures.

Highlights

- ► For all types of gases, mists, vapours and dusts in zones 2 and 22
- ► Universal supply unit from 24...240 VAC/DC
- ► 5 different motor running times 3–15–30–60–120 s/90°, adjustable on site
- ► On-off control with fast spring return function
- ► Ex-i circuit for direct connection of the ...Pro-TT-... safety temperature trigger (type ...-BF1)
- ▶ 2 integrated auxiliary switches, switching at 5° und 85° (type ...-SF1 and ...-BF1)
- ► 100 % overload protected
- ► Compact design and small dimension (L × W × H = 210 × 95 × 80 mm)
- ▶ Direct coupling to the damper shaft with double square connection 12 × 12 mm
- ▶ 95° angle of rotation inclusive 5° pretension
- ► Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
- ► IP66 protection
- ► Simple manual override included + preparation for comfortable manual override
- ► Gear made of stainless steel and sinter metal
- ► Weight only ~ 3,5 kg
- ► Integrated safety temperature sensor
- ► Integrated equipment for manual adjustment (push button, lamp, switch)
- ▶ Preparation for adaptable and adjustable auxiliary switches type ...Switch

RedMax-S-F1_6 V08 – 10-Jan-202



RedMax-...-SF1

RedMax-...-BF1



Special options

Parameter at delivery

... -CTS ... -VAS

Technical data	RedMax- 8 - F1	RedMax- 15 - F	1 RedMax SF1	RedMax BF1		
Torque motor (min.)	8 Nm	15 Nm	8 resp. 15 Nm	8 resp. 15 Nm		
Torque spring (F)	~ 6 Nm	~ 12 Nm	~ 6 resp. ~ 12 Nm	~ 6 resp. ~ 12 Nm		
Torque blockade	In blockade and end position	ns torques are higher than a	bove specified torques for motor and spring			
Dimensioning of external load	min. 2 Nm	min. 5 Nm	min. 2 resp. 5 Nm	min. 2 resp. 5 Nm		
Supply voltage / frequency	24240 VAC/DC ± 10 %, se	elf adaptable, frequency 50	.60 Hz ± 20 %			
Power consumption	max. starting currents see (Extra information (in acc.	with voltage, I start >> I rated), approx. 5 W holding	power, approx. 16 W for heater		
Protection class	Class I (grounded)					
Angle of rotation and indication	95° incl. ~ 5° pretension, mechanical value indication					
Working direction	Selectable by left/right moun	ting to the damper/valve sha	aft			
Motor running times	3 / 15 / 30 / 60 / 120 s/90° s	electable on site				
3 sec. mode – motor	In acc. with the supply voltage	ge and external torque 3 to 4	4 s/90° angle of rotation			
Motor	Brushless DC motor					
Control mode	On-off					
Spring return (F)	spring return upon voltage in	terruption or opening of line	3, response time up to 1 sec. after voltage inter	ruption		
Spring return running time (F)	~ 1 s/90° (For usage at low	temperatures please contac	ct our sales team)			
Safety operations at 1 sec. (F)	min. 1,000 acc. to constructi	on of damper and ambient.	Consider minimum external load!			
Ex-i tripping circuitBF1	Intrinsically safe circuit to co	nnect the ExPro-TT safet	y temperature trigger directly to the actuator with	M12 quick connection		
Aux. switchesSF1,BF1	2 integrated auxiliary switche	es, switching at 5° and 85°	angle of rotation, potential free. Grid fuse-protect	ion is recommended!		
	$U_{max}/I_{max} AC = 250 V/5 A;$	U_{min} AC/DC = 5 V; Af	ter one-time operation with U > 24 V AC/DC or I	$> 100 \text{ mA}$: $U_{min} AC/DC = 12 \text{ V}$		
	$U_{max}/I_{max}DC = 48 V/1 A;$	I_{min} AC/DC = 5 mA;		I_{min} AC/DC = 100 m		
Axle of the actuator	Double square 12 × 12 mm,	direct coupling, 100 % over	load protected			
Electrical connection	Cable ~ 1 m, wire cross sect	ion 0.5 mm², equipotential b	onding 4 mm².			
	Connections in hazardous a	reas require a terminal box!				
Diameter of cable	~ Ø 6.2 mm	~ Ø 6.2 mm	~ Ø 6.2 + 7.4 mm	~ Ø 9.3 mm		
	2 cables in versionSF1					
Cable gland	M16 × 1.5 mm					
Manual override	Use delivered socket wrench	ı, max. 4 Nm				
Housing material	Aluminium die-cast housing,	coated. Optional with seaw	ater resistant coating (CTS) or stainless steel	housing,		
	№ 1.4581 / UNS-J92900 / s	imilar AISI 316Nb (VAS)				
Dimensions (L × W × H)	210 × 95 × 80 mm, for diagra	ams see ①Extra information	on			
Weight	~ 3,5 kg aluminium housing,	stainless steel ~ 7 kg				
Ambients	Storage temperature -40	-70 °C, working temperature	e -20+40 °C at T6 and -20+50 °C at T5			
Humidity	090 % rH, non condensing					
Operating 3 sec. motor run time	In 3 s mode the motor will w	ork only after 1 minute of vo	Itage supply. While open/close operation (open	voltage supply and shut it down)		
	motor works only with speed of 15 s/90°					
≥ 15 sec. motor run time	at 15 / 30 / 60 / 120 s 100 %	of ED is permitted (ED = du	uty cycle)			
Maintenance	Maintenance free relative to	function, maintenance must	t comply with regional standards, rules and regul	ations		
Wiring diagrams	SB 2.4/2.5	SB 2.4/2.5	SB 2.4/2.5 + 3.2	SB 2.4/2.5 + 7.4		
Scope of delivery	Actuator, 4 screws M4 × 100	mm, 4 nuts M4, Allen key f	or simple manual override			
	00 1000	00 1000	00 1000	00 1000		

Approbations			
ATEX Directive	2014/34/EU	CE Marking	CE 0158
ATEX Conformity	EPS 18 ATEX 1 216 X	EMC Directive	2014/30/EU
IECEx Conformity	IECEx EPS 18.0107X	Low Voltage Directive	2014/35/EU
Marking Gases	II 3 (3) G Ex db [ic Gc] IIC T6, T5 Gc	Enclosure Protection	IP66 in acc. with EN 60529
TypesCTS	II 3 (3) G Ex db [ic Gc] IIB T6, T5 Gc		
Marking Dusts	II 3 (3) D Ex tc [ic Dc] IIIC T80°C, T95°C Dc		
Ex-i circuit data	see table (T 1.0)		

30 s/90°

RedMax-S-F1_en V08 - 10-Jan-2023

30 s/90°



Electrical connection


All actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjusting to the connected voltage!


The safety operation of the spring return function works if the supply voltage is cut or line 3 opened. For electrical connection inside hazardous areas a terminal box is required (e.g. RedBox).


An over-current protection fuse < 10 A has to be provided by installer.


Note: the initial current is appr. 2 A for 1 second.

Integrated auxiliary switches signal the rotation angle's position. U_{min} and I_{min} change once the switches were operated with higher voltage or current.

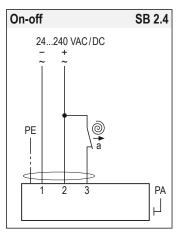

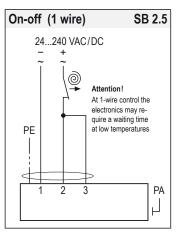

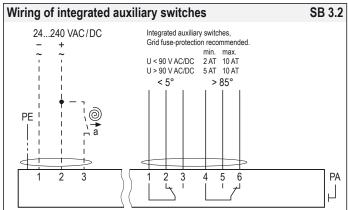

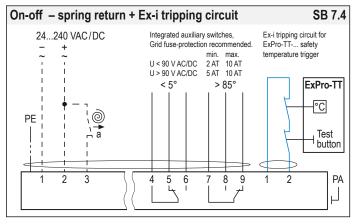

U _o = 5,88 V	Ex-i intrinsic safe data	– fo	r temper	ature trig	ger ExPro-TT	T 1.0
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	$I_o = 24,75 \text{ mA}$ $P_o = 37 \text{ mW}$ $C_i = 0$		50 mH	50 mH	50 mH	

Parameters, adjustments and failure indication



Parameter selection

Example:	Type	Torques (motor)
RedMax-15-BF1	Type RedMax- 8F1 ► RedMax-15F1 ►	8 Nm 15 Nm
Requested parameter:		
Torque 15 Nm		▼
Motor running time 30 s/90°		
	Running times	Position of switch S
Result:	3 s/90° ▶	00 05
Switch position 02	15 s/90° ►	<u>01</u> 06
	30 s/90° ▶	02 07
	60 s/90° ►	03 08
	120 s/90° ►	04 09

Functions, adjustments and parameters

A) Self adjustment of angle of rotation

ATTENTION: To adjust the angle of rotation connect only wire 1 and 2. Do not connect wire 3.

Apply supply voltage to wire 1 and 2. Turn switch (S) to position 02. Press button (T) for a minimum of 3 seconds. The actuator drives to the first end position, detects the blocking position and performs a spring return to the starting position. The LED flashes GREEN during adjustment. After that disconnect from the mains and connect wire 3.

The adjustment takes about 31 seconds (30 sec. "On", 1 sec. "Off").

B) Selecting motor running time

Adjust parameters only if actuator is in idle state or without applied potential. Turn switch (S) to the position required for the intended operation acc. to table above. The selected parameters will be carried out at the actuator's next operation.

C) Function of the ExPro-TT-... in the Ex-i tripping circuit


When the ...Pro-TT's tripping circuit is opened the actuator runs into its end position with spring return.

D) Additional information for control in On-off operation

a closed = actuator opens a open = spring return

The rotation direction (clockwise/counter clockwise) depends on left/right mounting of the actuator to the damper.

Installation

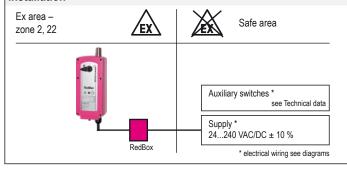




During commissioning apply a self adjustment drive. Regard duty cycle at motor running times! Never use spring return actuators without external load.

> RedMax-S-F1_en V08 – 10-Jan-2023

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com



... -CTS

... -VAS



Important information for installation and operation

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations for hazardous Ex-areas must be complied with. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used. For electrical connection an Ex-e terminal box is required (e.g. RedBox-...). Attention: If the actuator is put out of operation all Ex rules and regulations must be applied. You have to cut the supply voltage before opening the terminal box!

The cables of the actuator must be installed in a fixed position and protected against mechanical and thermical damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP66. For outdoor installation a protective weather shield against sun, rain and snow should be applied to the actuator. The waiting time of the electronics at low temperatures can be minimized by a constant voltage supply to terminals 1 and 2. During commissioning apply a self adjustment drive. Actuators are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Ex-actuators must not be opened by the customer.

B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight.

Attention: Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 12 × 12 mm. For round shafts adaptors/clamping connection (accessories, e.g. KB-S) are available. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type.

D. Temperature trigger ... Pro-TT-...

The actuator ...Max-...-BF1 will work only with the temperature trigger ExPro-TT-...

E. Operation with 3 sec. motor running time

Note following:

- 1. The 3 sec. motor running time mode is only available in switch position 0 and 5 and at a constant supply voltage applied for a minimum of 1 minute on terminal 1 and 2.
- The actuator opens at voltage on terminal 3 (resp. closes) and closes at voltage on terminal 4 (resp. opens) - depending on mounting position of the actuator.
- 3. The max. duty ratio is 10 % resp. 1 cycle/minute. Between two fully 3 sec. cycles in the same direction there must be a minimum intermission of 1 minute. Trying to run the actuator in the same direction in less than the required minimum of 1 minute the function will be blocked for the rest of the idle period. Later the release for the next cycle is made automatically by an internal timing relay.
- 4. Same function is applied on spring return actuators, fail safe operation is regarded same as a motor running cycle.
- Trying to use the 1 wire On-off methode in switch position 0 and 5, software changes the motor running time temporarily and automatically to 15 s/90° to protect the actuator for overheating due to uncontrolled duty ratio.

F. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

G. Operation at low ambient temperatures

The spring return time at low temperatures might vary. Please contact our sales team for further information.

H. Excess temperatures

In acc. to the ATEX rules and regulations Ex actuators must be protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversible. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

I. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

J. Mechanical protection

Actuators must be operated with a minimum external load.

After installing the actuator to the damper/armature a self adjustment drive has to be performed in order to protect the damper/armature against mechanical overload. During operation the actuator reduces briefly its speed (motor power) before reaching the end position for a "gentle" blockade/stop.

K. Intrinsically safe circuits

The supply of the push button (adjustment drive), the 10-position switch (adjustment of torque and running time), the LED indicator and the sensor connection ExPro-TT is performed intrinsically safe!

L. Routine tests of fire dampers

For periodic inspection of fire dampers cut off the supply line (current of actuator). The test button at ExPro-TT-... is only for test aims of actuator's function.

(i) Extra information (see additional data sheet)

Additional technical information, dimensions, installation intruction, illustration and failure indication

Special solutions and accessories

...-CTS Types in aluminium housing with seawater resistant coating, parts nickel-plated ...-VAS Types in stainless steel housing, parts nickel-plated

Adaptions for dampers and valves on request

RedMax-...-S3 Ambient temperature up to +60 °C (T4), 110...240 VAC/DC, 25 % ED

ExPro-TT-... Safety temperature trigger for fire dampers

Terminal boxes for zone 2, 22 RedBox-... MKK-S Mounting bracket for boxes type ... Box-... directly on actuator RedSwitch 2 external aux. switches, adjustable for zone 2, 22 KB-S Clamp for damper shafts Ø 10...20 mm and □ 10...16 mm AR-12-xx Reduction part for 12 mm square connection to 11, 10, 9 or 8 mm shafts BSH-S Mounting holder for actuators in fire danger areas Kit-S8 Cable glands nickel-plated

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com